

OWNER'S GUIDE

600 Series Remote Vehicle Security System

REMOTE STARTERS

CAR ALARMS

The background of the page features a faded image of a car's instrument cluster, including a speedometer and several gauges. The 'ULTRA START' logo is prominently displayed in the center, rendered in a large, bold, metallic, 3D-style font with a silver and grey gradient and a black outline.

**ULTRA
START**

WWW.ULTRASTARTERS.COM

Note: Some features may not be available on certain models.

FCC/ID Notice

This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the part responsible for compliance void the user's authority to operate this device.



Lock Doors & Arm The Alarm

1. Press and release the **LOCK** button on the remote transmitter.
 2. The park lights will flash and the siren will chirp once.
 3. The doors will lock.
 4. The LED will start flashing within five seconds.
- *The starter disable will activate (if installed)



Unlock Doors & Disarm The Alarm

1. Press and release the **UNLOCK** button on the remote transmitter.
 2. The park lights will flash and the siren will chirp twice.
 3. The doors will unlock.
 4. The LED will stop flashing.
- *The starter disable will deactivate (if installed)

Optional Driver's Door Priority

The optional driver's door unlock feature will allow you to unlock the driver's door separately from the other doors.

1. Press and release the **UNLOCK** button once to unlock driver's door.
2. Press and release the **UNLOCK** button a second time within two seconds to unlock all other doors.

Silent Arm And Disarm



1. Press and release the **LOCK & UNLOCK** buttons at the same time.
2. If the doors are locked this will unlock the doors without siren chirps, the park lights will flash two times to confirm the doors have unlocked.
3. If the doors are unlocked this will lock the doors without siren chirps, the park lights will flash one time to confirm they have locked.

Trunk Release



1. Press and hold the **UNLOCK** button for three seconds.
2. The doors will unlock, continue holding for three more seconds, the trunk release will activate. The trunk release will be confirmed by one park light flash.
3. For safety reasons, the trunk release output will not activate when ignition key is in the "On" position.

Car Finder Mode



1. Press and hold the **#** button for two seconds.
2. The system will flash the park lights and chirp the siren five times.

**This feature can help find your vehicle in a crowded parking lot.

Panic Mode



1. Press & hold the **LOCK** button for three seconds. The park lights will flash and the siren will activate.

PANIC MODE DISABLE

1. Press **LOCK** button to disable the panic mode and to lock the doors.
2. Press **UNLOCK** button to disable the panic mode and unlock the doors.
3. Panic Mode will stay activated until disabled by the remote transmitter.



2nd Car Operation - See Dealer For Details

Dual Car Operation allows a single transmitter to operate the system in more than one vehicle. Both vehicles must be equipped with an Ultra Start Alarm or Remote Start system. To operate the second car's features press the transmitter buttons as follows.

Note: The Buttons must be pressed at the same time.

2nd Car

- # & = Press Once to Lock Doors. Continue to hold for Panic Mode.
Press 2nd Time & Hold for Constant Lock Output
- # & = Press Once for Unlock Doors and Disarm the Alarm.
Press & Hold for Trunk / Aux Output
- # & * = Press to activate the 4th channel output
Press & Hold for 3 seconds while running to turn off
- # & # = Press & Release then hold for Service Mode (Valet Mode)



4th Channel Output

This optional output can be used to activate additional alarm accessories.

1. Press and hold button #3 for two seconds.
2. The park lights will flash and the siren will chirp one time.
3. The optional feature will activate.



5th Channel Output

This optional output can be used to activate additional alarm accessories.

1. Press and hold the LOCK and STAR buttons for two seconds.
2. The park lights will flash and the siren will chirp once.
3. The optional feature will then activate.



Ignition Auto Locks

Optional Programmable Feature

- This feature will automatically lock the doors two seconds after the ignition key is turned to the "On" position.
- The doors will unlock when the ignition key is turned to the "Off" position.

Starter Disable



The system has an optional starter disable output that can be connected by your dealer. When the starter disable relay is installed and connected to the system, the vehicle's starter will be disabled when the system is armed.

To activate the starter disable press the lock button on the remote.

The system will arm and the starter will no longer operate.

To deactivate the starter disable, press the unlock button and the LED will stop flashing and the starter will be re-enabled.

Self Learning Shock Sensor



1) Press the **LOCK** button on the remote 5 times, once every second. The siren should chirp 3 times and parking lights will remain "On"

Note: Timing is important to enter Shock Sensor Learn Mode. The lock button must be pressed once every second 5 times.

2) After parking lights are on steady, strike the vehicle with a impact at the desired level to trigger the alarm. (Impact the vehicle at least 3 times)

3) The siren will respond with a chirp to confirm each impact, press the lock or unlock button to exit learn mode then test sensitivity.

ATTENTION: THE SYSTEM MUST BE PLACED INTO SERVICE MODE BEFORE ANY UNDER HOOD SERVICING IS DONE TO THE VEHICLE. IT IS THE RESPONSIBILITY OF THE VEHICLE'S OWNER TO INSURE THAT THIS IS DONE. THE MANUFACTURER ACCEPTS NO RESPONSIBILITY FOR ACCIDENTAL STARTING WHILE VEHICLE IS BEING SERVICED.

Remote Service Mode



 
Service Mode disables the remote starter from operating. This will be necessary when having the vehicle in for servicing.

ENTERING SERVICE MODE

1. Press & release the # button, then within two seconds press and hold the same # button for five seconds or until the siren chirps **five** times.

EXITING SERVICE MODE

1. Press & release the # button, then within two seconds press and hold the same # button for five seconds or until the siren chirps **two** times.

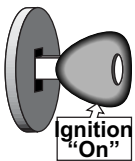

Emergency Service Mode

This feature will disable the system. This can be used if a remote is Lost, damaged or if the system malfunctions.

ENTERING SERVICE MODE

1. While the ignition is "On" press and hold the Program Button for five seconds or until the siren chirps **five** times.

EXITING SERVICE MODE

1. While the ignition is "on" press and hold the Program Button for five seconds or until the siren chirps **two** times.



Limited Lifetime Warranty

The manufacturer warrants to the original purchaser of their remote starters and alarms, that the product shall be free from defects in material and workmanship. However, should this product be proven to be defective, within a two year period from the original date of purchase, the manufacturer will, without charge to the purchaser (excluding any charges incurred to have the product delivered to the manufacturer), repair or replace any part of the remote starter and/or alarm which the manufacturer agrees to be defective. After the initial 2 year period the manufacturer shall repair or replace defective products with a nominal processing fee of \$30.00 USD. All warranties apply to the original purchaser and the vehicle in which it was originally installed ONLY. Repairs or replacement of defective modules shall remain at the discretion of the manufacturer. All other parts, components, accessories and/or optional equipment pertaining to the remote starter and alarm are not included in the manufacturer's warranty. **This warranty is non-transferable.** Request for warranty service from any Factory Authorized Dealer **must be accompanied with the original purchase receipt or have product registered by authorized dealer on manufacturer's website.** Failure to comply with any of these conditions may result in warranty being voided.

This warranty does not cover the following: removal and reinstall labor charges, shipping charges, abuse, misuse, or accidental damages to the remote starter and alarm, automobile, and/or parts there of. This warranty is void upon modification, repairs, or alterations of any part of the product. The manufacturer does not guarantee or insure against theft of the vehicle or its contents. Alarm models are designed only to act as a deterrent against possible theft. This alarm may qualify for auto insurance discounts, contact your Insurance Agent for further information. The manufacturer shall not be held liable for any consequential damages due to breach of this or any other warranty, expressed, or implied. This warranty gives you specific legal rights. Your specific legal rights may vary for each region.

CERTAIN DAMAGES EXCLUDED - The manufacturer expressly disclaims any liability or responsibility for incidental damages caused by the product, including economic loss, loss of use of the product, car rentals, or any other costs relating to the care and custody of the product. The manufacturer disclaims liability or responsibility for any consequential damages caused by the product or resulting from its use, including the cost of repairing or replacing other property damaged by the product or caused by its use, whether or not the product is working properly. The product is intended to deter unauthorized use of the vehicles in which it is installed. The manufacturer does not warrant that the product is fool-safe against theft and/or vandalism and/or human error or misuse. The manufacturer accepts no liability or responsibility for any damage of any kind whatsoever caused to any vehicle in which the product is installed or any resulting damage from its use. The manufacturer accepts no responsibility or liability for any damage resulting to or theft of the vehicle or its contents, caused or alleged to be caused, directly or indirectly, by failure of the product.

MANUAL TRANSMISSION STARTERS the installation of a remote starter **MUST only be done with a specified manual transmission starter. It is the sole responsibility of the vehicles operator to insure that the vehicle is left with the transmission in neutral position when the remote starter is in use. The manual transmission starter is designed to be an added measure of safety ONLY! The manufacturer does not guarantee or insure against any damages or loss of life that could result in the event of a remote starter starting while the vehicle is in gear. Manual transmission models are designed only to act as a deterrent against the vehicle starting in gear, this is the vehicle's owner's and operator's responsibility.**