

IN3100 (SERIES)

Quick Start Guide English
For other languages, see booklet

Français – voir la brochure
Deutsch – siehe Broschüre
Español – ver folleto
Italiano – vedi opuscolo
Nederlands – zie boekje
Português – consulte livreto
Svenska – se häftet
Русский – см. буклет
한국어 – 소책자 참조
中文 (简体) – 见手册



InFocus
Bright Ideas Made Brilliant

Regulatory model M3100


010-0736-00

3

Connect source

Color-coded connections make it easy.
You can connect more than one source if needed.


Connect to: Computer (using DisplayLink)

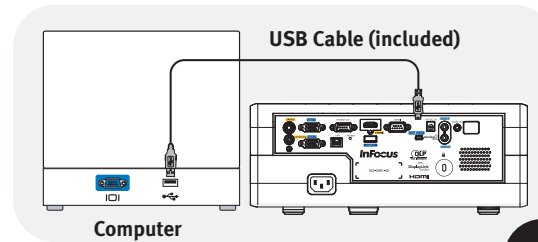

For Windows and Macintosh
Connect the USB cable between your computer and the projector's DisplayLink connector. See the DisplayLink Software User's Guide for details on setup, compatibility, features, and troubleshooting; download it at www.infocus.com/support/displaylink

OR

Connect to: Computer (using VGA)

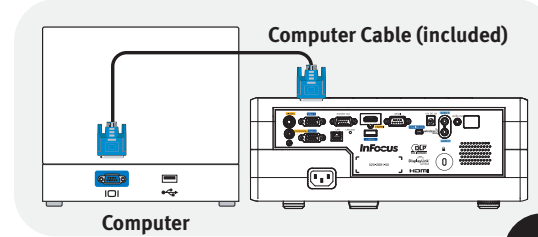


Got an Apple computer?
You may need an adapter. For more information, see How-To Guides at www.infocus.com/support/howto

OR

Connect to: DVD, VCR

- 1 Connect video using an **HDMI cable** or a **Composite Video cable** or an **S-Video cable**
www.infocus.com/store part no. SP-HDMI-10M-R or SP-CPSTVID-5M or SP-SVIDEO-10M
- 2 Connect audio using a **Mini Plug Audio Y-Cable** (not needed for HDMI)
Available from A/V dealer or retailer

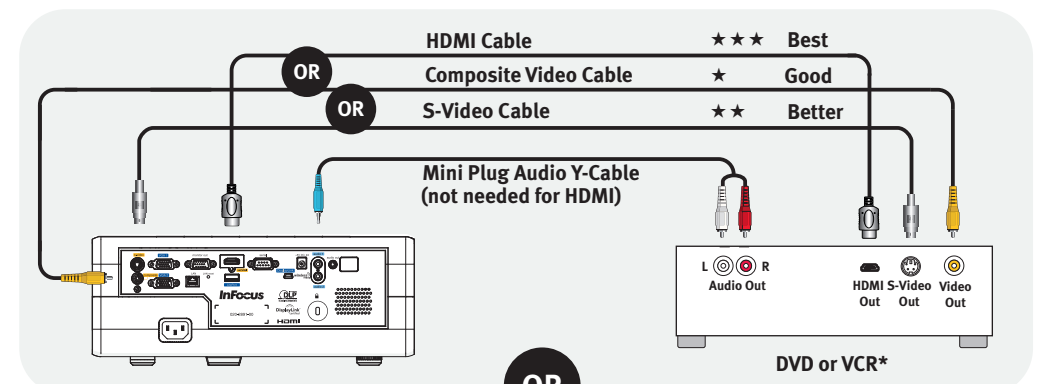

OR

*Also for game console, cable box, HDTV Receiver


Connect to: Other kinds of sources

How-To Guides are available at www.infocus.com/support/howto

Please read the safety instructions booklet before setting up the projector.

1 Unpack the box

Here's what's included:

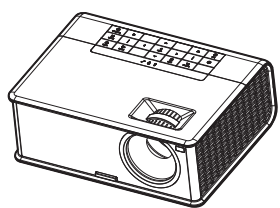

Projector



 
Remote




Carry Case



USB Cable



Computer Cable

 


Power Cable

Save the box and packing materials.

2 Put batteries in the remote

The remote uses 2 AA batteries.

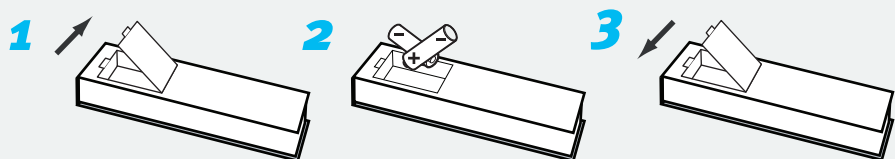


Please dispose of batteries in an environmentally proper manner.

Buy a Full-Featured Remote and Other Custom Accessories
www.infocus.com/store

Status Indicator Panel

The top of your projector includes a convenient indicator panel with symbols that light up to show important status.

For details, see **Troubleshooting**.

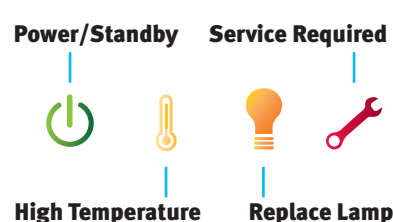

4

Turn on projector and source

1 Connect the power cord to the projector and to an electrical outlet

The power light on the projector will light amber.

2 Slide open the lens cover

3 Turn on the projector

Touch the power light (or press **power** on the remote). The power light will start blinking green.

4 Wait for the lamp to warm up

After a few seconds, the power light will stop blinking and turn green. It can take a minute for the lamp to reach full brightness.

Warning: Do not look directly into the lens while the projector is being used.

5 Turn on computer or other source

You may need to press a specific key combination to activate your laptop's external video port. On most laptops, hold down the **FN** key while pressing a key labeled **CRT/LCD**, **LCD/VGA**, a monitor icon , or similar. Key combos for popular models:

Apple F7 **HP/Compaq** Fn+F4 or Fn+F6 **Sony** Fn+F7
Dell Fn+F8 **IBM ThinkPad** Fn+F7 **Toshiba** Fn+F5
Fujitsu Fn+F10

Complete laptop activation chart at www.infocus.com/support

Important: If there is still no video, restart your computer (first make sure it's connected to the projector and the projector is turned on).


6 Change source if needed

If needed, press **source** (on the projector or remote) to view the source. You may have to press it more than once.

(TURN OVER)


5 Adjust the picture

1 Height

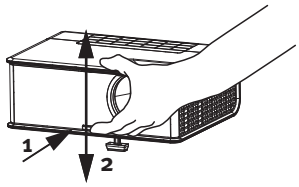


- 1 Hold down the release button under the front of the projector.
- 2 Lift the front of the projector to the desired height.
- 3 Release the button.

2 Keystone

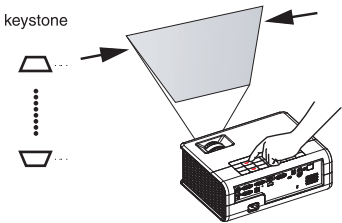

Press the **keystone** buttons to make the picture square.

3 Zoom and focus

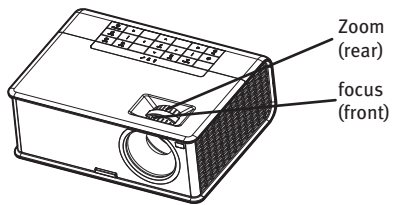


Adjust zoom first, then focus the center of the image.

Need Help?

help Press the Help button at any time to get help with connecting sources and improving the picture.

Projector Location

As distance increases, the image gets larger and moves upwards.

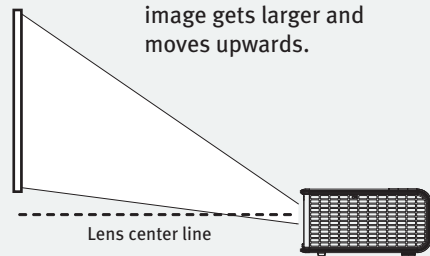

Diagonal Screen Size	Distance to Screen	
	Minimum	Maximum
IN3114		
60" / 1.5m	6.48' / 1.98m	7.80' / 2.38m
80" / 2m	8.64' / 2.63m	10.40' / 3.17m
90" / 2.286m	9.72' / 2.96m	11.70' / 3.57m
150" / 3.8m	16.20' / 4.94m	19.50' / 5.94m
IN3116		
60" / 1.5m	6.21' / 1.89m	7.74' / 2.36m
80" / 2m	8.34' / 2.54m	10.36' / 3.16m
90" / 2.286m	9.40' / 2.86m	11.68' / 3.56m
150" / 3.8m	15.77' / 4.81m	19.55' / 5.96m

Interactive Screen Size and Distance Calculator
www.infocus.com/calculator

Buy a Screen and Other Accessories
www.infocus.com/store

Ceiling mount?

To flip the image, turn on the **Ceiling Mount** setting in the **Setup** menu.

(TROUBLESHOOTING)

If there is no picture or the picture is blank



If the **power light is off**, make sure the power cord is connected and plugged into a live electrical outlet. If the **power light is amber and not blinking**, touch the power light (or press power on the remote).

Check video source and cables. Make sure the video source (computer, DVD player, VCR, etc.) is turned on and cables are securely connected between the source and the projector.

If your **computer is connected using DisplayLink** (not VGA), please see the DisplayLink Manager User's Guide for more troubleshooting information.

Make sure your computer's video port is enabled. Press the key combination that activates your laptop's external video port (see step 4). If there is still no image, restart your laptop.

Press the Source button. You may need to press it several times to view the correct source.

Press the Auto Image button.



If "Signal out of range" is shown, or the picture looks bad



Press the Auto Image button. If that doesn't help (and the source is a computer), reduce your computer's display resolution or vertical refresh rate.

If the replace lamp light is on



Turn the projector off and wait at least one minute, then turn it on again. If the replace lamp light turns on again, the lamp needs to be replaced. **For lamp replacement instructions**, see the Reference Guide, which can be downloaded at www.infocus.com/support. Only InFocus genuine lamps are tested for use in this projector.

If the high temperature light is on



Turn the projector off and remove anything that may be blocking the air vents on its side. Leave the projector off for at least one minute to let it cool before turning it on again. **IMPORTANT:** Continuous operation at high temperature may reduce the lifetime of the lamp and/or projector.

If the service required light is on




Turn the projector off and wait at least one minute, then turn it on again. If the service required light turns on again, the projector needs to be serviced. See below for service contact information.

More troubleshooting options are in the Reference Guide
Download it at www.infocus.com/support



WARNING: In the unlikely event of a lamp rupture, particles may be ejected from the projector. Keep out of the area under and around the projector while the projector is in use. See the safety instructions booklet for more details.

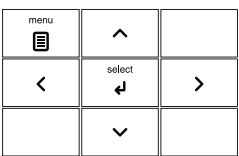

Using the menus

- 1 Press **menu**, then press **▼** or **▲** to review menus.
- 2 Press **select** to enter a menu, then press **▼** or **▲** to review settings.
- 3 Press **select** to change a setting. If this shows more choices, press **▼** or **▲** to update the setting, then press **select** or **menu** to save it.
- 4 Press **menu** to go back. Press it again to remove the menu.


Note: Most picture settings are disabled (gray) unless a source is being displayed.

Controlling your presentations

Connect the USB cable between the projector and your computer (see step 3), then press **▼** and **▲** to move through your presentation slides.

Note: You don't need to install DisplayLink Manager software to use this feature.


6 Use LitePort Source

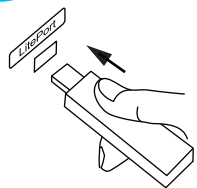

View photos from a USB flash drive

Copy JPEG pictures to a USB flash drive, then plug the drive into the projector's LitePort connector. The slideshow starts automatically. Press arrow keys to change slides, press select to see thumbnails and change folders, press select again to return to the slideshow.

7 Turn off the projector

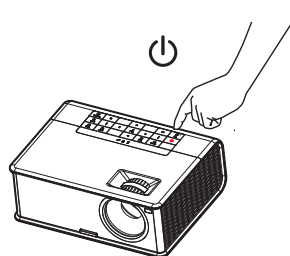

Press the power button

The power light on the projector will blink while the fan cools the lamp. If you need to unplug the projector, wait until the fan stops and the power light stops blinking and stays on.

Note: While the power light is blinking, button presses on the projector and remote are ignored.

(READ THE REFERENCE GUIDE)

Download it at www.infocus.com/support

The Reference Guide is available in multiple languages. It covers advanced setup and operation, including instructions for LAN/network functions and lamp replacement.

Questions? We're here to help!

Visit us at: www.infocus.com/support

We're here to support you with your new purchase. We can help you with...

- Determining screen sizes
- Documentation in other languages
- Connecting your sources (TV, DVD, Cable/Satellite, Game, etc.)
- Selecting optional accessories
- Product warranty protection plans

USA, Canada, Latin America
Customer Support Telephone
+1 (503) 685-8888
TOLL FREE: **800-799-9911**
Mon-Fri, 6 am - 5 pm Pacific
techsupport@infocus.com

Asia Pacific
Customer Support Telephone
Singapore: **800-101-1864**
China: **800-828-2268**
Australia: **1800-630-957**
Australia Direct Sales: **1800-885-841**
New Zealand: **0800-449-854**
Mon-Fri, 9 am - 5 pm SGT
asia-support@infocus.com

Europe, Middle East, Africa
Customer Support Telephone
France: **0800 905-993**
Germany: **0800 181-3649**
Italy: **0800 877-238**
Spain: **900 993-163**
UK: **0800 028-6470**
Other: **008000 463-6287**
Mon-Fri, 08:00 - 17:00 CET
emea.support@infocus.com

Hg - Lamp contains mercury. Manage in accordance with local disposal laws. See www.lamprecycle.org

Declaration of Conformity

Manufacturer: InFocus Corporation, 27500 SW Parkway Ave. Wilsonville, Oregon 97070-8238 USA
We declare under our sole responsibility that this projector conforms to the following directives and norms: EuP Directive: 2005/32/EC, EMC Directive 2004/108/EC, EMC: EN 55022, EN 55024, EN 61000-3-2, EN 61000-3-3, Low Voltage Directive 2006/95/EC, Safety: IEC 60950-1:2005(MOD).

Trademarks

DisplayLink is a trademark of DisplayLink Corporation.
Apple, Macintosh, and PowerBook are trademarks or registered trademarks of Apple Computer, Inc. IBM is a trademark or registered trademark of International Business Machines, Inc. Microsoft, PowerPoint, and Windows are trademarks or registered trademarks of Microsoft Corporation. Adobe and Acrobat are trademarks or registered trademarks of Adobe Systems Incorporated. DLP® and the DLP logo are registered trademarks of Texas Instruments and BrilliantColor™ is a trademark of Texas Instruments. InFocus, In Focus, and INFOCUS (stylized) are either registered trademarks or trademarks of InFocus Corporation in the United States and other countries.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment that are not expressly approved by InFocus Corp. may void the user's authority to operate the equipment.

Canada

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Agency Approvals

cMETus. Other specific Country Approvals may apply. Please see product certification label.

Input ratings: 100-240VAC, 2.9A, 50-60Hz

InFocus reserves the right to alter product offerings and specifications at any time without notice.