

Shiro



• User Manual •

SC3126

Caller ID Phone



- Please ensure the phone is placed in a dry and ventilated place without corrosive air.
- Please install 3 x AA batteries for viewing the LCD display. If the LCD does not display clearly, please change the batteries.
- Before operation, please check if you had applied for caller ID service from Telecom for caller ID display.

FEATURES:

- FSK/DTMF dual system
- 30 incoming call memories, call back function
- 5 outgoing call memories, conversation time review and redial back
- 35 VIP Memory for storing important telephone numbers
- 8 normal and 1 VIP ringing tone selection
- Area code filter
- PABX code setting
- Anti-share or prevent parallel telephone connection
- Pre-dial and edit telephone number
- LCD display of year, month, date and time
- Calculator function
- IDD '0' Lock function
- Pulse/Tone function
- Date/Time function
- 3 Alarm function
- Music on hold function
- Ringer volume and Handsfree Speakerphone volume adjustable

TABLE OF CONTENT

PRODUCT OVERVIEW	3
1. INSTALLING OR REPLACING THE BATTERY	4
2. SWITCH OPERATION.....	4
IDD LOCK switch.....	4
RINGER HI/LO switch	4
VOLUME HI/LO switch	4
3. SOFTWARE SETTING	4
4. FUNCTION KEY OPERATION	6
UP/- and DOWN/+ key.....	6
OUT key	6
DELETE key.....	6
CALLBACK key	6
CAL key	6
FLASH key (600ms).....	6
REDIAL key	7
HANDSFREE key.....	7
HOLD key	7
RING key.....	7
VIP key.....	7
PAUSE key	7
BRIGHT/± key.....	7
5. ADDITIONAL NOTES	7
INCOMING CALL LCD INDICATOR	7
LCD BACKLIGHT FUNCTION	8
IN USE LED INDICATOR	8
TROUBLESHOOTING GUIDE.....	8
DECLARATION OF CONFORMITY	8

PRODUCT OVERVIEW



Description:

 
- | | |
|-------------------------|-------------------------|
| 1. LCD Display | 16. BRIGHT/= key |
| 2. IN USE LED indicator | 17. SET key |
| 3. CALL BACK key | 18. VOLUME HI/LO switch |
| 4. CAL key | 19. RINGER HI/LO switch |
| 5. FLASH key | 20. LOCK switch |
| 6. REDIAL key | 21. OUT/x key |
| 7. HANDSFREE key | 22. UP/- key |
| 8. #/= key | 23. TEL LINE jack |
| 9. 0-9 key | 24. DOWN/+ key |
| 10. */. Key | 25. DELETE key |
| 11. HOLD key | 26. PHONE jack |
| 12. Handset Cord jack | |
| 13. RING key | |
| 14. VIP Key | |
| 15. PAUSE key | |

1. INSTALLING OR REPLACING THE BATTERY

Install 3 Alkaline AA batteries into the battery compartment and re-fit the cover before use.

IMPORTANT—before removing the battery compartment cover, ensure the base unit is disconnected from the telephone line.

3 X AA Alkaline Battery



Connection and conditions for use

You can connect your SC3126, to public networks in the United Kingdom or to an approved PBX using DTMF signaling. Each item of telephone equipment (phones, fax machines, etc.) has a **ringer equivalence numbers (REN)**. The RENs of all equipment connected to an exchange line **must not add up to more than 4** otherwise, one or more phones may not ring and/or answer calls correctly.

SC3126 has a REN of 1, and most other telephones have a REN of 1 unless marked otherwise.

2. SWITCH OPERATION

IDD LOCK switch

Use the keys provided in the package. The telephone allows all outgoing number if the key is on red point. It cannot dial outgoing number starting with digit 0 when the key is on green point.

RINGER HI/LO switch

Select your preferred ringing tone either HI or Lo. The selection is at the back of the telephone.

VOLUME HI/LO switch

Select your preferred handsfree speakerphone volume either HI or Lo. The selection is at the back of the telephone.

3. SOFTWARE SETTING

In on-hook mode, press **SET** key to enter menu setting, the phone LCD will display **SET 1 DATE**, press **UP/-** or **DOWN/+** key to select different options. Press **SET** key again to confirm.

SC3126 User Guide



Use **UP/-** or **DOWN/+** key to select the mode you need. After completing the setting, press **SET** key to go to the next item. To exit menu, press **DEL** key.

By pressing **SET** key (in the on-hook mode), you can select the following:

SET ITEM	OPERATIONS
DATE/TIME	LCD panel displays SET 1 DATE , press SET key to enter this mode. The year value would flash, use UP/- or DOWN/+ key to select value, then press SET key to move to next item.
AREA CODE	LCD panel display SET 2 CODE , press SET key to confirm, LCD display ACODE , press SET key to enter this mode. Use UP/- or DOWN/+ key to select value, then press SET key to move to next item. Area Code can be used to filter the number for incoming calls. E.g. Area code = 75 when there's incoming call with 75 6554556, it will be displayed as 655 4556 only.
PABX CODE	LCD panel display SET 3 PCODE , press SET key to enter this mode. LCD displays PCODE , use UP/- or DOWN/+ key to select value, then press SET key to move to next item. When PABX code number is programmed, e.g. '0' or '9', the telephone will automatically redial the code number and pause for 2 seconds followed by the external number (must be more than 5 digits).
AUTO-IP	LCD display SET 4 AUTO IP , press SET key to enter this mode. LCD display AUTO IP OFF and OFF will flashes, use UP/- or DOWN/+ key to select value. When LCD displays AUTO IP ON , press SET key. Then the LCD will display INPUT CODE for you to enter the IP numbers. Use DEL key to correct any wrong input. After entered all IP number, press SET key to enter into next item. The outgoing call will automatically use IP mode. Auto IP allows you to replace a sequence of number with single 0. E.g. Setting 1455 as Auto IP, therefore when you need to dial 1455, just put 0 in front (pre-dial mode), 0 2334565 will be dialed as 1455 2334565.
P/T MODE	LCD display SET 5 P-T , press SET key to enter this mode. LCD display TONE . Use UP/- or DOWN/+ key to change it into PULSE , press SET key to move to next item.
ANTI SHARE	LCD display SET 6 ALAR , press SET key to enter this mode. LCD display STEAL OFF . Use UP/- or DOWN/+ key to change it into ON , press SET key to move to next item. The Anti-share feature is to ensure other telephone is unable to use the same line as your telephone. Once activated, any other telephone connecting to the same line cannot call out at all and will hear

	constant noise.
ALARM CLOCK	LCD display SET 7 ALERT , press SET key to enter this mode. LCD display 1 00-00 OFF . Press SET to navigate on the HOURL/MINUTE . Use the UP/- or DOWN/+ key to change the values. Change OFF to ON to enable the alarm function. You can set 3 alarms and the telephone will ring at the time set.

4. FUNCTION KEY OPERATION

UP/- and DOWN/+ key

In any mode, press either key to check all the incoming numbers. If there is no incoming number, the unit will display **END**. The unit can receive up to 16-digit phone numbers.

OUT key

In any mode, press **OUT** key to check the outgoing numbers with time. Use **UP/-** or **DOWN/+** key to select the outgoing number. Press **CALLBACK** key to dial the selected number.

DELETE key

In any mode, when checking the incoming and outgoing call, press **DELETE** key to delete the number you are checking. Press and hold **DELETE** key for 4 seconds and it will delete all incoming call or outgoing call numbers. When you pre-dial, press **DELETE** key to delete one digit one by one. When you enter IP number or password, use **DELETE** key to delete error digit.

CALLBACK key

In the off-hook mode, press this key to redial the last dialed number. In the on-hook mode, pre-dial the number then press **CALLBACK** key to auto pick up and dial out the number. When checking the incoming number or outgoing number, press **CALLBACK** key to auto pick up and dial out the number directly.

CAL key

You can use the calculator function to perform addition, subtraction, multiplication and division. Press the **CAL** key to go into calculator mode. Press the first number follow by **UP/-** (minus)/ **DOWN/+** (plus)/ **OUT/x** (multiply)/ **BRIGHT/÷** (divide) key and the second number. Press **#/=** (result) key to see the calculated value. To reset the values, press **CAL** key again. If you need to insert decimal point, press the ***./** key. The LCD can only display result up to 10 digits. To exit this mode, press **DEL** key.

FLASH key (600ms)

In the off-hook mode, press this key to auto-hang up for 600ms, after that you can press **REDIAL** key or dial out another number.

REDIAL key

In the off-hook mode, press this key to redial the last dialed number.

HANDSFREE key

While on-hook, press the **HANDSFREE** key to go into handsfree mode. You can talk through the microphone and listen from the speakerphone without lifting the handset. While off-hook, press the **HANDSFREE** key and put down the handset to go into handsfree mode.

HOLD key

Under off-hook mode, press **HOLD** key to enter music on hold mode.

RING key

In the on-hook mode, press **RING** key, the phone LCD will display **RING 1-8**, which means there are eight selectable ringing tones. Select your preferred ringing tone by pressing **RING** continuously.

VIP key

- A) Press VIP key to add and cancel VIP calls when you check incoming and outgoing call. VIP number is marked with a lock.
- B) VIP number cannot be deleted individually. To delete all the VIP numbers, press and hold the **DELETE** key for 4 seconds.
- C) If you have a new incoming call and the VIP memory is full, it will replace the normal and VIP number.

The unit will use VIP ring tone if the incoming call is a VIP number. You must ensure you have inserted the batteries.

PAUSE key

To insert a 3.6 second of pause while dialing, press **PAUSE** key and it will display **P** on the LCD panel.

BRIGHT/+ key

On on-hook mode, press **BRIGHT/+** key to change the LCD contrast. It comes with 5 level and Level 5 is the highest level of contrast.

5. ADDITIONAL NOTES

INCOMING CALL LCD INDICATOR

When there is incoming call, the unit will be automatically display the caller number, date and time, and also display its serial number. If the incoming call is in private mode, it will display “__p__”; it will display “__0__” if exchange cannot determine the number; it will display “-E-” if the call signal contains error.

LCD BACKLIGHT FUNCTION

When there's incoming call or when the handset is pick up, the blue LCD backlight will lit up. It will be on for about 6 seconds before going off. Without battery, LCD backlight will not lit up at all

IN USE LED INDICATOR

When the handset is off hook or in handsfree mode, the LED will turn on.

TROUBLESHOOTING GUIDE

(Q) I do not hear any dial tone from the handset.

(A) Ensure the handset cord is connected correctly from the handset to the handset cord jack at the base. Ensure you have plug in the telephone cable from the telephone to the wall socket correctly. If the problem persists, please check with your local dealer.

(Q) I could not see the caller's number on the LCD when there is incoming call.

(A) Ensure that you have subscribed Caller ID service from your local telecom provider.

(Q) There is no LCD Display / Backlight after I have connected the telephone line. I can call out normally.

(A) Ensure that you have inserted the batteries on the battery compartment. If there is still no display, change the batteries and ensure it is not empty. If the problem persists, please check with your local dealer.

(Q) I cannot hear the VIP ringing tone when there is a VIP incoming call.

(A) Ensure that you have inserted the batteries on the battery compartment. If there is still no VIP ringing tone, change the batteries and ensure it is not empty. If the problem persists, please check with your local dealer.

DECLARATION OF CONFORMITY

The telephone complies with the essential protective requirements and objectives of:

- EC R& TTE Directive 1999/5/EC
- EC Low Voltage Directive 73/23/EEC
- EC EMC Directive 89/336/EEC

And conforms to the following relevant harmonized standards:

- EMC: EN55022, EN55024
- Safety: EN 60950

