



TEMPORIS 42



User guide

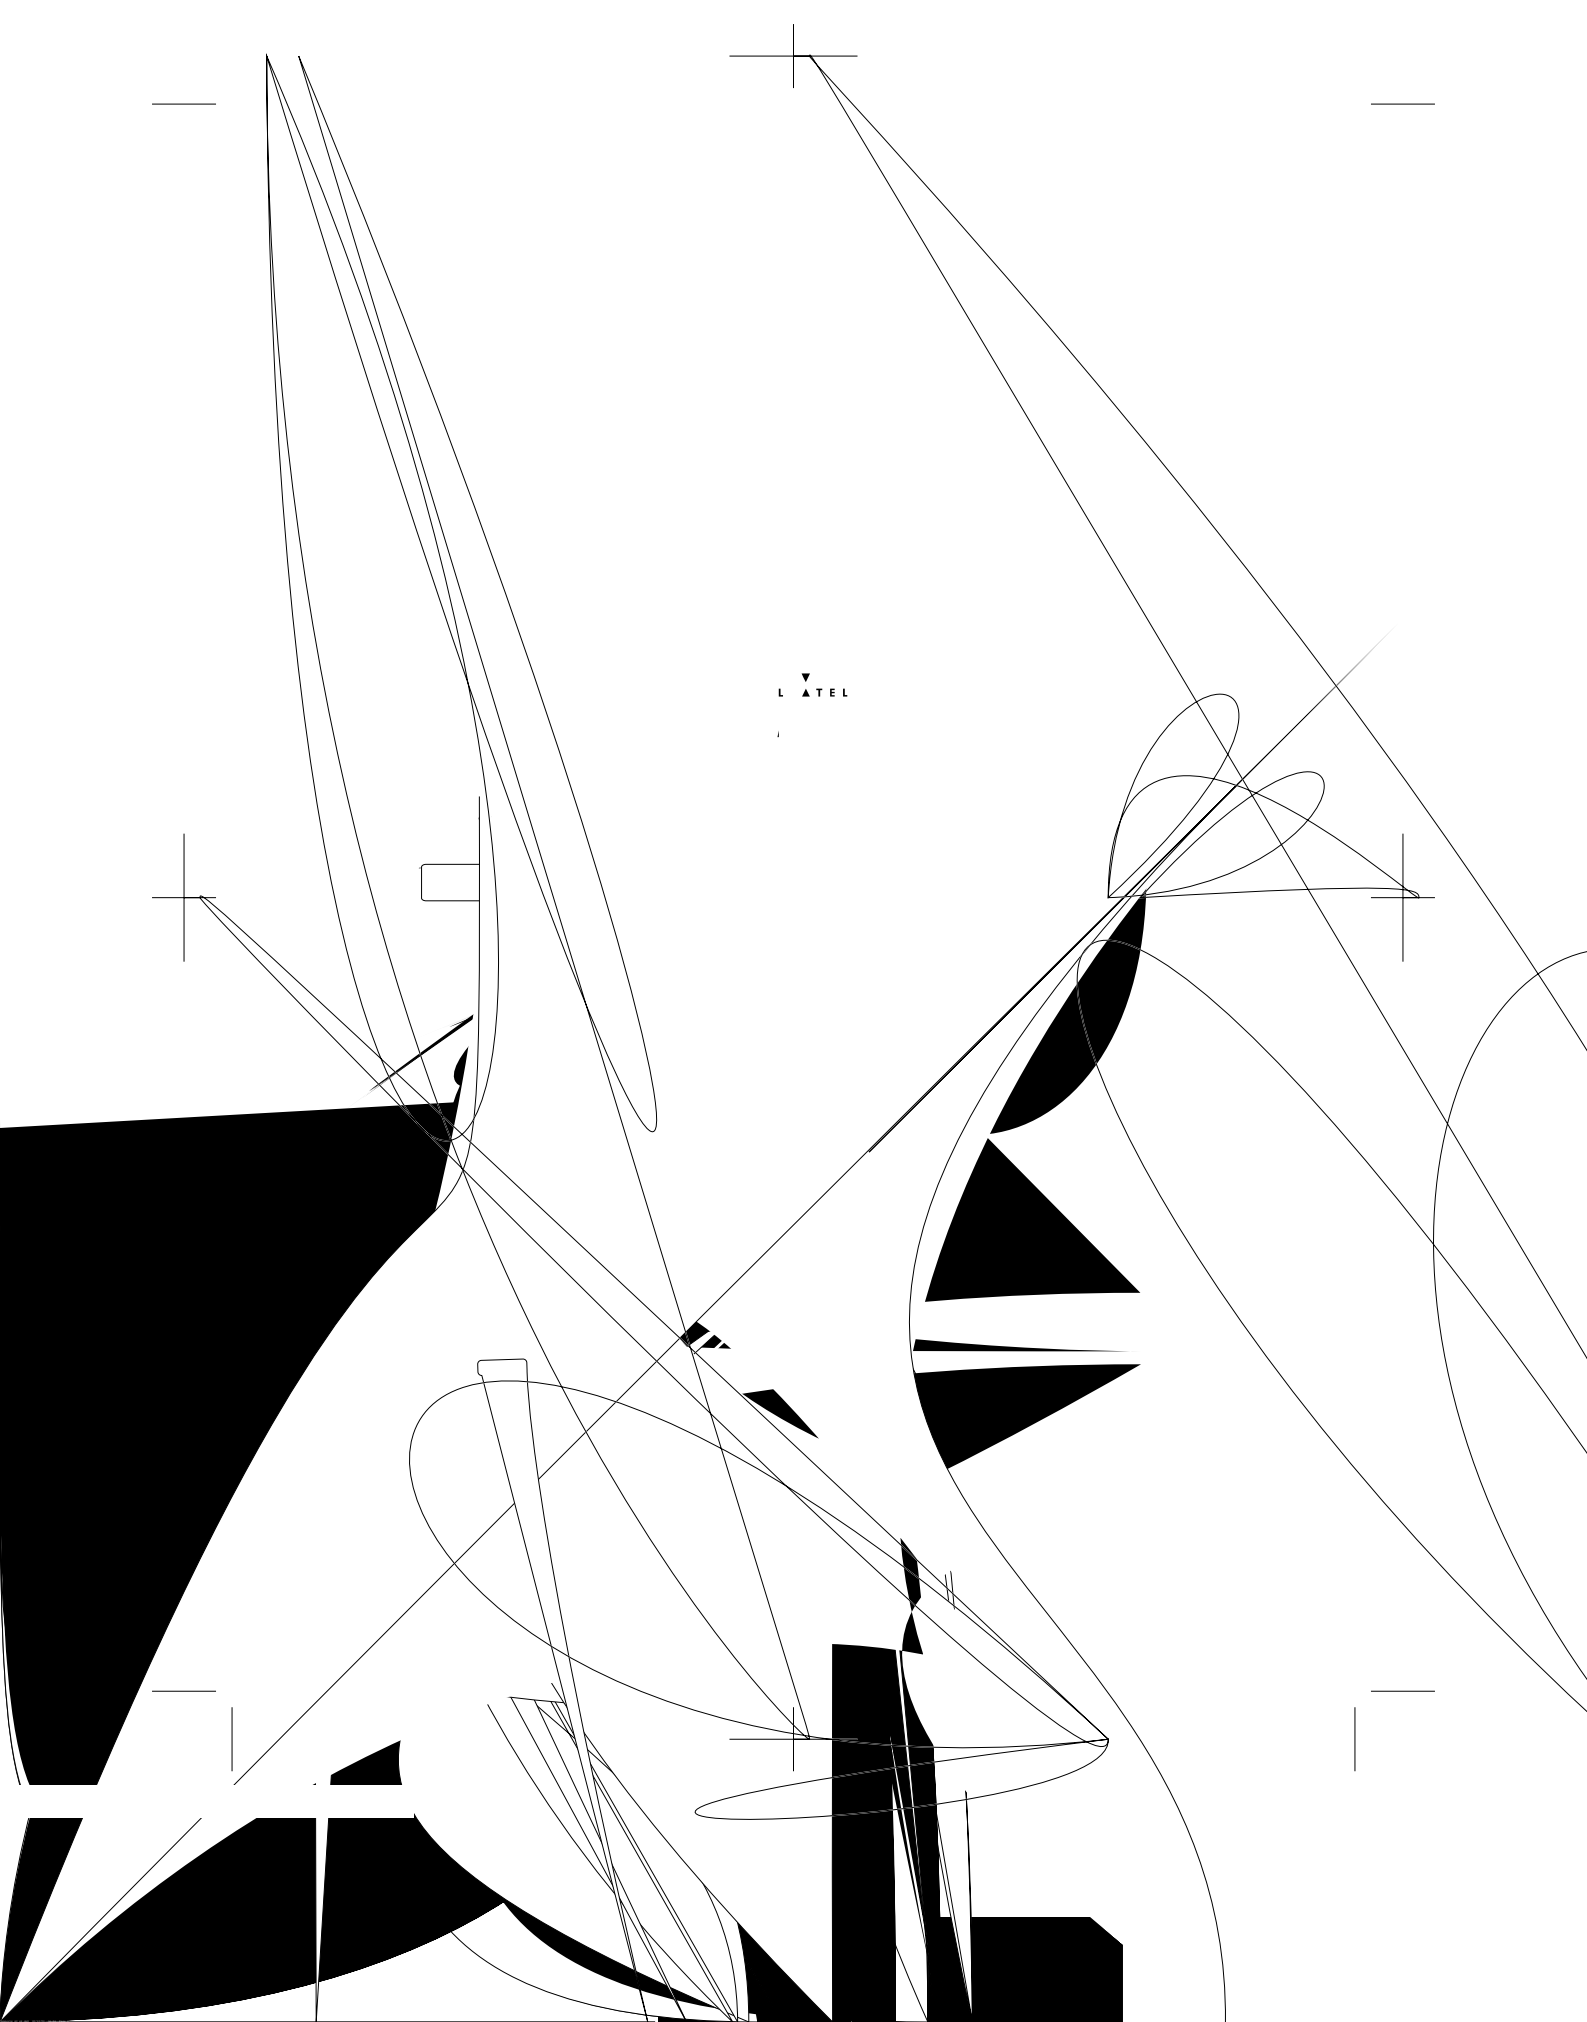
CONTENTS

| | | |
|------------------------------------------------|-------------|-----------|
| DESCRIPTION OF THE TEMPORIS 42 | PAGE | 3 |
| Display | | 4 |
| Equipment provided..... | | 5 |
| Characteristics | | 5 |
| TO INSTALL YOUR TEMPORIS 42 | PAGE | 6 |
| Recommandations..... | | 6 |
| Connection of the handset | | 6 |
| Telephone connections | | 7 |
| Wall mounting | | 7 |
| Installation or replacement of batteries | | 8 |
| Precautions of use..... | | 8 |
| Declaration of conformity..... | | 8 |
| GENERAL USE | PAGE | 9 |
| Message waiting lamp / Ringing indicator | | 9 |
| Line lamp | | 9 |
| Preparatory dialling / On hook dialling..... | | 9 |
| To dial using a memory | | 10 |
| Receiving a call | | 11 |
| Hands free mode | | 11 |
| Handset sound level | | 11 |
| Mute | | 11 |
| Hold / Transfer | | 12 |
| Last number redial..... | | 12 |
| USING THE CLIP SERVICES | PAGE | 14 |
| Call log..... | | 14 |
| Call waiting | | 17 |
| PROGRAMMING YOUR TEMPORIS 42 | PAGE | 18 |
| Lock / Unlock | | 19 |
| Language..... | | 20 |
| Create directory | | 21 |
| Modify or erase directory..... | | 22 |
| Date/time | | 23 |
| Alarm | | 24 |
| Melody programming..... | | 25 |
| Emergency number programming | | 27 |
| Change PIN code | | 28 |
| Mailbox number programming..... | | 29 |
| Phone set-up | | 29 |

| | |
|--------------------------------|----|
| Call barring | 31 |
| Prefix access programming..... | 32 |
| Local phone number | 36 |

| | | |
|-------------------------------|-------------|-----------|
| ADDITIONAL INFORMATION | PAGE | 37 |
|-------------------------------|-------------|-----------|

| | |
|----------------------------------|----|
| If you forget the password | 37 |
| Problem? Check | 37 |
| Guarantee | 37 |
| Environment/Safety | 38 |



L ATEL

is a two line display:

Icons and functional information,
numerical characters.

In the state, the display contrast can be adjusted using



EQUIPMENT PROVIDED

- 1 model TEMPORIS 42 set
- 1 coiled cord
- 1 telephone line cord
- 1 label for emergency numbers
- 1 label for direct memories
- 1 or more user guide depending of the European country

CHARACTERISTICS

- Up to 50 name and number directory
- Call by name
- 10 direct memories
- Display with 2 lines
- Access to Caller Line Identity Presentation (CLIP) and Caller Name Identity - Presentation (CNIP) services*
- Display of incoming name or number*
- Recording of up to 46 calling line identity*
- Voice mail access*
- Call duration
- Last number redial
- Extended redial of the two previously dialled number
- Choice of ringing melodies (4 melodies)
- Choice of ringing level (4 levels + ringer off)
- Mixed dialling: pulse or tone
- Preparatory dialling/ on hook dialling
- Handset sound level adjustment
- Hands-free mode with adjustable loudspeaker volume
- Putting your correspondent on hold or muting the microphone using mute key
- Date and time adjustment
- Reminder call
- Call barring

* Subject to availability on the public network and subscription. On PSTN line only.

TO INSTALL YOUR TEMPORIS 42

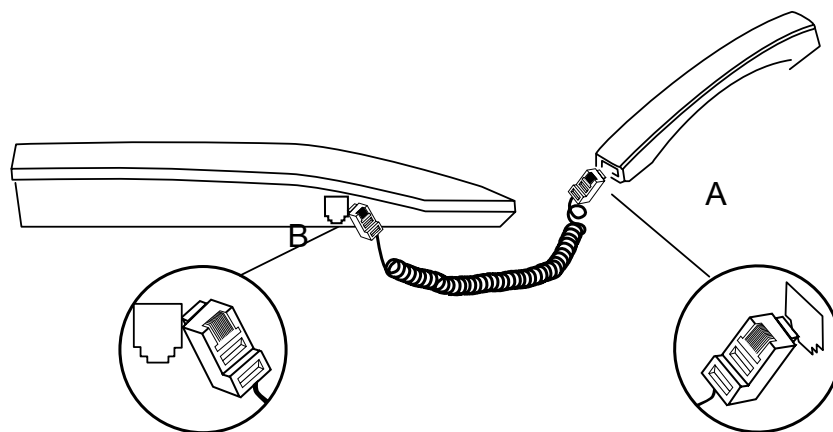
RECOMMENDATIONS

- Do not expose your telephone to direct sunlight or excessive heat.
- Working range of temperature: + 5°C to + 40°C.
- Your telephone must be installed, at least, at 1 meter of a radio equipment such as TV or radio telephone, etc.
- You have the possibility to use the optional adapter, this adapter should be compliant with the regulatory standard EN60950 and should be replaced by an equivalent model with CE mark and following characteristics.
 - input: 230VAC/50Hz.
 - output: from 9VAC to 12VAC/100mA.

Warning: The grid voltage is classified as a hazard by the criteria of the same standard.

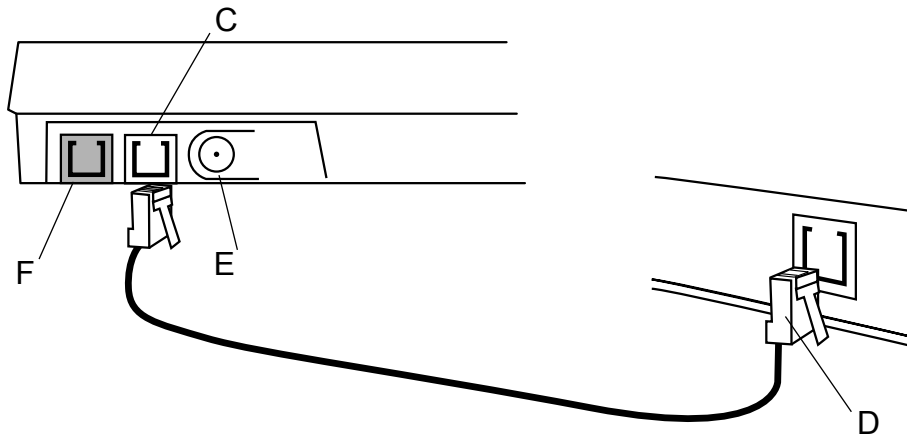
CONNECTION OF THE HANDSET

- Connect one end of the coiled cord (**A**) to the handset, and the other end (**B**) to the plug located on the left-hand side of the phone.



TELEPHONE CONNECTIONS

- This telephone is intended to be connected to an European analog PSTN line or to an analog PBX line.
- Connect the telephone cord (**C**) located on the back left-hand side, and the other end (**D**) to the telephone wall plug.
- If you use an adapter instead of batteries, plug it to the jack **E**. (**This adapter is not supplied with the telephone set.**)

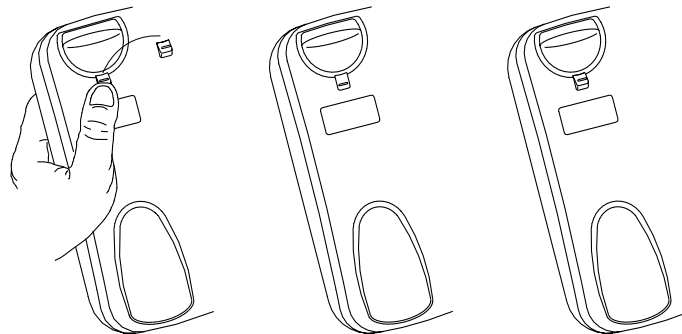


NOTE: The plug (**F**) enables a modem to be connected.

WALL MOUNTING

To wall mount the set, remove the peg and reinsert it upside down as shown in the figure below.

Bore two 6mm-large horizontal holes spaced 70mm apart. Put two pegs in and place in two screws (3.5mm diameter and 25mm long) without tightening them. Place the cord in the slot situated under the set, then fix it onto the screws.






Wall mounted position

Horizontal position

INSTALLATION OR REPLACEMENT OF BATTERIES

Your phone uses 3 LR6-AA-AM3 1.5V Alkaline batteries without mercury and cadmium, which are not supplied with the set. To avoid damaging your set, only use leak-proof batteries.

Place/Replace the batteries as described below:

- For safety reasons, disconnect the telephone line cord from the wall socket.
- Open the battery compartment located on the bottom of the set pushing hard at the door while sliding it back.
- Remove the used batteries and put the new ones in position, taking into account the + and - polarities as shown engraved on the plastic inside the battery compartment.
- Close the battery compartment and connect the telephone set.
- Adjust the contrast of the display using the  and  keys.
- Adjust date and time as described in the paragraph "Date/Time".
- The lifetime of batteries is around **6 months** in normal conditions of use.
- When batteries become weak, the battery icon starts flashing ; you have to replace your batteries as soon as possible.

NOTE: Without batteries or with empty batteries, your TEMPORIS 42 works properly but, if you disconnect it from the telephone line, the phone loses since information like date and time but not the contents of memories.

PRECAUTIONS OF USE


Caution, never bring your telephone set in contact with water.

To clean your set however, you may use a damp cloth.

Never use solvents (trichlorethylene, acetone, ...) which may damage the plastic surfaces of your telephone set. Never spray cleaning products on your set.

During storms, it is advised not to use the set.

DECLARATION OF CONFORMITY

- We would remind you that TEMPORIS 42 is approved in conformity with European regulations, as certified by the  marking.
- It is designed to send and receive telephone communications and for connection to the French public telecommunications network.
- Appliance designed for connection to a TRT3 class analogue telephone line (telecommunications network voltage) as defined in standard NF EN 60-950.
- ATLINKS hereby declares that the TEMPORIS 42 appliance is compliant with the essential requirements and other relevant provisions of directive 1999/5/CE.
- The certificate of conformity is available on the following Internet site: "www.atlinks.com".


GENERAL USE

MESSAGE WAITING LAMP / RINGING INDICATOR

When there is an incoming call, the lamp located inside the message key, will flash to the rhythm of the ring.

The lamp also serves as a message indicator. It flashes to inform of any new calls or messages in the Call Log (for those who have subscribed to the CLIP or CNIP service) or when a message has been left in the centralised voicemail if you are connected to a private ALCATEL telephone system equipped with a message service.

LINE LAMP

When the telephone set goes off-hook or seizes the line in hands-free mode, the lamp, located inside the  key, will switch on as long as the telephone line is seized.

PREPARATORY DIALLING / ON HOOK DIALLING


The TEMPORIS 42 enables you to prepare your dialling number without taking the line.



• PREPARING A CALL

- 1 Dial your correspondent's number.



Press the  key to erase a wrongly entered character.



- 2 Press the  key or  key.



The loudspeaker lamp lights up. The communication is monitored during the whole establishment phase.



- 3 Adjust the sound level using the  and  keys.



- 4 Press the  key in order to end the communication.


or

- 5 Lift the handset to go on having a private conversation.

NOTE: The call duration counter starts around 20 seconds after dialling of the last digit.

• MAKING A CALL

Making a call can also be carried out in other ways:


- By dialling the correspondent's number and then lifting up the handset.
- By pressing the  key and then dialling the correspondent's number.
- By lifting up the handset and then dialling the correspondent's number.

TO DIAL USING A MEMORY

The capacity of each memory is 24 digits and 20 characters.



• CALLING FROM THE DIRECTORY

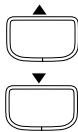




1 Press the  key.



2 There are two ways to find a correspondent's number:

- Use the  and  keys to scroll the names contained in the memory until the name of your correspondent appears on the display.
- You can also type the first letter of the correspondent's name on the keyboard which will result in the names of the correspondents beginning with that letter being displayed.



3 Press the  key to make a call.
 - or press the  key to make a call?
 - or lift the handset to make a call.



NOTE: The call duration counter starts around 20 seconds after dialling of the last digit;

• CALLING FROM A DIRECT MEMORY

1 Just press the chosen direct memory.
 The loudspeaker lamp lights up. The communication is monitored during the whole establishment phase.

2 Pick up the handset when your correspondent answers.


or


2 Go on having a conversation in hands-free mode.

NOTE: The call duration counter starts around 20 seconds after dialling of the last digit.

RECEIVING A CALL

There are two ways to answer the call:

- Lift the handset.
- Press the  key, the telephone set goes in hands-free mode.


NOTE: - If the ringer is deactivated on the telephone set, an incoming call is signalled by the display and the  lamp is flashing. To answer the call proceed as mentioned above.

- The call duration counter starts as soon as you answer the call..

HANDS-FREE MODE



If during a conversation where the handset is off-hook, you wish to hear the conversation on the loudspeaker:



- 1 Press the  key and replace the receiver.

▶ The people around you listen to the conversation.



- 2 Adjust the sound level using the  and  keys.

- 3 Lift the handset to go on having a private conversation.


HANDSET SOUND LEVEL

When the loudspeaker is not activated, you can increase the handset sound level.



- 1 Press the  key in order to increase the volume.




- 2 Press the  key to go back to initial volume.

MUTE

During a conversation, you can speak to the people around you without being heard by your correspondent.



- 1 Press the  key.


▶ Your correspondent can no longer hear you. The icon corresponding to this feature appears.

- 2 Press the  key once again to resume the conversation.

HOLD / TRANSFER

During a conversation, you can put your correspondent on hold the time you are looking for a file or if you want to go on having the conversation on a second telephone set in parallel on the same telephone line but in an other room.



1 Press the  key.

- ▶ Your correspondent can no longer hear you.
The icon corresponding to this feature appears.

2 Replace the receiver.

- ▶ Your correspondent hears a beep every 10 seconds this beep is also heard by yourself on the loudspeaker.

3 Pick up the handset to resume the conversation.

or

3 Pick up the handset of the second telephone set to resume the conversation on it.

The TEMPORIS 42 releases the line.

NOTE: If you do not resume the conversation after a time out of 60 seconds the telephone set automatically releases the line.


LAST NUMBER REDIAL

The capacity of the redial memory is 32 digits.

There are two ways to redial the last number previously dialled:

- IN OFF-HOOK STATE



1 Press the  key.


- ▶ The last number is displaying.

The telephone set automatically dials the last number previously dialled.

• IN ON-HOOK STATE - EXTENT LAST NUMBER REDIAL



The TEMPORIS 42 memorises the last 2 numbers previously dialled.



 
1 Press the  key.

▶ The first of last number is displaying



2 Use the  and  keys to display the last 2 numbers dialled.




3 Press the  key or lift the handset to redial the number displayed.

The number is automatically dialled. The telephone set takes in account the operator prefix if the service has been activated by the user.

• ERASING A NUMBER


If you do not want anybody to see the last numbers which you have dialled it is possible to erase them one by one.



1 Press the  key.

▶ The first of last number is displaying.



2 Press the  key to delete the number.

USING THE CLIP SERVICES

Your operator offers you some services which are only available through subscription.

The TEMPORIS 42 is able to work with Calling Line Identity Presentation (**CLIP** service) on hook or on Call Waiting in off hook mode.

CLIP informs you of the number or the name of the calling party before you answer the call.

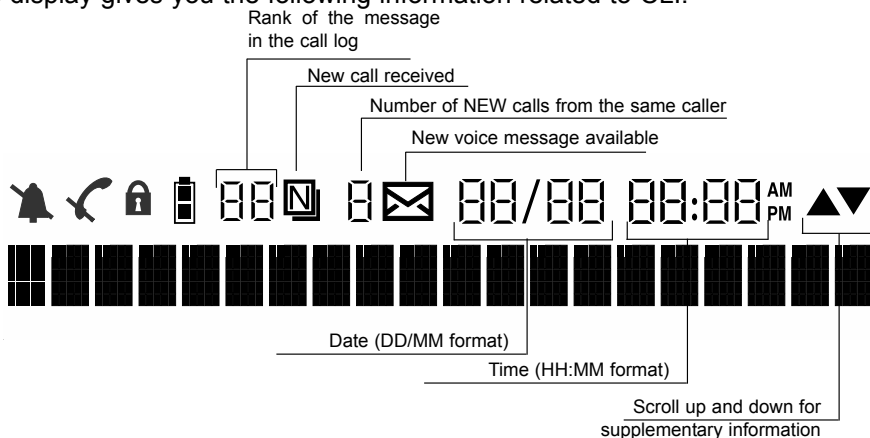
These services are available through subscription on PSTN lines. To subscribe: contact your telephone company.

CALL LOG

The call log is linked to the CLI (Calling Line Identification) service offered by your operator.

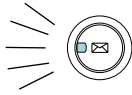
The phone numbers and names which have called you are stored in the calling list where up to 46 different phone numbers can be stored. The oldest calls are replaced by the more recent ones when there is insufficient space.

The display gives you the following information related to CLI:



When new CLI are received, the related information are stored in the call log and the lamp starts flashing.

• TO CONSULT THE CALL LOG



▶  12 NEW CALLS Message lamp flashes.




New calls in the call log.



New voice message in your mailbox.




1 Press the  key.

alternatively

 

You have been called by:

- JOHN SMITH.
- From line 331 85 80 66 38.
- John called you 8 times without reaching you.
- Last call was on October 9th at 8.05 PM.



2 Press the  key.


You see the second new call.

▶  11  3 08/10 10:10 PM ▲▼
ADAMS JACK

- TO DELETE A CALL LOG RECORD


When record is displayed:



- 1 Press the  key.

▶ ERASE SHEET?




- 2 Press the  key.

▶ OK SHEET ERASED

- TO SAVE A CALL LOG RECORD

 
When record is displayed:



- 1 Press the  key.

▶ CREATE DIRECTORY



 

- 2 Press the  key.

▶ PROG OK

- TO CALL A CORRESPONDENT FROM CALL LOG

When record is displayed:



- 1 Press the  key or press  key.


▶ JOHN SMITH

The conversation can go on having hands-free mode or picking up the handset.

CALL WAITING


Independently of the CLI, if you receive a second call during a conversation you can take this second call and put your first correspondent on hold. You can toggle between the two parties.



1 Press the  key.

▶ TAKE 2ND CALL




2 Press the  key.

▶ The telephone set dials R2, you take the second call and the first one is put on hold.


During the conversation with the second party, you can come back to the first one:







1 Press the  key.

▶ TAKE 1ST CALL



2 Press the  key.


 

 

The telephone set dials R2, you come back to the first call and the second one is put on hold.

NOTE: - You can toggle between the two parties using the  key then  key.
 - If you have no call waiting during a conversation, using  key enters in call waiting mode and has no action through the public network. To let this mode use the  key.

▶ PROG EMERG

▶ CHANGE PIN CODE?

Change the pa

- | | | | |
|----------------------------------------------------------------------------------------|---|---------------------|-------------------------------------------------------------------------------|
| ▼  | ▶ | PROG MAILBOX NB? | Define the mailbox number. |
| ▼  | ▶ | PHONE SET UP? | Functional parameter setting. |
| ▼  | ▶ | CALL BARRING? | Define the number of digits allowed to dial when the telephone set is locked. |
| ▼  | ▶ | PROG PREFIX ACCESS? | Chose the different carrier. |
| ▼  | ▶ | LOCAL PHONE NUMBER? | Telephone line subscriber number setting. |



 
 
 
 
NOTE: When a function is validated the screen displays "PROG OK" and the telephone set comes back to the previous state after 1.5 seconds.

LOCK / UNLOCK

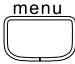

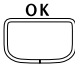

 

When your telephone is locked:

- You can receive a call.
- You can dial a limited number, number length is chosen in "Call barring" menu.
- If an emergency number is programmed, it is automatically dialled 5 seconds after seizing the line without user action. The default value of the password is 0000.

• LOCKING

- | | | |
|-------------------------------------------------------------------------------------|---|-------------------------------------------------------------------------------------------------------------|
|  | ▶ | 1 Press the  key. |
| | ▶ | LOCK? |
|  | ▶ | 2 Press the  key. |
| | ▶ | ENTER PIN CODE: _ |
| | ▶ | 3 Enter your password. |
| | ▶ | ENTER PIN CODE:**** |
|  | ▶ | 4 Press the  key. |
| | ▶ | PHONE LOCKED |

If the password is incorrect, the display informs you and you are asked to try again.

- UNLOCKING**
-  **1** Press the  key.
- ▶ UNLOCK?
-  **2** Press the  key.
- ▶ ENTER PIN CODE: _
- 3** Enter your password.
- ▶ ENTER PIN CODE:****
-  **4** Press the  key.
- ▶ PHONE UNLOCKED

If the password is incorrect, the display informs you and you are asked to try again.

NOTE: If you have forgotten your password, consult the chapter "If you forget the password".

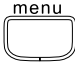



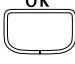

LANGUAGE

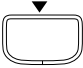
The TEMPORIS 42 offers 4 display languages:


- English, Dutch, German and French.

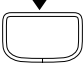
or


- English, Spanish, Italian and Portuguese.

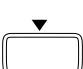
-  **1** Press the  key.
- ▶ LOCK?
-  **2** Press the  key.
- ▶ LANGUAGE?
-  **3** Press the  key.
- ▶ ENGLISH?

 
- 

 
4 Press the  key.

 
▶
- 

5 Press the  key.

▶
- 

6 Press the  key.

▶
- 

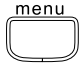
7 Press the  key.


▶

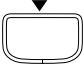
NOTE: It is the same procedure for the 4 other languages.


CREATE DIRECTORY

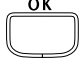
This sub-menu allows both programming of the directory and the direct memories. Your set has a directory containing up to 50 entries. Each file is made of a name and a number.

 
- 


1 Press the  key.

▶
- 




2 Press the  key until the screen displays the right sub-menu.


▶
- 

3 Press the  key.

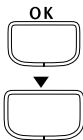
▶
- 

4 Use the keypad to enter the name of your correspondent.
To enter a new character wait until the cursor has shifted then press another key.

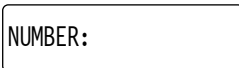
To display M press once the  key.
To display N press twice the  key.
To display O press 3 times the  key.

To display Space character press once the  key.

▶ 

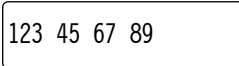


5 Press the  key or  key.


▶ 

 



6 Use the keypad to enter the number of your correspondent.


▶ 




7 Press the  key to memorise into directory
or



7 Press one of the direct access memory key .

▶ 


NOTE: - Use the  key to correct a wrongly entered character or number before validation.
- Write the name on direct memory label.


MODIFY OR ERASE DIRECTORY

• MODIFY DIRECTORY


This sub-menu allows to modify or to delete entries in the memory.



1 Press the  key.




▶ 


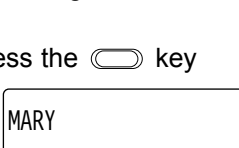


2 Press the  key until the screen displays the right sub-menu.


▶ 





3 Press the  key and use the  and  keys to select the right entry or use the keypad to enter a character to go to the first name starting with that character.

or
3 Press the  key
▶ 



4 Press the  key.




5 Select the name or the number to be modified using  or  keys.



▶ MARY_ or 123 45 67 89_




6 Use the  key to delete the characters or the digits one by one. Use the keypad to modify name or number.

▶ MARY_ or 123 45 67 89_

• ERASE DIRECTORY


Reproduce the sequence from **1** to **3**.



4 Press the  key to erase the whole entry.

▶ ERASE SHEET?




5 Press the  key.

▶ OK SHEET ERASED

DATE/TIME


The date and time icons are blinking as long as the date and the time are not set.



1 Press the  key.


▶ LOCK?



2 Press the  key until the screen displays the right sub-menu.

▶ DATE/TIME?



3 Press the  key.



▶ D./T.:01/01 12:00 P



- 4** Use the keypad to modify the date and time in format DD/MM and HH:MM.

 
▶ D./T.:16/05 08:20 P



- 5** Press the  key or  key to alternate between AM and PM.

▶ D./T.:16/05 08:20 A



- 6** Press the  key.


▶ PROG OK

ALARM

Your telephone can be programmed to call you every day at the same time. In order to avoid unfortunate deprogramming of the alarm, you are advised to insert batteries into the phone (see page 8).


• PROGRAMMING



- 1** Press the  key.

 
▶ LOCK?



- 2** Press the  key until the screen displays the right sub-menu.

▶ ALARM?



- 3** Press the  key.



▶ TIME: 12:00 A



- 4** Use the keypad to modify the time in format HH:MM.

▶ TIME: 06:30 A




- 5** Press the  key or  key to alternate between AM and PM.

▶ TIME: 06:30 P







6 Press the  key.

▶ ALARM: OFF




7 Press the  key or  key to alternate between ON and OFF.



▶ ALARM: ON



8 Press the  key.

▶ PROG OK

NOTE: To deactivate the function select "ALARM: OFF".

• REMINDER

At the time programmed your telephone will stop the alarm.


▶ ** ALARM CLOCK **

MELODY PROGRAMMING

There are two ways to program the melody:

- The modifications of the ring tone menu.
- The melody and the level of ring tone menu.

• DURING A CALL


1 Press  to reduce the volume.




to select the melody.

When the modifications are memorised, you can answer the call.



1 Press the  key.

▶

Press the  key until the screen displays the right sub-menu.

Press the  key.

number.

validate.

NUMBER

by a person in difficulty (e.g.: a

ed mode, lift up the handset

atically dialed after

ncy number


after

CHANGE PIN CODE

Some features of the TEMPORIS 42 need to use a four digit password.


This password is set out of box at 0000. You may choose your own code using a sub-menu.



1 Press the  key.


▶ LOCK?



2 Press the  key until the screen displays the right sub-menu.

▶ CHANGE PIN CODE?



3 Press the  key.


▶ ENTER OLD PIN: _



4 Enter the old password.

▶ ENTER OLD PIN:****



5 Press the  key.

▶ ENTER NEW PIN: _




6 Enter

MAILBOX NUMBER PROGRAMMING


When a mailbox number is programmed, this number is automatically dialed when user presses the mailbox key.



- 1 Press the  key.


▶ LOCK?



- 2 Press the  key until the screen displays the right sub-menu.

▶ PROG MAILBOX NB?



- 3 Press the  key.

▶ NUMBER:

- 4 Enter the phone number.


▶ 345678

- 5 Press the  key to validate.


▶ PROG OK

PHONE SET-UP

Some parameters of the TEMPORIS 42 may be change according to the network. Some of these parameters are factory settings according to the dedicated market (e.g.: France, Germany,...,mass market or professional market).

- 1 Press the  key.

▶ LOCK?

- 2 Press the  key until the screen displays the right sub-menu.

▶ PHONE SET UP?

- 3 Press the  key.

▶ CALLING: TONE

This function
automatically

Press




Tr



N 

8 P  key.



9 Prt  key.



10 Pres  key.



11 Press  key.



CALL BARRING


When your telephone is barred (of box) can still be dialled by
It is possible to authorise local calls to 9 digits.

Press the



Press the



Press the 



4 Enter the p




5 Press the 



6 Select the number



7 Press the  key.



If the telephone set is in use for more than 9 digits.

If the telephone is in lockdown, the number of digits defined in the

If the number of digits set is less than the emergency number

PREFIX ACCESS PROGRAMMING

This feature allows the user to choose the carrier according to the charging area. After to have defined the carrier and the charging area the user has just to dial the telephone number in the national format (according to the carrier, for example: for France 01 23 45 67 89) on public network as defined in chapter "Phone set-up" or the user has to dial the prefix to access the public network if the telephone set is used behind PBX (private network).

If the operator prefix is less than 2 digits or equal:


- public network: the telephone set substitutes the first digit of the national number by the prefix of the selected carrier,
- private network: the telephone set keeps the PBX prefix has it is and substitutes the first digit of the national number by the prefix of the selected carrier.

If the operator prefix is more than 2 digits:

- public network: the telephone set inserts automatically the prefix of the selected carrier and a pause before the national number.
- private network: the telephone set keeps the PBX prefix following by a pause of 1.5 seconds before insertion of the prefix of the selected carrier and a pause before the national number.


This selection can be done for 2 different operators.



1 Press the  key.

▶ LOCK?



2 Press the  key until the screen displays the right sub-menu.

▶ PROG PREFIX ACCESS?

 
Public network selection:



3 Press the  key.

▶ OPERATOR1 ACCESS?



4 Press the  key.


▶ DEFINE AREA 1: _



5 Enter the 2 digits of the charging area.

▶ DEFINE AREA 1:01



6 Press the  key.

▶ DEFINE AREA 2: _



7 Enter the 2 digits of the charging area.

▶ DEFINE AREA 2:02


The telephone set allows 7 areas for this carrier.



8 Enter the 2 digits of the charging area.

▶ DEFINE AREA 7:08



9 Press the  key.


▶ DEFINE PREFIX1: _



10 Enter the digits of the operator prefix.


▶ DEFINE PREFIX1:7



11 Press the  key.

▶ OPERATOR2 ACCESS?



12 Press the  key.


▶ DEFINE AREA 1: _



13 Enter the 2 digits of the charging area.

▶ DEFINE AREA 1:00



14 Press the  key.

▶ DEFINE AREA 2: _


The telephone set allows 3 areas for this carrier.



15 Enter the 2 digits of the charging area.

▶ DEFINE AREA 3:06



16 Press the  key.


▶ DEFINE PREFIX2: _



17 Enter the digits of the operator prefix and 3 pauses.

▶ DEFINE PREFIX1:3678P




18 Press the  key.

▶ PROG OK


Private network selection:



3 Press the  key.

▶ OPERATOR1 ACCESS?



4 Press the  key.


▶ DEFINE AREA 1: _



5 Enter PBX prefix + 2 digits of the charging area.

▶ DEFINE AREA 1:901



6 Press the  key.

▶ DEFINE AREA 2: _



7 Enter PBX prefix + 2 digits of the charging area.

▶ DEFINE AREA 2:902


The telephone set allows 7 areas for this carrier.



8 Enter PBX prefix + 2 digits of the charging area.

▶ DEFINE AREA 7:908



9 Press the  key.


▶ DEFINE PREFIX1: _



10 Enter the digits of the operator prefix.


▶ DEFINE PREFIX1:7



11 Press the  key.

▶ then OPERATOR2 ACCESS?



12 Press the  key.


▶ DEFINE AREA 1:_



13 Enter PBX prefix + 2 digits of the charging area.

▶ DEFINE AREA 1:900



14 Press the  key.

▶ DEFINE AREA 2:_


The telephone set allows 3 areas for this carrier.



15 Enter PBX prefix + 2 digits of the charging area.

▶ DEFINE AREA 3:906



16 Press the  key.


▶ DEFINE PREFIX2:_



17 Enter the digits of the operator prefix and 3 pauses.

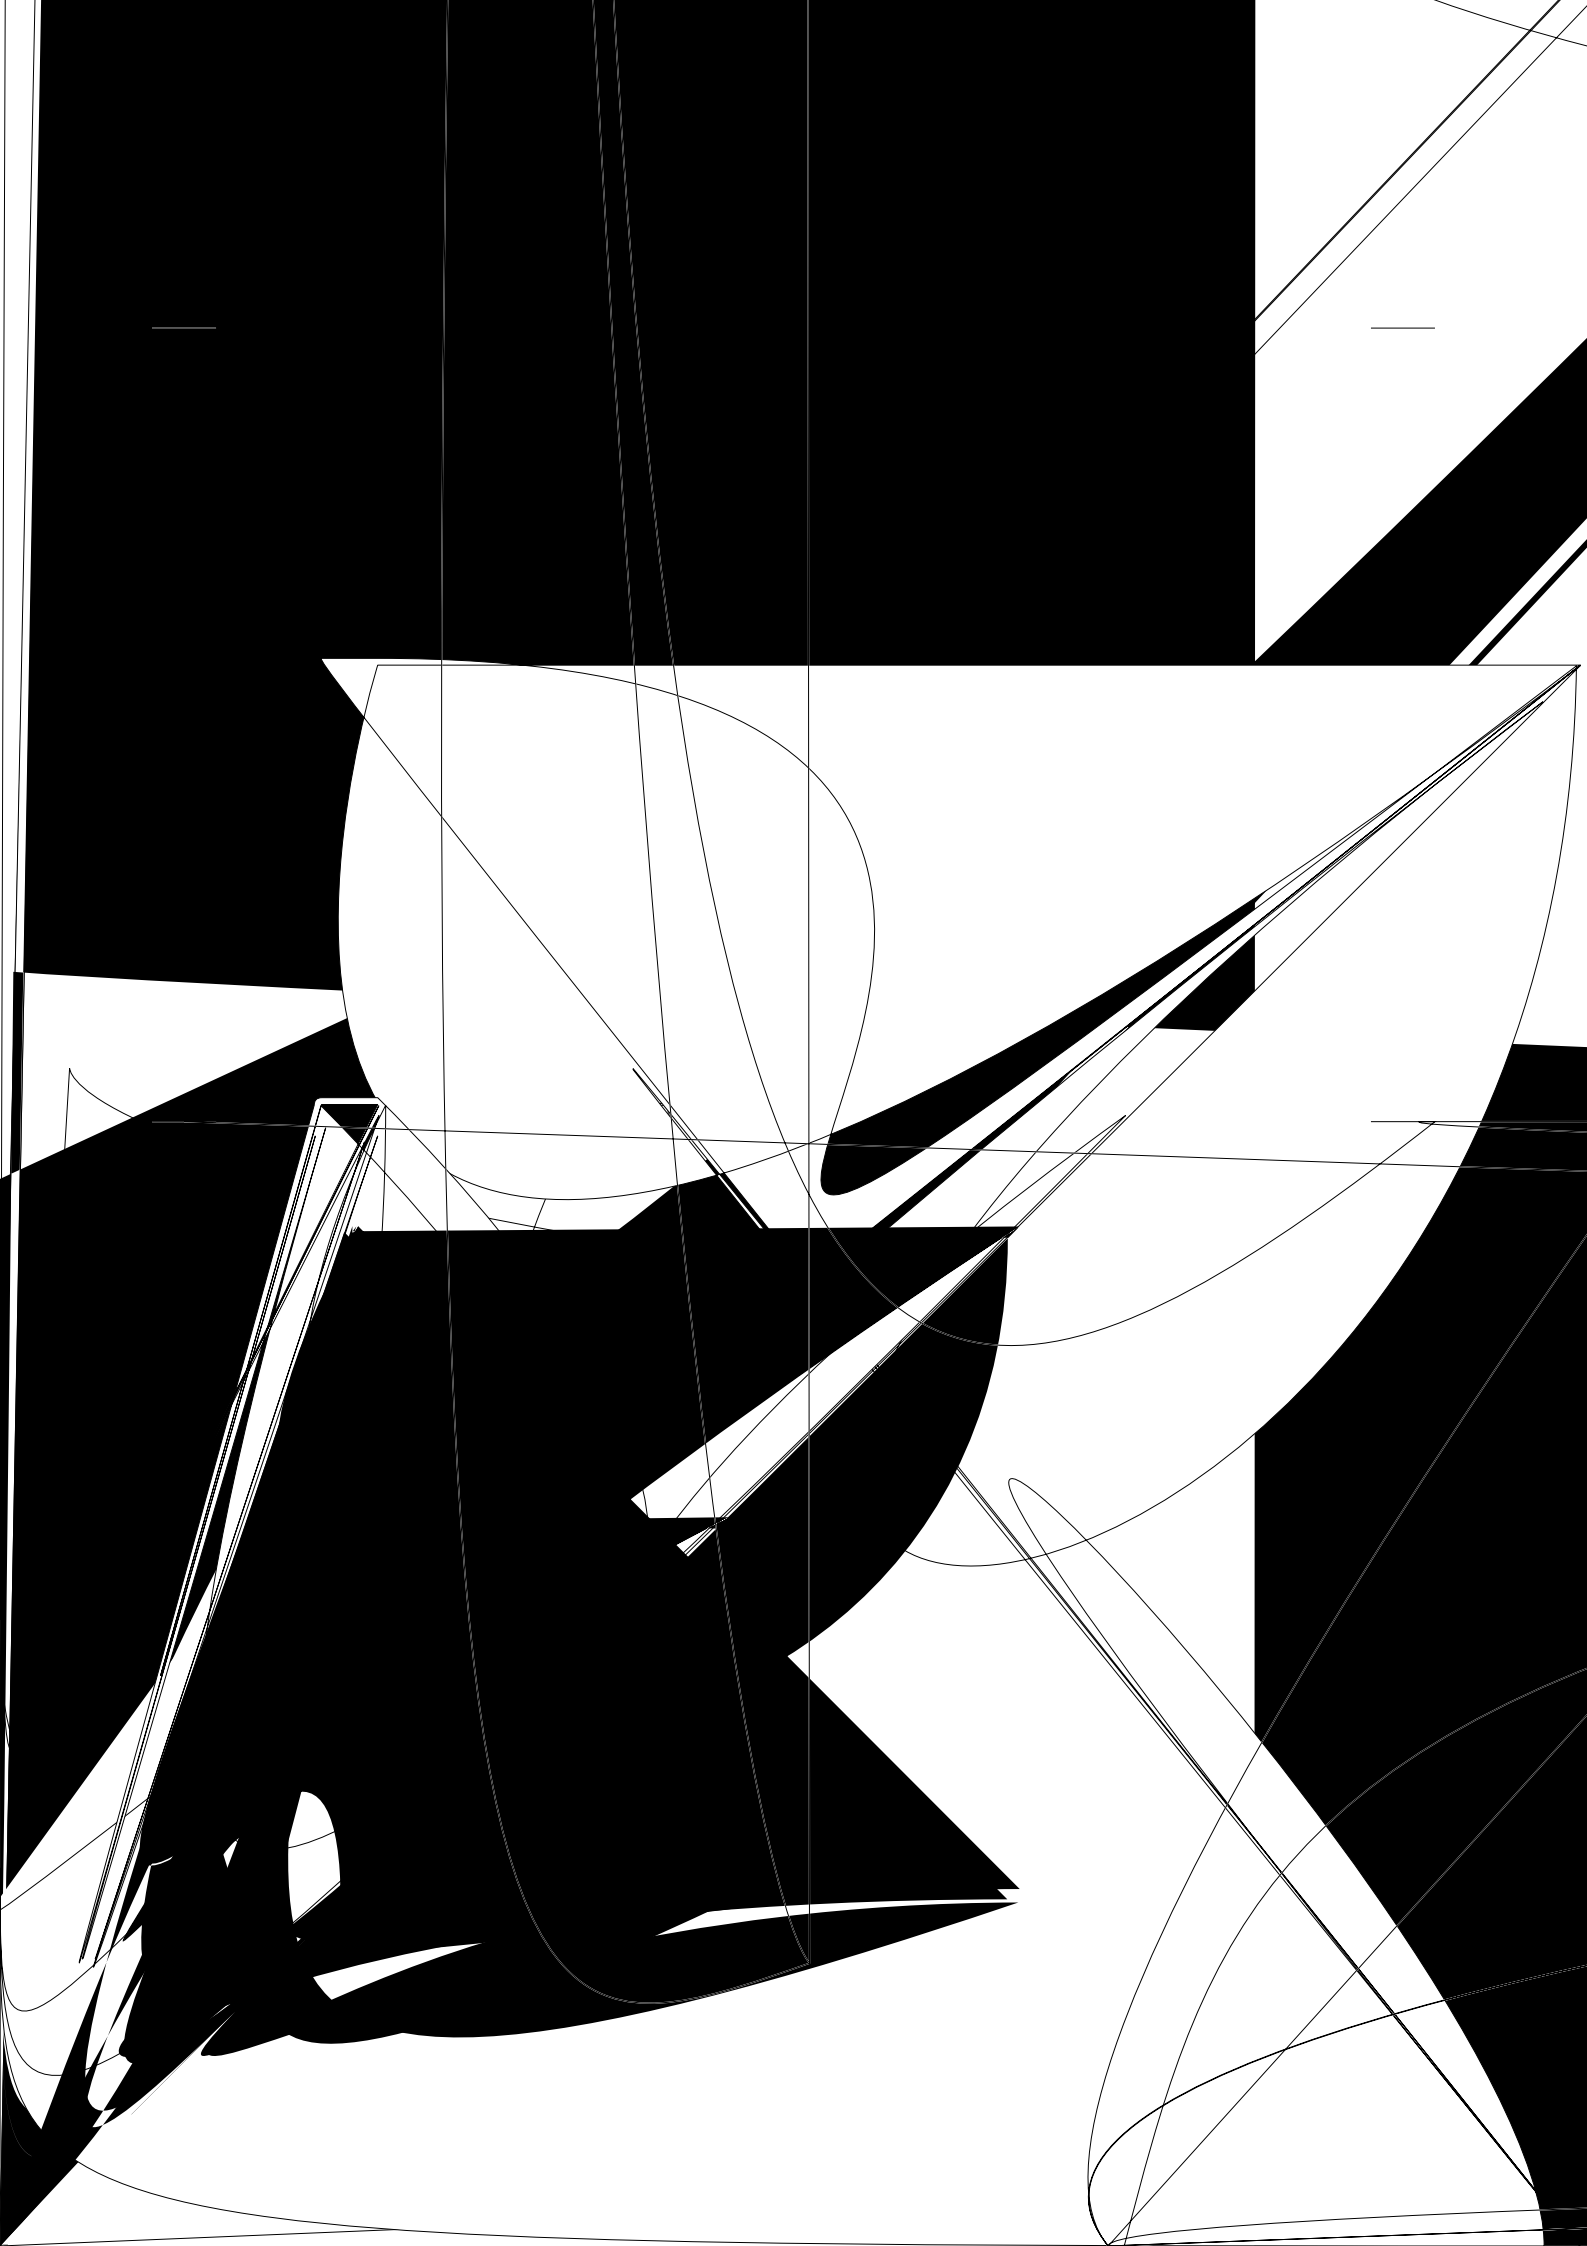
▶ DEFINE PREFIX1:3678P



18 Press the  " key.

▶ PROG OK

 
NOTE: This feature is only activated when you dial in on-hook mode using direct dialling or the directory or a direct access memory. If you dial in off-hook mode do not forget to dial the prefix before your correspondent's number.





ADDITIONAL INFORMATION

IF YOU FORGET THE PASSWORD

If you have lost or forgotten the password:



1 Press the  and  keys simultaneously.



2 Keep the keys pressed while lifting up the handset.

▶ 

3 Release the keys and replace the handset.

The code is now reset to 0000.

PROBLEM ? CHECK...

| PROBLEM | CAUSE | SOLUTION |
|---------------------------------------------------|----------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The display is not lit. There is no dial tone. | The telephone is not plugged in. | Plug line into telephone |
| The display is not lit. There is dial tone. | The telephone is not initialised and no batteries are present. | Pick up the handset and wait until the display lights up. |
| The display is not lit or is very faint. | The contrast level is too low. | In idle state adjust the contrast using  and  keys. |
| The telephone no longer rings. | The ringer is switch off. | Refer to the chapter "Melody programming". |

GUARANTEE

You are covered by a legal warranty on this product and for all information concerning this warranty, please contact your reseller.

Regardless of the legal warranty on the product, the reseller guarantees conformity of the products with their technical specifications for a period of twelve (12) months, parts and labour, starting from the date on the proof of purchase of the product. You should therefore keep your invoice or till receipt specifying the date of purchase of the product and the name of the reseller. However, if the legal warranty in your country exceeds twelve (12) months, the legal warranty alone then applies. If the

legal warranty is on the contrary less than twelve (12) months, the total duration of the warranty (legal and commercial) will be of twelve (12) months. The non-conforming part or product will be repaired or replaced free of charge, by an identical part or product, or one at least equivalent in terms of function and performance. If repair or replacement were to prove impossible, you would receive a refund for the product.

The spare product or part, which may be either new or reconditioned, is guaranteed for a period either of three months from the date of repair, or up to the end of the initial warranty period if this is longer than three months. All parts or products returned and replaced become the property of the manufacturer.

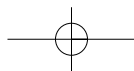
However, this warranty becomes null and void in the following cases:

- installation or use other than as instructed in this guide;
- incorrect connection or abnormal use of the product, in particular with accessories not specifically recommended;
- products which have been knocked or dropped;
- products damaged by lightning, voltage surge, source of heat or radiation, water damage, exposure to excessive humidity, or any other cause outside the product itself;
- defective maintenance, negligence;
- maintenance, modification or repair by a person not approved by the manufacturer or reseller.

SUBJECT TO LEGAL PROVISIONS, ALL WARRANTIES OTHER THAN THOSE DESCRIBED HEREIN ARE EXPRESSLY EXCLUDED.

ENVIRONMENT/SAFETY

- Only use batteries with specifications identical to those mentioned in this guide. Using batteries which do not correspond to the recommended model is liable to damage your product.
- Your handset's used batteries should be disposed of in accordance with current environmental protection regulations. You should return them to your reseller or take them to a specific recovery centre.
Do not attempt to open the batteries as they contain chemical substances. In the event of leakage, avoid contact with the skin, eyes and mouth. If necessary, rinse the affected part for several minutes with running water. Clean the product with absorbent paper or a dry cloth and contact your reseller for new batteries.
- To prevent danger, the mains adapter acts as a 230V power isolating device. It should therefore, as a precaution, be installed near the appliance and should be easily accessible.





Engineered by

ATLINKS

An ALCATEL/THOMSON multimedia
Joint Venture Company

Sales and Marketing Departments:

41, boulevard de la République - Bâtiment B6
78400 Chatou - France

**Head office: 46, quai Alphonse Le Gallo
92100 Boulogne Billancourt - France**

The manufacturer reserves the right to modify the specifications of its products in order to make technical improvements or comply with new regulations. Nanterre companies registry number: 390 546 059. ALCATEL, ATLINKS and TEMPORIS are registered trade marks.

Ref: 30-146304-00 30/10/02