



METROLOGIC INSTRUMENTS, INC.  
IS3480 Quantum™ *E* Scan Engine  
Installation and User's Guide





## LOCATIONS

---

### **CORPORATE HEADQUARTERS NORTH AMERICA**

#### **USA, NEW JERSEY**

Metrologic Instruments, Inc.  
Tel: 1-800-ID-METRO Fax: 856-228-6673  
Email: [info@metrologic.com](mailto:info@metrologic.com)

#### **SOUTH AMERICA, BRAZIL SÃO PAULO**

Metrologic do Brasil Ltda.  
Tel: 55-11-5182-8226 Fax: 55-11-5182-8315  
Email: [info@br.metrologic.com](mailto:info@br.metrologic.com)

#### **SOUTH AMERICA, OUTSIDE BRAZIL SÃO PAULO**

Metrologic South America  
Tel: 55-11-5182-7273 Fax: 55-11-5182-7198  
Email: [info@sa.metrologic.com](mailto:info@sa.metrologic.com)

#### **ASIA, SINGAPORE**

Metrologic Asia (Pte) Ltd  
Tel: 65-6842-7155 Fax: 65-6842-7166  
Email: [info@sg.metrologic.com](mailto:info@sg.metrologic.com)

#### **CHINA, SUZHOU**

Metro Technologies Co., Ltd.  
Tel: 86-512-62572511 Fax: 86-512-62571517  
Email: [info@cn.metrologic.com](mailto:info@cn.metrologic.com)

#### **Metro Sales Office**

Tel: 86-512-67622550 Fax: 86-512-67622560  
Email: [info@cn.metrologic.com](mailto:info@cn.metrologic.com)

#### **JAPAN, TOKYO**

Metrologic Japan Co., Ltd.  
Tel: 81-03-3839-8511 Fax: 81-03-3839-8519  
Email: [info@jp.metrologic.com](mailto:info@jp.metrologic.com)

### **EUROPEAN, MIDDLE EAST & AFRICAN HEADQUARTERS**

#### **GERMANY, MUNICH**

Metrologic Instruments GmbH  
Tel: 49-89-89019-0 Fax: 49-89-89019-200  
Email: [info@europe.metrologic.com](mailto:info@europe.metrologic.com)

#### **GERMANY, MUNICH**

Metrologic Instruments GmbH  
Tel: 49-89-89019-0 Fax: 49-89-89019-200  
Email: [info@de.metrologic.com](mailto:info@de.metrologic.com)

#### **ITALY, BOLOGNA**

Metrologic Instruments Italia srl  
Tel: +39 0 51 6511978 Fax: +39 0 51 6521337  
Email: [info@it.metrologic.com](mailto:info@it.metrologic.com)

#### **FRANCE, PARIS**

Metrologic Eria France SA  
Tel: +33 (0) 1 48.63.78.78  
Fax: +33 (0) 1 48.63.24.94  
Email: [info@fr.metrologic.com](mailto:info@fr.metrologic.com)

#### **SPAIN, MADRID**

Metrologic Eria Ibérica, SL  
Tel: +34 913 272 400 Fax: +34 913 273 829  
Email: [info@es.metrologic.com](mailto:info@es.metrologic.com)

#### **Metrologic Europe Repair Center (MERC)**

Metrologic Eria Ibérica, SL  
Tel: +34 913 751 249 Fax: +34 913 270 437

#### **UNITED KINGDOM, BASINGSTOKE**

Metrologic Instruments UK Limited  
Tel: +44 (0) 1256 365900  
Fax: +44 (0) 1256 365955  
Email: [info@uk.metrologic.com](mailto:info@uk.metrologic.com)

#### **RUSSIA, MOSCOW**

Metrologic Russia  
Tel: +7 095 730 7424 Fax: +7 095 730 7425  
Email: [info@ru.metrologic.com](mailto:info@ru.metrologic.com)

### Copyright

© 2004 by Metrologic Instruments, Inc. All rights reserved. No part of this work may be reproduced, transmitted, or stored in any form or by any means without prior written consent, except by reviewer, who may quote brief passages in a review, or provided for in the Copyright Act of 1976.

Products and brand names mentioned in this document are trademarks of their respective companies.

# TABLE OF CONTENTS

---

Introduction	
Product Overview .....	1
Scanner and Accessories .....	2
Scanner Components .....	4
Maintenance .....	4
Caution and Serial Number Labels .....	5
Mounting Specifications .....	5
Installation	
RS232, RS232 TTL or Light Pen .....	6
IBM 46xx or OCIA .....	7
Keyboard Wedge .....	8
Stand-Alone Keyboard Wedge .....	9
Full Speed or Low Speed USB (Integrated) .....	10
Low Speed USB (External with MX009) .....	11
Notes for Laser Emulation .....	11
Scanner Operation	
Configurable Primary and Secondary Scan Pattern Modes .....	12
Configurable Button Functions .....	12
Sweet Spot Mode .....	17
Indicators	
Audible .....	18
Visual .....	19
Failure .....	20
Depth of Field Specifications	
Normal Scan Zone .....	21
Reduced Scan Zone .....	22
Depth of Field by Bar Code Element Width	
Normal Scan Zone .....	23
Reduced Scan Zone .....	24
IR Activation Range	
Normal .....	25
Reduced .....	25
Troubleshooting Guide .....	26
Design Specifications .....	30
Applications and Protocols .....	32
Default Settings - Communication Parameters .....	33
Upgrading the Flash ROM Firmware .....	38
Scanner and Cable Terminations .....	39
Laser and Product Safety .....	43
Limited Warranty .....	45
Patents .....	46
Index .....	47

## INTRODUCTION

---

Quantum™ *E* is a miniature, omni-directional scanning engine with optional single-line scanning capability. The self-contained device is fully enclosed eliminating the need for an external window or custom enclosure. It is designed for use in OEM equipment such as price lookup systems and kiosks. Its slim design makes it ideal for integration and use with flat-screens.

### Key Product Features

- Fully Automatic Scanning Operation
- PowerLink Compatible
- Data Editing
- 7 Beeper Tones
- Programmable Depth of Field
- Easy Programming
- Flash - Upgradeable Firmware
- User Configurable Pattern
- CodeGate®
- Sunrise 2005 Compliant

SCANNER	INTERFACE
IS3480-00	Laser Emulation, RS232 Transmit/Receive
IS3480-9	OCIA and RS232 Transmit/Receive
IS3480-11	IBM 46xx and Full RS232
IS3480-38	RS232 Low Speed USB, HID
IS3480-39	RS232 Low Speed USB, POS
IS3480-40	Full Speed USB
IS3480-41	RS232/Light Pen Emulation
IS3480-47	Keyboard Wedge, Stand-Alone Keyboard and RS232 Transmit/Receive
IS3480-102	RS232, TTL

**Scanner and Accessories**


BASIC KIT COMPONENTS	
Part No.	Description
IS3480	Quantum™ E Scanner
00-02026	IS3480 Installation and User's Guide *
00-02407	MetroSelect® Configuration Guide *
00-02090	IS3480 Supplemental Configuration Guide *

\* Guides also available for download at [www.metrologic.com](http://www.metrologic.com).

OPTIONAL ACCESSORIES	
Part No.	Description
AC to DC Power Transformer - Regulated 5.2VDC @ 650 mA output.	
45-45593	120V United States and Canada
45-45591	220V-240V Continental European
45-45592	220V-240V United Kingdom
46-46803	220V-240V Australia
46-46983	220V-240V China
<i>xxx - specifies connection to the host</i>	
54-54xxx-3 (default)	PowerLink cable with built in power jack 2.1m (7') straight cord, short strain relief
53-53xxx-3 (optional)	PowerLink cable with built in power jack 2.7m (9') coiled cord, long strain relief
** Contact a Metrologic customer service representative for additional information on the MVC and MX009 cable series and the host connections available.	
MVC**	Metrologic Voltage Converter Cable ±12VDC to +5.2VDC
MX009-2**	MX009 USB Converter Cable

Other items may be ordered for the specific protocol being used. To order additional items, contact the dealer, distributor or call Metrologic's customer service department at 1-800-436-3876.

**Scanner and Accessories**

OPTIONAL ACCESSORIES	
Part No.	Description
54-54002x-3	Keyboard Wedge PowerLink cable
54-54020x-3	Stand Alone Keyboard PowerLink cable
54-54213x-N-3	USB Locking Power/Communication Cable, 3 m (10') straight cord, short strain relief
54-54214x-N-3	Full Speed USB Locking Power/Communication Cable, 5 m (17') straight cord, short strain relief  This cable is for use with full speed USB (-40) interface only.
54-54235x-N-3	Low Speed USB Non-Locking Communication Cable 2.8 m (9.2') straight cord, short strain relief
49-00462	Utility Cable, 203 mm (8") Length
54-54249x-N-3	Communication Cable, Host end Not Terminated 203 mm (8") straight cord, short strain relief

REPLACEMENT PARTS	
Part No.	Description
36-01822x-3	Rubber Utility Seal

*Other items may be ordered for the specific protocol being used. To order additional items, contact the dealer, distributor or call Metrologic's customer service department at 1-800-436-3876.*

## Scanner Components

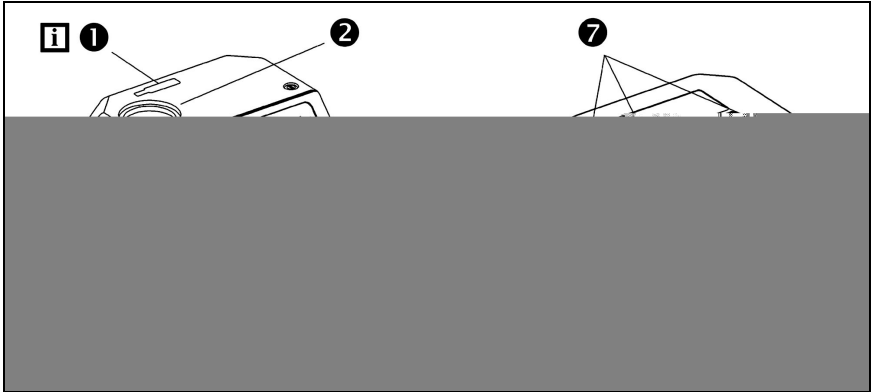


Figure 1. Scanner Components

ITEM NO.	DESCRIPTION
①	Utility Connector Located Under Rubber Seal <b>i</b> The rubber seal protecting the utility connector should only be removed if the utility connector is to be used.
②	10-Pin RJ45, Female Socket
③	Blue, White and Yellow LED Indicators
④	Red Output Window (Laser Aperture)
⑤	Pin Hole for Cable Release
⑥	Speaker
⑦	Three M2.5 x 0.45 Threaded Mounting Points
⑧	Two M2.5 x 0.45 Threaded Mounting Points
⑨	Button

## Maintenance

Smudges and dirt can interfere with the proper scanning of a bar code. Therefore, the output window will need occasional cleaning.

1. Spray glass cleaner onto a lint free, non-abrasive cleaning cloth.
2. Gently wipe the scanner window.



Caution and Serial Number Labels

 


Figure 2.

Mounting Specifications

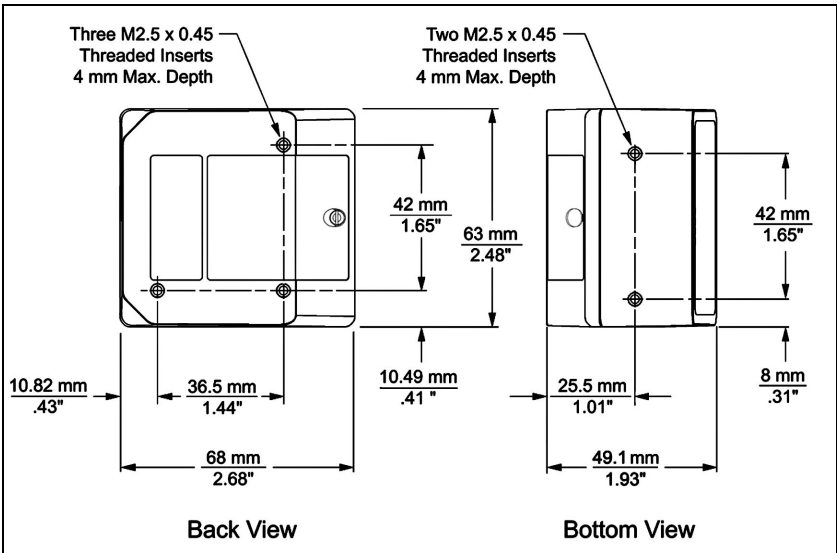


Figure 3.

## INSTALLATION

### RS232, RS232 TTL or Light Pen

1. Turn off the host device.
2. Plug the male 10-pin RJ45 end of the PowerLink cable into the 10-pin socket on the IS3480.
3. Connect the 9-pin female end of the PowerLink cable to the host device.

Note: Skip to step 6 if receiving power from the host device.

4. Plug the external power supply into the power jack on the PowerLink cable.



Check the AC input requirements of the power supply to make sure the voltage matches the AC outlet. The outlet must be located near the equipment and be easily accessible.

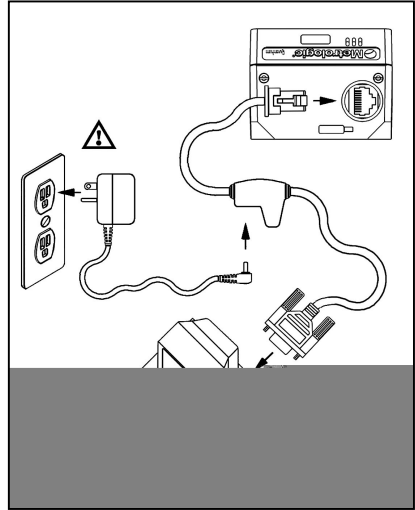


Figure 4.

5. Connect AC power to the transformer.
6. Turn on the host device.



When the scanner first receives power, the blue LED will turn on; the scanner will simultaneously beep once and flash the white LED.



Plugging the scanner into the serial port of the PC does not guarantee that scanned information will appear at the PC. A software driver and correct configuration setting are also required for proper communication to occur.



#### Caution

To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.

To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.

## INSTALLATION

### IBM 46xx or OCIA

1. Turn off the host device.
2. Plug the male 10-pin RJ45 end of the MVC cable into the 10-pin socket on the IS3480.
3. Connect the other end of the MVC cable to the host device.
4. Turn on the host device.

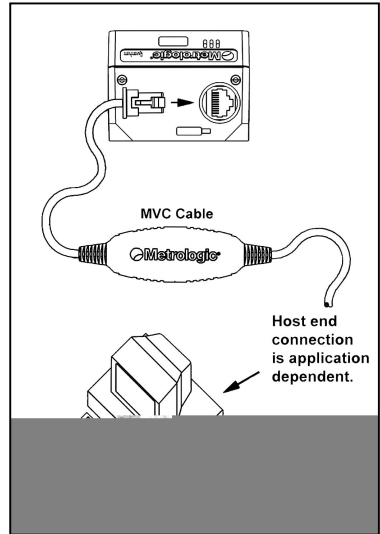


Figure 5.



When the scanner first receives power, the blue LED will turn on; the scanner will simultaneously beep once and flash the white LED.



Plugging the scanner into the serial port of the PC does not guarantee that scanned information will appear at the PC. A software driver and correct configuration setting are also required for proper communication to occur.



**Caution:**

To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.

To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.

## INSTALLATION

### Keyboard Wedge

1. Turn off the host device.
2. Plug the male 10-pin RJ45 end of the PowerLink cable into the 10-pin socket on the IS3480.
3. Disconnect the keyboard from the host device.
4. Connect the “Y” end of the PowerLink cable to the keyboard and the keyboard port on the host PC. If necessary use the male/female adapter cable supplied with the scanner for proper connections.
5. Plug the external power supply into the power jack on the PowerLink cable.



Check the AC input requirements of the power supply to make sure the voltage matches the AC outlet. The outlet must be located near the equipment and be easily accessible.

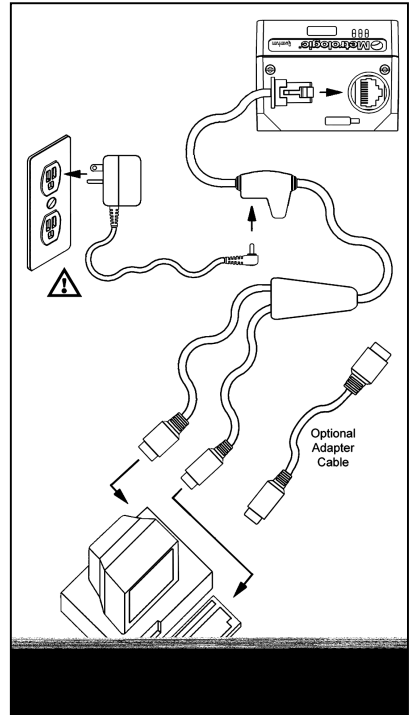


Figure 6.

6. Connect AC power to the transformer.
7. Turn on the host device.



Powering the IS3480 directly from the host device can sometimes cause interference with the operation of the scanner or the computer. Not all computers supply the same current through the keyboard port. For this reason, Metrologic recommends using an external power supply. For additional information contact a Metrologic customer service representative.



**Caution:**

To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.

To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.

## Stand-Alone Keyboard Wedge

1. Turn off the host device.
2. Plug the male 10-pin RJ45 end of the PowerLink cable into the 10-pin socket on the IS3480.
3. Connect the other end of the PowerLink cable to the keyboard port on the host device.
4. Plug the external power supply into the power jack on the PowerLink cable.



Check the AC input requirements of the power supply to make sure the voltage matches the AC outlet. The outlet must be located near the equipment and be easily accessible.

5. Connect AC power to the transformer.
6. Turn on the host device.

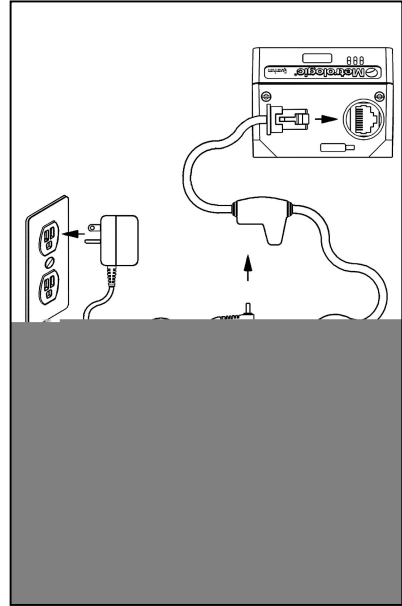


Figure 7.



Powering the IS3480 directly from the host device can sometimes cause interference with the operation of the scanner or the computer. Not all computers supply the same current through the keyboard port. For this reason, Metrologic recommends using an external power supply. For additional information contact a Metrologic customer service representative.



**Caution:**

To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.

To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.

### Full Speed or Low Speed USB (Integrated)

1. Turn off the host device.
2. Plug the male 10-pin RJ45 end of the USB PowerLink cable into the 10-pin socket on the IS3480.
3. Plug the other end of the USB interface cable into the host device's USB port.
4. Plug the external power supply in to the power jack on the USB PowerLink cable.



Check the AC input requirements of the power supply to make sure the voltage matches the AC outlet. The outlet must be located near the equipment and be easily accessible.

5. Connect AC power to the transformer.
6. Turn on the host device.

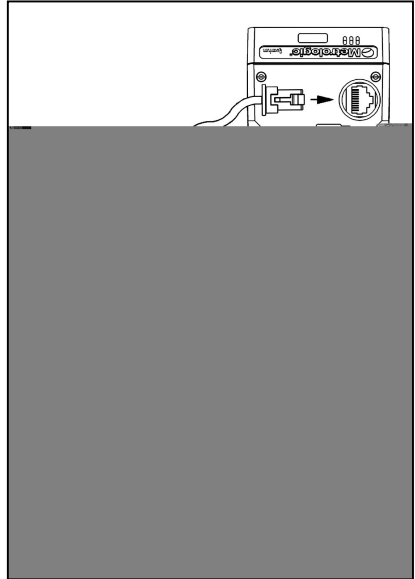


Figure 8.



Plugging the scanner into the USB port of the PC does not guarantee that scanned information will appear at the PC. A software driver and correct configuration setting are also required for proper communication to occur.



**Caution:**

To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.

To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.

### Notes for Low Speed USB (External with MX009)

Metrologic's MX009 USB cable is a device that converts serial RS232 formatted data to either USB Keyboard or USB Point-of-Sale communication protocol.

Please refer to the MX009 USB Converter Cable Programming Guide (MLPN 00-02574) supplied with your MX009 cable for detailed installation and programming guidelines.

### Notes for Laser Emulation

IS3480-00 Only

The IS3480-00 leaves the factory with the Laser Emulation Mode enabled. If the Recall Defaults bar code is scanned while reconfiguring the scanner the laser emulation mode will no longer be enabled.

Scan the following barcode to re-enable the laser emulation interface. This feature is only supported for IS3480-00 models.

Enable Laser Emulation Mode



### Configurable Primary and Secondary Scan Pattern Modes

There are two configurable scan pattern modes available with the IS3480.

- The **primary** scan pattern mode is the default scan pattern active when the scanner starts.
- The **secondary** scan pattern mode is activated by pressing the button located on the side of the scanner. This mode is also referred to as the button mode. For additional information on QuantumE's button modes and an example of each, please refer to *Configurable Button Functions* below.



The scanner returns to the primary scan pattern mode after a double click of the button or if the unit has not scanned a bar code for the duration of a pre-configured time limit.

Each pattern mode can be configured to use one of three scan patterns listed below. Please refer to the MetroSelect Configuration Guide for information on changing the default scan pattern settings.

- all scan lines on (omnidirectional reading)
- single-line (menu reading)
- horizontal raster



If CodeGate is *enabled*, it will apply to the secondary pattern mode when scanning. For detailed information on CodeGate and the button refer to the *Configurable Button Functions*.

### Configurable Button Functions

The button on the side of the IS3480 can be configured to function in one of four modes.

- Button *Click* Mode, with CodeGate Enabled (Default)
- Button *Click* Mode, with CodeGate Disabled
- Button *Hold* Mode, with CodeGate Enabled
- Button *Hold* Mode, with CodeGate Disabled

The following pages include examples of how the button will function when the unit has been configured to operate in each of the four button modes.

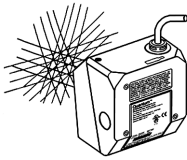


## Configurable Button Functions


### SECONDARY SCAN PATTERN BUTTON CLICK MODE WITH CODEGATE ENABLED




For illustration purposes the unit's primary scan pattern has been set to *all scan lines (omnidirectional reading)* and the secondary pattern has been set to *single-line (menu reading)* with a 10 second button click timeout configured.



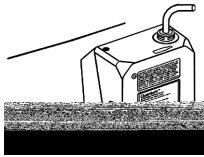
1. The primary scan pattern is active when the scanner starts.



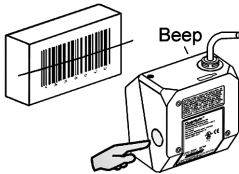2. To activate the secondary scan pattern, **press and release** the button.



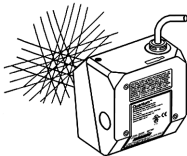3. To decode and transmit the bar code, **press and release** the button. The scanner will beep once.




4. To reactivate the primary scan pattern, **double click** the button or after 10-seconds of no-scanning the unit will automatically reactivate the primary pattern.

## Configurable Button Functions

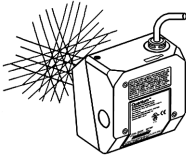
### SECONDARY SCAN PATTERN BUTTON CLICK MODE WITH CODEGATE DISABLED




For illustration purposes the unit's primary scan pattern has been set to *all scan lines (omnidirectional reading)* and the secondary pattern has been set to *single-line (menu reading)* with a 10 second button click timeout configured.



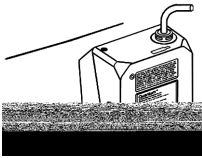
1. The primary scan pattern is active when the scanner starts.



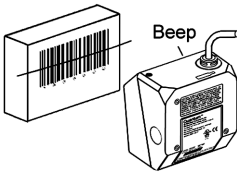2. To activate the secondary scan pattern, **press and release** the button.



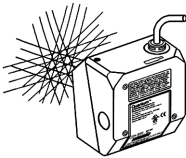3. The unit will beep once as it decodes and transmits the bar code.




4. To reactivate the primary scan pattern, **double click** the button or after 10-seconds of no-scanning the unit will automatically reactivate the primary pattern.

Configurable Button Functions


SECONDARY SCAN PATTERN  
BUTTON HOLD MODE WITH CODEGATE ENABLED



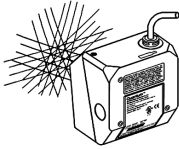
For illustration purposes the unit's primary scan pattern has been set to *all scan lines (omnidirectional reading)* and the secondary pattern has been set to *single-line (menu reading)* with a 10 second button click timeout configured.



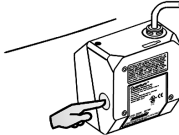
1. The primary scan pattern is active when the scanner starts.



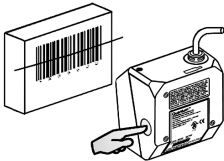
2. To activate the secondary scan pattern, **press and hold** the button.



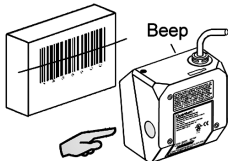
3. To scan the bar code, **align** the laser line over the bar code while continuing to **hold** down the button.



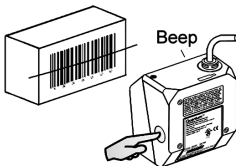4. To transmit the bar code, **release** the button. The scanner will beep once.



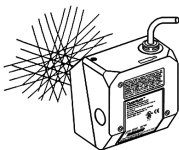5. To scan and transmit additional bar codes, **repeat** steps 2 through 4.




6. The primary scan pattern will automatically reactivate after the button is released and no bar code is present in the scan field.

## Configurable Button Functions

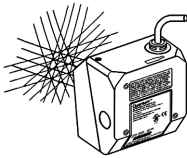
### SECONDARY SCAN PATTERN BUTTON HOLD MODE WITH CODEGATE DISABLED




For illustration purposes the unit's primary scan pattern has been set to *all scan lines (omnidirectional reading)* and the secondary pattern has been set to *single-line (menu reading)* with a 10 second button click timeout configured.



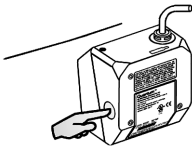
1. The primary scan pattern is active when the scanner starts.



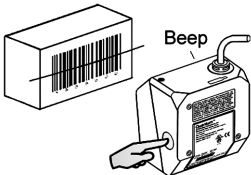2. To activate the secondary scan pattern, **press and hold** the button.



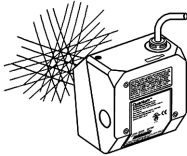
3. To scan and transmit the bar code, **align** the laser line over the bar code while continuing to **hold** down the button. The scanner will beep once to indicate the bar code has been scanned and transmitted.



4. The primary scan pattern will automatically reactivate after the button is released and no bar code is present in the scan field.

### Sweet Spot Mode

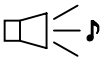
The *sweet spot mode* is used to determine where the maximum read rate area or “sweet spot” is located for a specific bar code type. When activated this mode provides visual and audible feedback indicating how the scanner is scanning.

Number of Illuminated LEDs	Beeper Pitch		% of Maximum Read Rate
4	high		81 - 100%
3			61 - 80%
2			41 - 60%
1			21 - 40%
0	low		0 - 20%

For further information on the sweet spot mode and instructions on how to enable it, refer the MetroSelect Configuration Guide (00-02407).

### Audible Indicators

When the IS3480 is in operation, it can provide audible feedback. These sounds indicate the status of the scanner. Eight settings are available for the tone of the beep (normal, 6 alternate tones and no tone). For instruction on how to change the tone of the beeper, refer to the MetroSelect Configuration Guide (00-02407).



#### One Beep

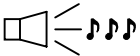
When the scanner *first* receives power the white LED will flash, the blue LED will turn on and the scanner will beep once (*the white LED will remain on for the duration of the beep*). The scanner is now ready to scan.

When the scanner *successfully* reads a bar code, the white LED will flash and the scanner beeps once (*if configured to do so*). If the scanner does not beep once and the white light does not flash, then the bar code has *not* been successfully read.



#### Razzberry Tone

This is a failure indicator. Refer to *Failure Mode Indicators* on page 20.




#### Three Beeps - during operation

When placing the scanner in configuration mode, the white LED will flash while the scanner simultaneously beeps three times. The white and blue LEDs will continue to flash until the unit exits configuration mode. Upon exiting configuration mode, the scanner will beep three times and the white LED will stop flashing.

When configured, 3 beeps can also indicate a communications timeout during normal scanning mode.

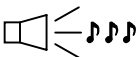When using one-code-programming, the scanner will beep three times: the current selected tone, followed by a short pause, a high tone and a low tone. This tells the user that the single configuration bar code has *successfully* configured the scanner.



#### Three Beeps - on power up

This is a failure indicator. Refer to *Failure Mode Indicators* on page 20.

### Visual Indicators

There are four LEDs located on the top of the IS3480. When the scanner is on, the flashing or constant illumination of the LEDs indicates the status of the current scan and the scanner.

#### **No LEDs**

The LEDs will not be illuminated if the scanner is not receiving power from the host or transformer. They are also not illuminated when all lasers are turned off for any reason.

#### **Steady Blue**

When the laser is active, the blue LED is illuminated. The blue LED will remain illuminated until the laser is deactivated.

#### **Steady Blue and Single White Flash**

When the scanner successfully reads a bar code, the white LED will flash and the scanner will beep once. If the white LED does not flash or the scanner does not beep once, then the bar code has not been successfully read.

#### **Steady White and Blue**

After a successful scan, the scanner transmits the data to the host device. Some communication modes require that the host inform the scanner when data is ready to be received. If the host is not ready to accept the information, the scanner's white LED will remain on until the data can be transmitted.

#### **Alternating Blue and White Flashes**

This indicates the scanner is in program mode. A razzberry tone indicates that an invalid bar code has been scanned in this mode.

#### **Steady White, Blue Off**

This indicates the scanner may be waiting for communication from the host.

### **Failure Mode Indicators**

#### **Flashing Blue and One Razzberry Tone**

This indicates that the scanner has experienced a laser subsystem failure. Return the unit to an authorized service center for repair.

#### **Flashing Blue and White and Two Razzberry Tones**

This indicates that the scanner has experienced a motor failure. Return the unit to an authorized service center for repair.

#### **Continuous Razzberry Tone with Both LEDs Off**

If, upon power up, the scanner emits a continuous razzberry tone, then the scanner has an electronic failure. Return the unit to an authorized service center for repair.

#### **Three Beeps - On Power Up**


If the scanner beeps 3 times on power up then, the nonvolatile memory that holds the scanner configuration has failed. Return the unit to an authorized service center for repair.



### Depth of Field Specifications\*

#### Normal Scan Zone

*Specifications are based on a 0.33 mm (13 mil) bar code.*

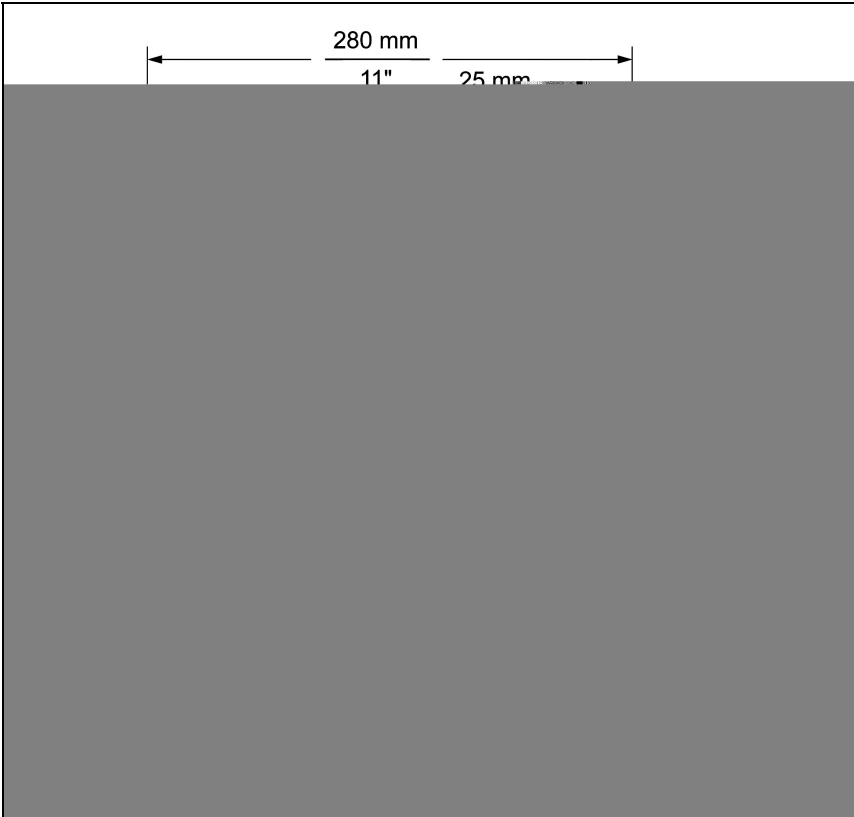


*Figure 9. Normal Depth of Field*

*\* All specifications are subject to change without notice.*

### Depth of Field Specifications\*

#### Reduced Scan Zone

*Specifications are based on a 0.33 mm (13 mil) bar code.*

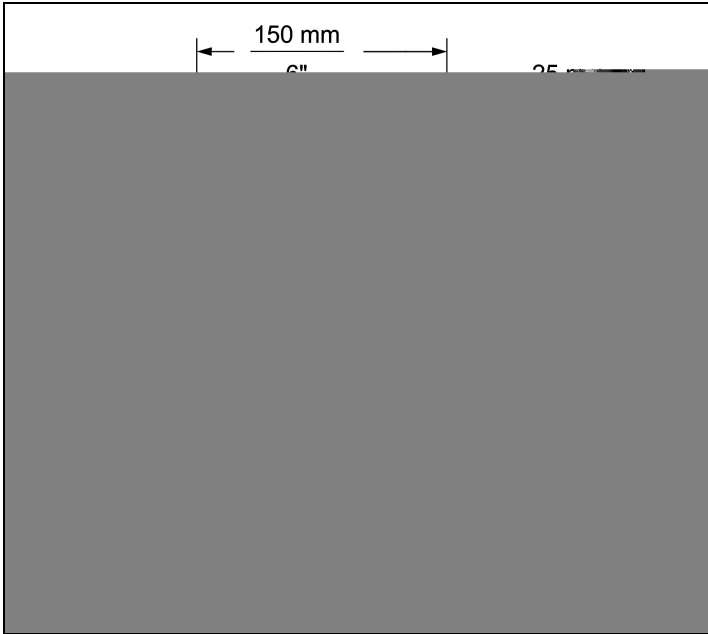


*Figure 10. Reduced Depth of Field*

*\* All specifications are subject to change without notice.*

**Depth of Field by Bar Code Element Width\***

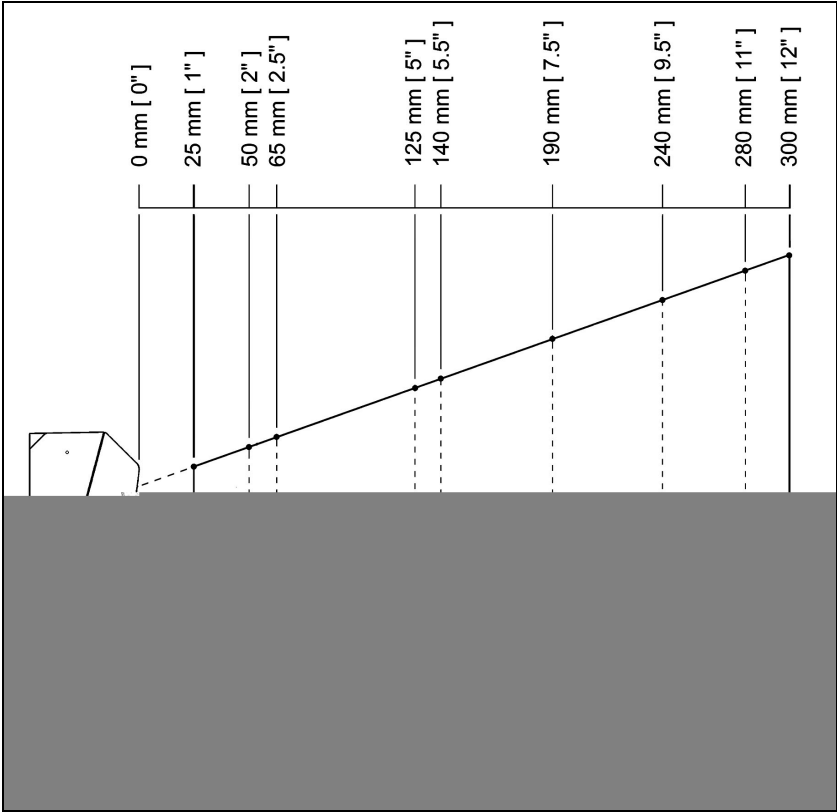Normal Scan Zone




MINIMUM BAR CODE ELEMENT WIDTH						
	A	B	C	D	E	F
<b>mm</b>	.13	.15	.19	.25	.33	.66
<b>mils</b>	5.2	5.7	7.5	10	13	26

Figure 11. Normal Scan Zone by Bar Code Element Width

\* All specifications are subject to change without notice.

**Depth of Field by Bar Code Element Width\***

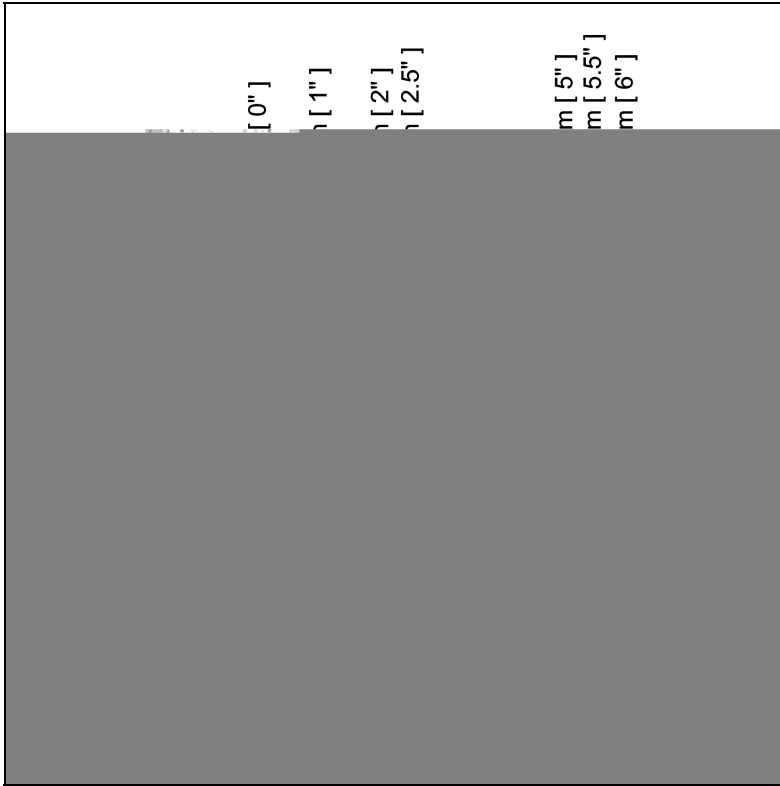Reduced Scan Zone



MINIMUM BAR CODE ELEMENT WIDTH						
	A	B	C	D	E	F
<b>mm</b>	.13	.15	.19	.25	.33	.66
<b>mils</b>	5.2	5.7	7.5	10	13	26

Figure 12. Reduced Scan Zone by Bar Code Element Width

\* All specifications are subject to change without notice.

**IR Activation Range\***

Normal

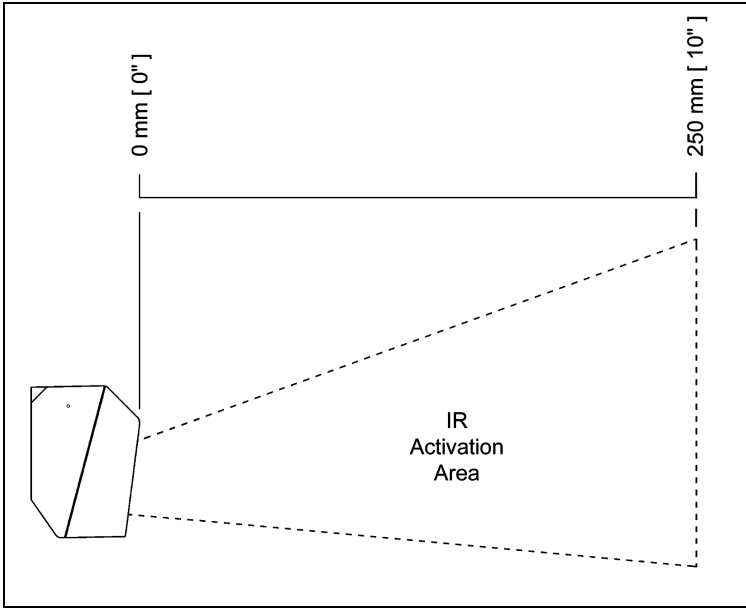


Figure 13. Normal IR Activation Range

Reduced

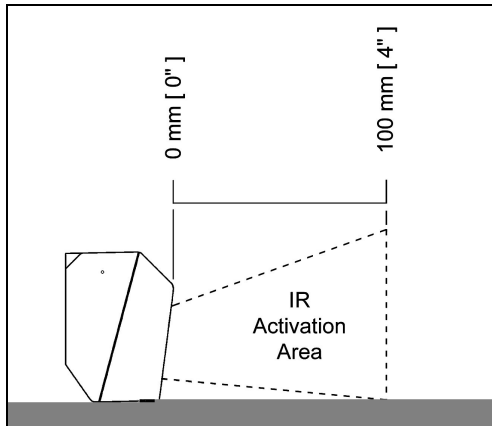


Figure 14. Reduced IR Activation Range

\* All specifications are subject to change without notice.

## TROUBLESHOOTING GUIDE

The following guide is for reference purposes only. Contact a Metrologic representative at 1-800-ID-METRO or 1-800-436-3876 to preserve the limited warranty terms on page 45.

Symptoms	Possible Cause(s)	Solution
<i>All Interfaces</i>		
The unit has no LEDs, beeper or motor spin.	No power is being supplied to the scanner.	Check the transformer, outlet and power strip. Make sure the cable is plugged into the scanner.
The unit has no LEDs and / or beeper.	No power is being supplied to the scanner from host.	Some host systems cannot supply enough current to power the IS3480. Use the power supply included with the scanner.
There are multiple scans upon presentation of code.	The same symbol timeout is set too short.	Adjust the same symbol timeout for a longer time increment.
The unit powers up but does not beep.	The beeper is disabled.	Enable the beeper.
	No tone is selected.	Select a tone.
	The unit is trying to scan a particular symbology that is not enabled.	UPC/EAN, Code 39, Interleaved 2 of 5, Code 93, Code 128 and Codabar are enabled by default. Verify that the type of bar code being read has been selected

# TROUBLESHOOTING GUIDE

Symptoms	Possible Cause(s)	Solution
<i>All Interfaces</i>		
The unit scans a bar code, but locks up after the first scan ( <i>the white LED stays on</i> ).	The scanner is configured to support some form of host handshaking but is not receiving the signal.	If the scanner is setup to support ACK/NAK, RTS/CTS, XON/XOFF or D/E, verify that the host cable and host are supporting the handshaking properly.
The unit scans but the data transmitted to the host is incorrect.	The scanner's data format does not match the host system requirements.	Verify that the scanner's data format matches the format required by the host. Make sure that the scanner is connected to the proper host port.
Scanner beeps at some bar codes and NOT for others of the same bar code symbology.	The print quality of the bar code is suspect.	The type of printer and/or the printer settings could be the problem.
	The aspect ratio of the bar code is out of tolerance.	Check the print mode or change the printer settings. For example, change to econo mode or high speed.
	The bar code may have been printed incorrectly.	Check if it is a check digit, character or border problem.
	The scanner is not configured correctly for the type of bar code.	Check if check digits are set properly.
	The minimum symbol length setting does not work with the bar code.	Check if the correct minimum symbol length is set.

## TROUBLESHOOTING GUIDE

Symptoms	Possible Cause(s)	Solution
<i>All Interfaces</i>		
During power up the unit beeps 3 times.	There is a non-volatile RAM failure.	Contact a Metrologic service representative.
During power up the unit razzes continuously.	There is a RAM or ROM failure.	Contact a Metrologic service representative.
During power up the unit razzes once and the blue LED flashes.	There is a VLD failure.	Contact a Metrologic service representative.
During power up the unit razzes twice and both LEDs flash.	There is a scanner motor failure.	Contact a Metrologic service representative.
<i>RS232 Only</i>		
The unit powers up OK and scans OK but does not communicate properly to the host.	<p>The com port at the host is not working or is not configured properly.</p> <p>The cable is not connected to the proper com port.</p> <p>The com port is not operating properly.</p>	Check to make sure that the baud rate and parity of the scanner and the communication port match and that the program is looking for RS232 data.



## TROUBLESHOOTING GUIDE

---

<b>Symptoms</b>	<b>Possible Cause(s)</b>	<b>Solution</b>
<i>RS232 Only</i>		

The host is receiving data but the data does not look correct.

The scanner and host may not be configured for the same inter

# DESIGN SPECIFICATIONS

		<b>IS3480</b>	
<b>Operational</b>			
Light Source:	Visible Laser Diode (VLD) @ 650 nm		
Laser Power:	1.1 mW		
Normal Depth of Field:	25 mm - 280 mm (1" - 11")	0.33 mm (13 mil)	
Reduced Depth of Field:	25 mm - 150 mm (1" - 6")	bar code	
<i>Omni Scan</i>			
Scan Speed:	1650 scan lines per second		
No. of Scan Lines:	20		
<i>Single-Line</i>			
Scan Speed:	80 scan lines per second		
No. of Scan Lines:	1		
Motor Speed:	5000 RPM		
Min Bar Width:	0.127 mm (5.0 mil)		
Decode Capability:	All standard 1-D bar codes including RSS-14, RSS-Expanded, and RSS-14 Limited		
System Interfaces:	RS232, Keyboard Wedge, Stand-Alone Keyboard, Light Pen Emulation, IBM468x/469x, USB (low speed and full speed), Laser Emulation, RS232 TTL		
Print Contrast:	35% minimum reflectance difference		
No. Characters Read:	Up to 80 data characters Maximum number will vary based on symbology and density.		
Beeper Operation:	7 tones or no beep		
Indicators (LED):	Blue = laser on, ready to scan		
	White = good read, decoding		
<b>Mechanical</b>			
Width:	63 mm (2.48")		
Depth:	50 mm (1.97")		
Height:	68 mm (2.68")		
Weight:	6 oz (170 g)		

*Specifications subject to change without notice.*

# DESIGN SPECIFICATIONS

IS3480	
<b>Electrical</b>	
Voltage Supply:	5VDC $\pm$ 0.25V
Operating Power:	1.375 W
Standby Power:	1.0 W
Operating Current:	275 mA typical at 5VDC
Standby Current:	200 mA typical at 5VDC
DC Transformers:	Class II; 5.2VDC @ 650 mA
Laser Class 1:	IEC 60825-1:1993+A1:1997+A2:2001 EN 60825-1:1994+A11:1996+A2:2001
EMC:	FCC, ICES-003 & EN 55022 Class A
<b>Environmental</b>	
Operating Temperature:	-20°C to 40°C (-4°F to 104°F)
Storage Temperature:	-40°C to 60°C (-40°F to 140°F)
Humidity:	5% to 95% relative humidity, non-condensing
Contaminants:	Sealed to resist airborne particulate contaminants
Ventilation:	None required

*Specifications subject to change without notice.*

## APPLICATIONS AND PROTOCOLS

---

The model number on each scanner includes the scanner number and factory default communications protocol.

SCANNER	VERSION IDENTIFIER	COMMUNICATION PROTOCOL(S)
IS3480	00	Laser Emulation and RS232 Transmit/Receive
	9	OCIA and RS232 Transmit/Receive
	11	IBM 46XX and Full RS232C
	38	RS232 Low Speed USB, HID
	39	RS232 Low Speed USB, POS
	40	Full-Speed USB
	41	Full RS232C/Light Pen Emulation
	47	Keyboard Wedge, Stand-Alone Keyboard and RS232 Transmit/Receive
	102	RS232, <u>T</u> ransistor to <u>T</u> ransistor <u>L</u> ogic (TTL)

The IS3480 scanner with Built-in PC Keyboard Wedge Interface is designed to be used for keyboard emulation only. Many RS232 programmable functions (e.g. formatting) available in other Metrologic scanners are also available as keyboard wedge functions.

The following are the most important selectable options specific to the keyboard wedge.

### Keyboard Type

- \*\* AT (includes IBM® PS2 models 50, 55, 60, 80)
- XT
- IBM PS2 (includes models 30, 70, 8556)

### Keyboard Country Type

- |           |           |                  |
|-----------|-----------|------------------|
| • USA **  | • German  | • Spanish        |
| • Belgium | • Italian | • Swiss          |
| • French  | • Japan   | • United Kingdom |

\*\* Default setting. For a complete list of default settings, see *Default Settings - Communication Parameters* starting on page 33 of this guide. Refer to the MetroSelect® Programming Guide (MLPN 00-02407) or MetroSet2's help files for information on how to change the default settings.

## DEFAULT SETTINGS - COMMUNICATION PARAMETERS

---

Many functions of the scanner can be "programmed" - that is enabled or disabled. The scanner is shipped from the factory programmed to a set of default conditions. The default parameter of the scanner has an asterisk ( \* ) in the charts on the following pages. If an asterisk is not in the default column then the default setting is Off or Disabled. Every interface does not support every parameter. If the interface supports a parameter listed in the charts on the following pages, a check mark (✓) will appear.

PARAMETER	DEFAULT	OCIA	USB	RS232* OR RS232 TTL	LIGHT PEN	IBM 46XX	KBW	LASER EMULATION
UPC/EAN	*	✓	✓	✓	✓	✓	✓	✓
Code 128	*	✓	✓	✓	✓	✓	✓	✓

## DEFAULT SETTINGS - COMMUNICATION PARAMETERS

PARAMETER	DEFAULT	OCIA	USB	RS232* OR RS232 TTL	LIGHT PEN	IBM 46XX	KBW	LASER EMULATION
Expanded ID "je0"	*	✓	✓	✓	✓	✓	✓	✓
RSS Limited Enable		✓	✓	✓	✓	✓	✓	✓
RSS Limited ID "je0"	*	✓	✓	✓	✓	✓	✓	✓
RSS Limited App ID "01"	*	✓	✓	✓	✓	✓	✓	✓
RSS Limited Check Digit	*	✓	✓	✓	✓	✓	✓	✓
Bars High as Code 39	*				✓			✓
Spaces High as Code 39					✓			✓
Bars High as Scanned					✓			✓
Spaces High as Scanned					✓			✓
DTS/SIEMENS		✓						

## DEFAULT SETTINGS - COMMUNICATION PARAMETERS

PARAMETER	DEFAULT	OCIA	USB	RS232* OR RS232 TTL	LIGHT PEN	IBM 46XX	KBW	LASER EMULATION
Transmit UPC-A Check Digit	*	✓	✓	✓	✓	✓	✓	✓
Transmit UPC-E Check Digit			✓	✓	✓	✓	✓	✓
Expand UPC-E		✓	✓	✓	✓	✓	✓	✓
Convert UPC-A to EAN-13		✓	✓	✓		✓	✓	
Transmit Lead Zero on UPC-E		✓	✓	✓	✓	✓	✓	✓
Convert EAN-8 to EAN-13		✓	✓	✓		✓	✓	
Transmit UPC-A Number System	*	✓	✓	✓	✓	✓	✓	✓
Transmit UPC-A Manufacturer ID#	*	✓	✓	✓	✓	✓	✓	✓
Transmit UPC-A Item ID#	*	✓	✓	✓	✓	✓	✓	✓
Transmit Codabar Start/Stop Characters		✓	✓	✓		✓	✓	
CLSI Editing (Enable)		✓	✓	✓		✓	✓	
Transmit Mod 43 Check Digit on Code 39		✓	✓	✓		✓	✓	
Transmit Code 39 Stop/Start Characters		✓	✓	✓		✓	✓	
Transmit Mod 10/ITF		✓	✓	✓		✓	✓	
Transmit MSI-Plessey Check Characters		✓	✓	✓		✓	✓	
Parity	Space			✓				
Baud Rate	9600			✓				
8 Data Bits				✓				
7 Data Bits	*			✓				
Stop Bits	2			✓				
Transmit Sanyo ID Characters			✓	✓			✓	

## DEFAULT SETTINGS - COMMUNICATION PARAMETERS

PARAMETER	DEFAULT	OCIA	USB	RS232* OR RS232 TTL	LIGHT PEN	IBM 46XX	KBW	LASER EMULATION
Nixdorf ID			✓	✓			✓	
LRC Enabled			✓	✓			✓	
UPC Prefix			✓	✓			✓	
UPC Suffix			✓	✓			✓	
Transmit AIM ID Characters			✓	✓			✓	
STX Prefix			✓	✓			✓	
ETX Suffix			✓	✓			✓	
Carriage Return	*		✓	✓			✓	
Line Feed - disabled by default in KBW	*		✓	✓			✓	
Tab Prefix			✓	✓			✓	
Tab Suffix			✓	✓			✓	
“DE” Disable Command				✓				
“FL” Laser Enable Command				✓				
DTR Handshaking Support				✓				
RTS/CTS Handshaking				✓				
Character RTS/CTS	*			✓				
Message RTS/CTS				✓				
XON/XOFF Handshaking				✓				
ACK/NAK				✓				
Two Digit Supplements		✓	✓	✓	as code 39	✓	✓	as code 39
Five Digit Supplements		✓	✓	✓	as code 39	✓	✓	as code 39
Bookland		✓	✓	✓	as code 39	✓	✓	as code 39
977 (2 digit) Supplemental Requirement		✓	✓	✓	✓	✓	✓	✓



## DEFAULT SETTINGS - COMMUNICATION PARAMETERS

PARAMETER	DEFAULT	OCIA	USB	RS232* OR RS232 TTL	LIGHT PEN	IBM 46XX	KBW	LASER EMULATION
Supplements are not Required	*	✓	✓	✓	✓	✓	✓	✓
Two Digit Redundancy	*	✓	✓	✓	✓	✓	✓	✓
Five Digit Redundancy		✓	✓	✓	✓	✓	✓	✓
100 msec to Find Supplement Programmable in 100msec steps (MAX 800 msec)	*	✓	✓	✓	✓	✓	✓	✓
Coupon Code 128		✓	✓	✓	as code 39	✓	✓	as code 39
Programmable Code Lengths	7 avail.	✓	✓	✓	✓	✓	✓	✓
Programmable Prefix Characters	10 avail.		✓	✓			✓	
Programmable Suffix Characters	10 avail.		✓	✓			✓	
Prefixes for individual Code Types			✓	✓			✓	
Editing		✓	✓	✓	✓	✓	✓	✓
Inter Scan-Code Delay Programmable (100 µsec steps)	800 µsec						✓	
Function/Control Key Support							✓	
Minimum Element Width Programmable in 5.6 µsec steps	1 msec				✓			✓
Normal Depth of Field	*	✓	✓	✓	✓	✓	✓	✓
Reduced Depth of Field		✓	✓	✓	✓	✓	✓	✓
Sweet Spot Mode		✓	✓	✓	✓	✓	✓	✓

## UPGRADING THE FLASH ROM FIRMWARE

---

The MetroSet2 program is a functional component of Metrologic's new line of Flash- based scanners. This program allows the user of a Metrologic scanner to quickly upgrade to a new or custom version of firmware. It requires the use of a personal computer running Windows 95 or greater and the use of a serial port. The user merely connects the scanner to a serial port on the PC, launches the MetroSet2 program, and blasts off to new software upgrades.

Each IS3480, regardless of the version number or communication protocol, can be upgraded. In other words, all RS232 (-41), keyboard wedge (-47), light pen (-41), laser emulation (-00), OCIA (-9), IBM 468X/469X (-11), low speed HID USB (-38), low speed POS USB (-39), integrated full speed USB (-40), and RS232, TTL (-102) units can be upgraded. To upgrade all units, a power supply and PowerLink cable (MLPN 54-54014) are required.



RS232 units can be upgraded using the standard PowerLink cable (MLPN 53-53xxx-3 or 54-54xxx-3).

The program guides the user with its simplistic one click approach. The user must first select the file. Once the file is selected and verified, the scanner is ready to be upgraded. Press the "Flash Scanner" button to upgrade the scanner. The unit will go into a "flash mode" – both the blue and white LEDs will be on. The user can follow the progress of the upgrade by watching the screen for details. When the upgrade is complete, the scanner will respond with its normal one beep on power up. If two beeps occur, the scanner did not upgrade properly. Contact a Metrologic service representative for additional assistance.



MetroSet2 incorporates all functions that were previously in Meteor.

**Scanner Pinout Connections**

IS3480-102 RS232, TTL	
Pin	Function
1	Ground
2	Transmit (Full RS232)
3	Receive (Full RS232)
4	RTS Output (TTL RS232)
5	CTS Input (TTL RS232)
6	DTR Input (TTL RS232)
7	Transmit (TTL RS232)

# SCANNER AND CABLE TERMINATIONS

IS3480-11 IBM 468X/469X	
Pin	Function
1	Ground
2	RS232 Transmit Output
3	RS232 Receive Input
4	RTS Output
5	CTS Input
6	DTR Input
7	IBM B-Transmit
8	IBM A+ Receive
9	+5VDC
10	Shield Ground

IS3480-9 OCIA	
Pin	Function
1	Ground
2	RS232 Transmit Output
3	RS232 Receive Input
4	RDATA
5	RDATA Return
6	Clock In
7	Clock Out
8	Clock in Return/ Clock out Rtrn
9	+5VDC
10	Shield Ground

IS3480-00 Laser Emulation	
Pin	Function
1	Ground
2	RS232 Transmit Output
3	RS232 Receive Input
4	Flip Sense/Start of Scan Output
5	Proximity Detect/Trigger Emulation Output
6	Scan/Laser Enable Input
7	Reserved
8	Data Out
9	+5VDC
10	Shield Ground

Insulation Displacement Connector (IDC), 6-pin Utility Connector	
Pin	Function
1	Laser On Indicator (Output)
2	Good Read Indicator (Output)
3	Beeper
4	Activate Button (Input)
5	General Purpose (Output)
6	Ground

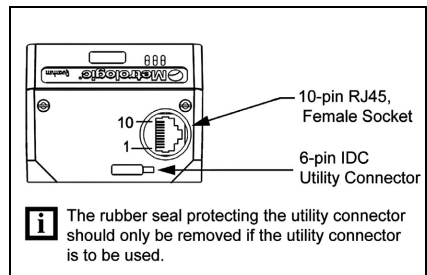


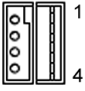



Figure 16.

**Cable Connector Configurations (Host End)**



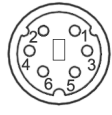
<p>“Standard” PowerLink Cable                      53-53xxx-3 <i>coiled</i> or                      54-54xxx-3 <i>straight</i></p>		
Pin	Function	
1	Shield Ground	
2	RS232 Transmit Output	
3	RS232 Receive Input	
4	DTR Input/Light Pen Source	
5	Power/Signal Ground	
6	Light Pen Data	
7	CTS Input	
8	RTS Output	
9	+5VDC	

<p>USB Power/Communication Cable                      54-54213x-N-3, 54-540214x-N-3 or                      54-54235x-N-3</p>			
Pin	Function		
1	PC +5V/V_USB		
2	D-		
3	D+		
4	Ground		




Shield:

Stand A  
 C.

**Cable Connector Configurations (Host End)**

Keyboard Wedge PowerLink Cable 54-54002x-3		
<b>Pin</b>	<b>Function</b>	 <p>5-Pin DIN, Female</p>
1	Keyboard Clock	
2	Keyboard Data	
3	No Connect	
4	Power Ground	
5	+5 Volts DC	 <p>6-Pin DIN, Male</p>
<b>Pin</b>	<b>Function</b>	
1	PC Data	
2	No Connect	
3	Power Ground	
4	+5 Volts DC	
5	PC Clock	
6	No Connect	

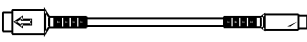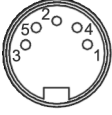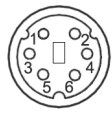Metrologic will supply an adapter cable with a 5-pin DIN male connector on one end and a 6-pin mini DIN female connector on the other. According to the termination required, connect the appropriate end of the adapter cable to the PowerLink cable, leaving the necessary termination exposed for connecting to the keyboard and the keyboard port on the PC.

Keyboard Wedge Adapter Cable		
<b>Pin</b>	<b>Function</b>	 <p>5-Pin DIN, Male</p>
1	PC Clock	
2	PC Data	
3	No Connect	
4	Power Ground	
5	+5 Volts DC	 <p>6-pin Mini DIN, Female</p>
<b>Pin</b>	<b>Function</b>	
1	Keyboard Data	
2	No Connect	
3	Power Ground	
4	+5 Volts DC	
5	Keyboard Clock	
6	No Connect	

## LASER AND PRODUCT SAFETY

---

### **Caution**

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser light exposure. Under no circumstances should the customer attempt to service the laser scanner. Never attempt to look at the laser beam, even if the scanner appears to be nonfunctional. Never open the scanner in an attempt to look into the device. Doing so could result in hazardous laser light exposure. The use of optical instruments with the laser equipment will increase eye hazard.

### **Atención**

La modificación de los procedimientos, o la utilización de controles o ajustes distintos de los especificados aquí, pueden provocar una luz de láser peligrosa. Bajo ninguna circunstancia el usuario deberá realizar el mantenimiento del láser del escáner. Ni intentar mirar al haz del láser incluso cuando este no esté operativo. Tampoco deberá abrir el escáner para examinar el aparato. El hacerlo puede conllevar una exposición peligrosa a la luz de láser. El uso de instrumentos ópticos con el equipo láser puede incrementar el riesgo para la vista.

### **Attention**

L'emploi de commandes, réglages ou procédés autres que ceux décrits ici peut entraîner de graves irradiations. Le client ne doit en aucun cas essayer d'entretenir lui-même le scanner ou le laser. Ne regardez jamais directement le rayon laser, même si vous croyez que le scanner est inactif. N'ouvrez jamais le scanner pour regarder dans l'appareil. Ce faisant, vous vous exposez à une rayonnement laser qui est dangereux. L'emploi d'appareils optiques avec cet équipement laser augmente le risque d'endommagement de la vision.

### **Achtung**

Die Verwendung anderer als der hier beschriebenen Steuerungen, Einstellungen oder Verfahren kann eine gefährliche Laserstrahlung hervorrufen. Der Kunde sollte unter keinen Umständen versuchen, den Laser-Scanner selbst zu warten. Sehen Sie niemals in den Laserstrahl, selbst wenn Sie glauben, daß der Scanner nicht aktiv ist. Öffnen Sie niemals den Scanner, um in das Gerät hineinzusehen. Wenn Sie dies tun, können Sie sich einer gefährlichen Laserstrahlung aussetzen. Der Einsatz optischer Geräte mit dieser Laserausrüstung erhöht das Risiko einer Sehschädigung.

### **Attenzione**

L'utilizzo di sistemi di controllo, di regolazioni o di procedimenti diversi da quelli descritti nel presente Manuale può provocare delle esposizioni a raggi laser rischiose. Il cliente non deve assolutamente tentare di riparare egli stesso lo scanner laser. Non guardate mai il raggio laser, anche se credete che lo scanner non sia attivo. Non aprite mai lo scanner per guardare dentro l'apparecchio. Facendolo potete esporVi ad una esposizione laser rischiosa. L'uso di apparecchi ottici, equipaggiati con raggi laser, aumenta il rischio di danni alla vista.



# LASER AND PRODUCT SAFETY

---

## Notices

This equipment has been tested and found to comply with limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at their own expense. Any unauthorized changes or modifications to this equipment could void the user's authority to operate this device.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Notice

This Class A digital apparatus complies with Canadian ICES-003.

### Remarque

Cet appareil numérique de la classe A, conformément à la norme NMB-003 du Canada.

## European Standard

### Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## Funkstöreigenschaften nach EN 55022:1998

### Warnung!

Dies ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funkstörungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen durchzuführen.

## Standard Europeo

### Attenzione

Questo è un prodotto di classe A. Se usato in vicinanza di residenze private potrebbe causare interferenze radio che potrebbero richiedere all'utilizzatore opportune misure.

### Attention

Ce produit est de classe "A". Dans un environnement domestique, ce produit peut être la cause d'interférences radio. Dans ce cas l'utilisateur peut être amené à prendre les mesures adéquates.



## LIMITED WARRANTY

---

The IS3480 Quantum™ E scanners are manufactured by Metrologic at its Blackwood, New

## PATENTS

---

### Patent Information

This METROLOGIC product may be covered by one or more of the following U.S. Patents:

U.S. Patent No.;

5,216,232; 5,260,553; 5,340,971; 5,424,525; 5,484,992; 5,525,789;  
5,528,024; 5,557,093; 5,616,908; 5,627,359; 5,637,852; 5,661,292;  
5,777,315; 5,789,730; 5,789,731; 5,811,780; 5,828,048; 5,844,227;  
5,925,870; 6,029,894; 6,098,885; 6,209,789; 6,257,492; 6,286,760;  
6,299,067; 6,347,743; 6,412,696; 6,460,767;

No license right or sublicense is granted, either expressly or by implication, estoppel, or otherwise, under any METROLOGIC or third party intellectual property rights (whether or not such third party rights are licensed to METROLOGIC), including any third party patent listed above, except for an implied license only for the normal intended use of the specific equipment, circuits, and devices represented by or contained in the METROLOGIC products that are physically transferred to the user, and only to the extent of METROLOGIC'S license rights and subject to any conditions, covenants and restrictions therein.

Other worldwide patents pending.

# INDEX

---

## A

AC ..... 2, 6–10  
Accessories ..... 2, 3  
Adapter ..... 8  
Audible Indicator ..... 12, 18–20,  
26–29, 38

## B

Bar Code ..... 18–20, 26–29, 30  
Bar Width ..... 30  
Beep ..... 18, 19, 20, 26–29, 38  
Blue LED ..... 18–20, 26–29, 38  
Button ..... 4, 12–17

## C

Cable  
  Communication ..... 2, 6–10,  
  26–29, 38, 41–42  
  Keyboard Wedge ..... 41–42  
  Pin Assignments ..... 41–42  
  PowerLink ..... 2, 6–10, 38, 41–42  
  Troubleshooting ..... 26–29  
  USB ..... 41–42  
Caution ..... 5, 6–10, 43  
Class ..... 44  
CodeGate ..... 1, 12–17  
Communication ..... 19, 26–29, 32  
  Parameters ..... 33–37  
Compliance ..... 6–10  
Components ..... 2, 4  
Configuration ..... 18, 20  
  Default ..... 33–37  
Current ..... 31  
Customer Service ..... ii, 45

## D

DC ..... 2, 31  
Default Settings ... 12, 13, 32, 33–37  
Depth of Field  
  Normal ..... 21, 23, 30, 37  
  Reduced ..... 22, 23, 24, 30, 37

## F

Failure  
  Modes ..... 20  
FCC ..... 44

Firmware ..... 38  
Flash ROM ..... 1, 38

## H

Host ..... 26–29

## I

IBM ..... 7, 33–37  
Indicator  
  Audible ..... 4, 12, 18–20, 26–29,  
  30, 38  
  Failure ..... 20  
  Visual ... 4, 18–20, 26–29, 30, 38  
Interface ..... 30  
  IBM ..... 1, 7, 33–37  
  Keyboard Wedge. 1, 8, 29, 33–37  
  Laser Emulation ..... 1, 11, 33–37  
  Light Pen ..... 1, 6, 33–37  
  OCIA ..... 1, 7, 33–37  
  RS232 ..... 1, 6, 28, 29, 33–37  
  RS232 TTL ..... 1, 6, 32  
  Stand-Alone Keyboard ..... 1, 9  
  Troubleshooting ..... 26–29  
  USB ..... 1, 10, 11, 33–37  
IR Activation Range  
  Far ..... 25  
  Near ..... 25

## K

Keyboard Country Type ..... 32  
Keyboard Type ..... 32  
Keyboard Wedge ..... 8, 29, 33–37

## L

Label  
  Caution ..... 5  
  Serial Number ..... 5  
Laser ..... 43  
Laser Aperture ..... 4  
Laser Emulation ..... 11, 33–37  
LED ..... 18–20  
Light Pen ..... 6, 33–37  
Light Source ..... 30

## M

Maintenance ..... 4

# INDEX

---

Manual.....2, 18, 32  
Meteor .....38  
MetroSet2 .....38  
Mode of Operation  
    Button .....17  
    Primary .....12–17  
    Secondary.....12–17  
    Sweet Spot Mode .....17, 37  
Motor Speed.....30  
Mounting Specifications .....5  
MX009 .....11

## **N**

Notices .....44

## **O**

OCIA.....7, 33–37  
Omnidirectional .....12–17  
Operation.....44

## **P**

Patents .....46  
PC .....32, 42  
Pin Assignments  
    Cable .....41–42  
    Scanner .....39–40  
Port.....6–10, 26–29  
Power .....2, 6–10, 38  
PowerLink.....6–10  
Product Safety.....43  
Property.....46  
Protocol.....32

## **R**

RAM .....28  
Raster.....12–17  
Razzberry Tone .....18–20, 28  
Read Rate .....17  
Repair.....20  
Replacement Parts.....3  
RMA .....45  
ROM.....28  
RS232 .....6, 28, 29, 33–37  
RS232 TTL .....6, 32  
Rubber Utility Seal.....3, 4

## **S**

Scan Lines .....30  
Scan Pattern .....1, 30  
    Horizontal Raster.....12  
    Omnidirectional .....12–17  
    Primary .....12–17  
    Secondary .....12–17  
    Single-Line .....12–17  
Scan Speed .....30  
SELV.....6–10  
Single-Line .....12–17  
Specification  
    Electrical.....31  
    Environmental .....31  
    Mechanical .....30  
    Operational.....30  
Stand-Alone Keyboard.....9  
Storage .....31  
Sweet Spot Mode.....17, 37

## **T**

Tone.....18  
Tones .....1  
Transformer .....2, 31  
Troubleshooting .....26–29

## **U**

Upgrade.....38  
USB .....10, 11, 33–37  
Utility Connector.....4

## **V**

Ventilation .....31  
Visual Indicator ... 18–20, 26–29, 38  
    Blue LED .....4, 18–20, 26–29  
    White LED .....4, 18–20, 26–29  
    Yellow LED .....4, 18–20, 26–29  
Voltage.....6–10, 31  
Volume.....18

## **W**

Warranty .....45  
Weight.....30  
White LED .....18–20, 26–29, 38  
Window .....4

# NOTES

---





May 2004

Printed in the USA



00 - 02026A