

Multi-Media LCD Display Owner's Manual

**CS-32
CS-37
CS-42**

Table of Contents

Preface	3
Before Using The Product	4
Communication Regulations	4
Important Safety Instructions	5
Safety Information	7
Maintenance and Precaution	8
Getting Started (Preparation)	10
Introducing The Television	11
Supplied Accessories	11
TV Control Functions	12
Setting Up The Remote Control	13
Remote Control Functions	14
Inputs and Outputs	15
Connection Drawing	16
Connecting the Antenna or Analog Cable TV (CATV)	18
Connecting the Digital Set-Top Box (Commonly Used For HDTVs, Satellite TVs etc)	19
Connecting the Component Video	21
Connecting the S-Video or Composite Video	22
Connecting the PC	23
Connecting the HDMI	24
Setting Up The Television	25
Changing the Source	25
Aspect	26
Accessing the OSD (On Screen Display) Menu	27
Icon Description	28
VIDEO	29
MODE	30
CONTRAST	30
AUDIO	31
TUNER	32
AIR / CABLE	33
AUTO SCAN	33
ADD / ERASE	33
DIGITAL TUNER	34
AUTO SCAN	35

Table of Contents

AUDIO LANGUAGE	35
DIGITAL C.C.	36
C.C. OPTIONS	36
TIME ZONE	37
DISPLAY	38
TIMER	39
SLEEP TIMER	39
TIMER SETTING	39
POWER ON	39
POWER OFF	40
SET DATE / TIME	40
PARENTAL CONTROLS	41
TV RATING	41
MOVIE RATING	42
BLOCK CHANNEL	43
BLOCK UNRATED	43
CHANGE PASSWORD	44
CLEAR ALL	44
SETUP	45
CAPTIONS	45
LANGUAGE	45
TV NO SIGNAL	45
OSD TIMEOUT	46
AUTO POWER OFF	46
Basic Troubleshooting	47
General Specifications	49
32" LCD	49
37" LCD	50
42" LCD	51
Preparing Your Proton LCD TV for Wall Mounting	52
RGB Frequency Table	53
Acronyms, Abbreviations, Functions, and Terms	54
Channel Frequency Table	58

Preface

About This Manual

This manual is designed to make operating your 32", 37", 42" LCD TV as easy as possible. Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. Due to the continuation of system improvements, these changes will be incorporated in newer editions.

Copyright

© Copyright 2007

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced in any form by any mechanical, electronic or other means, without written consent.

Trademarks

All trademarks and registered trademarks are the property of their respective owners.

Before Using The Product

Communication Regulation

FCC Compliance

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and radiates radio frequency energy. If not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment causes interference to radio or television reception. To determine if the signal is interfered, switch the equipment off and on. If interference does occur user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna;
- Increase the separation between the equipment and receiver;
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected;
- Consult with the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Canada Class B Statement

This Class B device meets all requirements of the Canadian interference-causing equipment regulations.

Cet appareil numérique de la Class B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

1. Read these instructions.

All the safety and operating instructions should be read before the product is operated.

2. Keep these Instructions.

The safety and operating instructions should be retained for future reference.

3. Heed all Warnings.

All warnings on the product and in the operating instructions should be adhered to.

4. Follow all Instructions.

All operating and using instructions should be followed.

5. Do not use this apparatus near water.

6. Clean only with dry cloth.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments/accessories specified by the manufacturer.

with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

Before Using The Product

Important Safety Instructions

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

or moisture.

16. The apparatus shall be connected to a mains socket outlet with a protective earthing connection.

in accordance with the installation instructions.

19. Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

20. CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

21. Do not install this equipment in a confined space such a book case or similar unit.

22. Maintain minimum 10cm free space around the apparatus for sufficient ventilation.

23. The ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.

24. No naked flame sources, such as lit candles, should be placed on the apparatus.

25. The apparatus should be used in moderate climates.

26. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Before Using The Product


Safety Information

This equipment generates, uses, and radiates radio frequency energy. If not installed and used in accordance with the instructions, this may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment causes interference to radio and television reception. To determined, try by turning the equipment off and on. If the interference does occur the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna;
- Increase the separation between the equipment and receiver;
- Connect the equipment into an outlet on a circuit from that to which the receiver is connected.

Caution

To prevent fire, shock hazard, or interference, only use the recommended accessories. To prevent electric shock, do not use the plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure. To reduce the risk of electric shock, do not remove the unit cover or back. There are no serviceable parts inside. Refer servicing to a qualified personnel only.

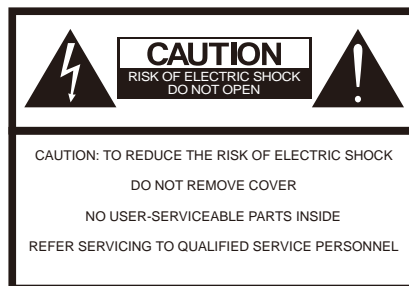

This symbol is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute risk of fire or electric shock.



This symbol is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying this product.

Before Using The Product

Maintenance and Precaution



Do not remove the cover or back of the TV. Any unauthorized changes or modification to the product will void the user's warranty.




Do not place the TV in a closed compartment. This will overheat the TV.



Turn off the product if liquid is accidentally spilled into the TV. Contact your local dealer for assistance.



Do not expose the TV to rain or moisture.

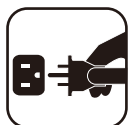

According to the industrial standards, when pulling the power cord from the outlet, hold the power plug instead of the cord.



Make sure the power cord from the AC outlet is unplugged, and disconnect from the antenna if the TV is left unattended and unused for a long period. This will prevent damages to the TV lighting and power-line surge.

Before Using The Product

Maintenance and Precaution



Do not expose the TV to heat sources such as radiators, heaters, stoves and other heat-generating products (including audio amplifiers).



Unplug the power cord from the AC outlet before cleaning the TV. Use specific screen cleaner kit for LCD screens. Do not use liquid cleaners or aerosol cleaners.



Do not use this TV with an extension cord or power bar; this can cause a fire or an electric shock.



Do not place heavy items or belongings on the top of the TV.




Hand carry the TV with at least another person.

Getting Started (Preparation)

Ventilation recommendations:

Avoid improper installation of the product. Never position the unit where ventilation is impossible. When installing this TV, minimal ventilation distance recommendation must be maintained between the set, wall, furniture and tightly enclosed area. Refer to the minimum distance guidelines shown for a safe operation.

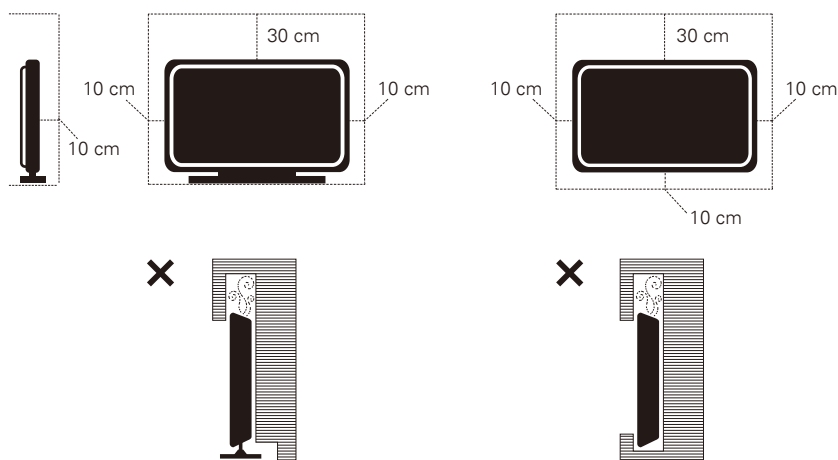

Cleaning the screen:

The screen is coated with a special thin film to reduce reflection. If this film is damaged, uneven colors, discoloration, scratches, and other problems that cannot be repaired may occur. Pay attention to the following when handling the screen.

- Do not use glue or adhesive tape on the screen.
- Do not write on the screen.
- Do not allow the screen to come in contact with any hard objects.
- Do not allow condensation to form on the screen.
- Do not use alcohol, thinner, benzene or other solvents on the screen.
- Do not rub the screen forcefully.

 
CAUTION:

- Operate only from the power source specified (AC 100-240V) on the unit.
- Avoid damaging the AC plug and cord.
- When you are not using this unit for a long period of time, it is recommended that you disconnect the power cord from the main outlet.
- When the source has no signal to input, TV will be "Auto Power Off" after 5 minutes.

POWER CORD CONNECTION:

Connect the power cord, after completing all other connections.


1. Connect the power cord to this device.
2. Connect the power cord to the power outlet.

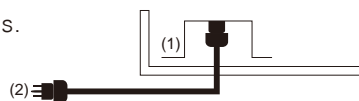

Introducing The Television

Supplied Accessories

 The following items come along with your LCD TV:

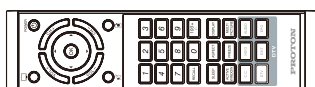

Remote control



Two AAA Batteries



Power Cord



User's Manual
Warranty Card (in last page)



Cleaning Cloth
(Use ONLY the cleaning cloth
enclosed to clean your TV bezel)

Introducing The Television


32" 37" 42" TV Control Functions




1	IR RECEIVER	Target the remote control at the IR Receiver. When operating the remote control, make sure there are no obstacles between you and the IR Receiver.
2	LED INDICATORS	The LED indicator lights up in 3 different colors: green, red or orange. Each color represents a different status. Green - Power is on. Red - Stand by. Orange - Power saving mode.
3	POWER	Press this button to turn the power on / stand by.
4	MENU	Press this button to display the OSD menu. It contains all the options to configure your TV's settings.
5	-CH+	Press to change channel. When in menu mode, these acts as navigation keys.
6	-VOL+	Press to adjust the volume. when in menu mode, these acts as navigation keys.
7	SOURCE	Video input selection. Press this button to display the menu for input selection mode.

Introducing The Television

Setting Up the Remote Control

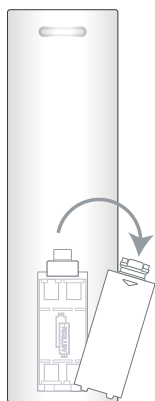


1. Open the lid of your remote control battery compartment on the back of the remote control.

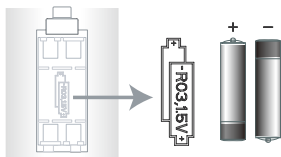

2. Insert two AAA batteries. Use the (+) and (-) marks to guide you. The (+) marks on your batteries correspond to the (+) marks on the compartment. The (-) marks on your battery correspond to the (-) marks on the compartment.


Note: Do not mix new and used or different kind of batteries.

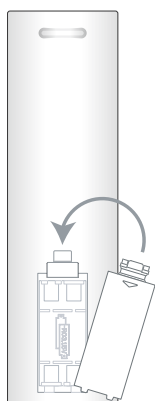

3. Put the lid back onto the remote control battery compartment.

Introducing The Television

Remote Control Functions

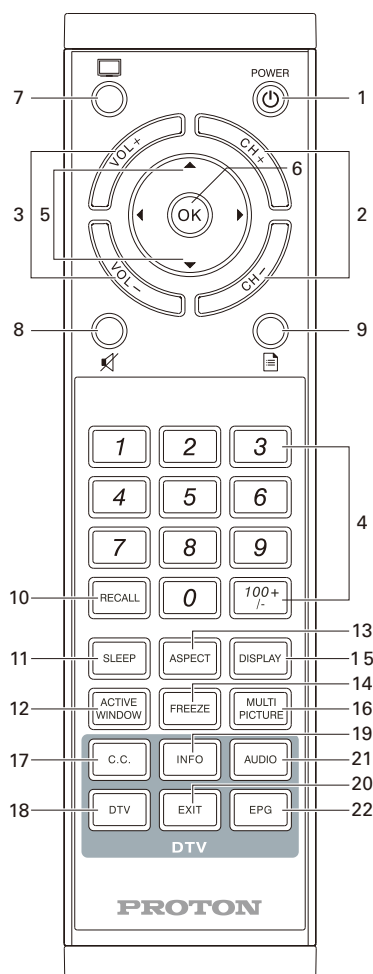

1		Power on/off.
2	CH + / CH -	Press these keys to change the channels.
3	VOL + / VOL -	Press these keys to adjust volume.
4	0~9 / 100+, / -	Numerical keys to select desired channel. /-: Minor channel indicator (Direct Digital RF channel tune)
		Navigation keys in Source and Setup menu.
5		Adjusting keys in Source and Setup menu when in PIP mode.
6	OK	Press this key to confirm selection.
7	SOURCE	Press this key repeatedly to search for the video source. If you have a DVD player connected to the component input, then select "COMPONENT" from source menu.
8	MUTE	Press this key to turn off the sound. Press the "MUTE" button again or press "VOL+ / VOL-" to enable sound.
9	MENU	Press this key to display the OSD menu. In the OSD menu, press this key to exit the menu.
10	RECALL	Recall last channel.
11	SLEEP	Activates the sleep timer.
12	ACTIVE WINDOW	Switch controlling between the PIP or PAP and the MAIN.
13	ASPECT	Choose from widescreen, panoramic, 4 : 3 video, 16 : 9 zoom. (More details on Page 38)
14	FREEZE	Press this key to freeze current frame from the screen.
15	DISPLAY	On Screen display on/off. (shows channel and other details)
16	MULTI PICTURE	Switch among PIP (Picture In Picture) mode, PAP(Picture And Picture) mode, and MAIN (Main Picture Only) Mode.
17	C.C.	Turns the DTV caption on or off.
18	DTV	Press this button to enter the DTV mode.
19	INFO	Press to display " I-plate " which provides information about the current channel. Press the second time, the screen will show the program's extended information.
20	EXIT	To exit OSD menu.
21	AUDIO	Allows the user to select the audio channels provided by the channel station (commonly used to select between / among languages).
22	EPG (Electronic Programming Guide)	Opens the Program Guide & shows all the active channels.

Note: Panoramic only available when source is 480i or 480p.


Introducing The Television

Inputs and Outputs

Cables

1. RCA composite video cable
2. S-video cable
3. RCA component video cable
4. RGB (VGA) video cable
5. HDMI A/V Cable

Your LCD TV has five types of video connections. You should capitalize on the best connection available from your LCD TV to get the best display quality. For example, if you have a progressive DVD player that supports a component video connection, you should connect the DVD player to your LCD TV using component video connections instead of composite video or S-video connections.

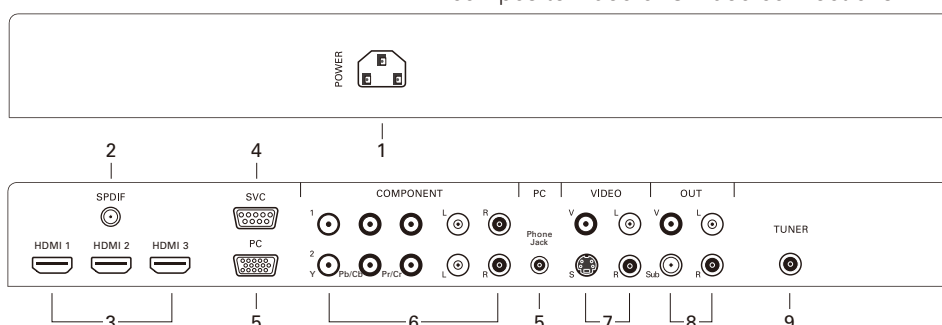

Available Interface	Description	Recommended Devices
1 Power Input	AC 100-240V	
2 SPDIF (COAXIAL)	Digital audio output	Any amplifiers with SPDIF input
3 HDMI 1 HDMI 2 HDMI 3	HDMI input.	HDTV, Set-top Box, Progressive HD DVD Player.
4 SVC	Service connector.	Maintenance use only.
5 PC Input	RGB input (PC Input) and audio inputs.	PC.
6 Component Inputs (Component 1 Component 2)	Component support both High Definition programs (720p / 1080i) and standard definition programs (480i / 480p).	Progressive DVD player, HDTV set-top-box, HD PVR, D-VHS, digital media player.
7 AV Inputs (Video)	Contains S-video, composite video, a pair of R / L audio inputs.	Camcorder, non-progressive DVD player, digital camera, VCR.
8 Audio / Video Outputs	Contains, one composite video, Subwoofer and one pair of R/L audio outputs.	
9 TUNER	NTSC / ATSC	

Introducing The Television



Introducing The Television

Inputs and Outputs

Connecting the Antenna or Analog Cable TV (CATV)

1. Disconnect the TV from all power sources before making any connections.


2. Use the coaxial cable (75 ohms) usually provided by your antenna or cable provider.

Coaxial Cable

(not supplied)




3. Hook up the cable to the ANT input in the side of the LCD TV.

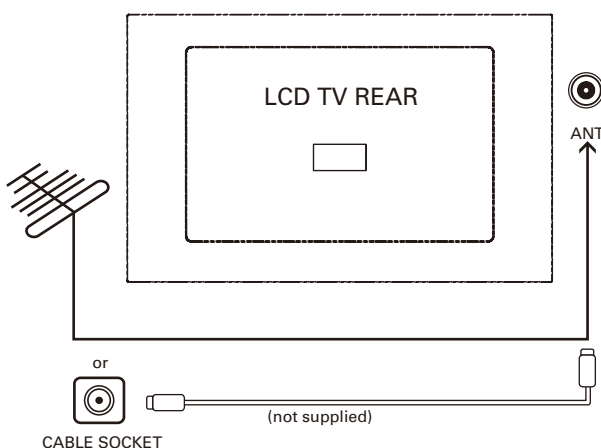

4. Connect the power cord of the LCD TV to a power outlet.

5. Press the "TV" button on either the remote control or the TV controls and select TV on the source menu. (Changing the source, refer to Page 25)

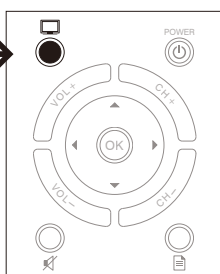


- 32" LCD: "TV" button on the TV controls (refer to Page14)
- 37" LCD: "TV" button on the TV controls (refer to Page14)
- 42" LCD: "TV" button on the TV controls (refer to Page14)

Introducing The Television


Inputs and Outputs

Connecting the Antenna or Analog Cable TV (CATV)


6. Press the " " button on the remote control to display the OSD menu. Use ▲ or ▼ to navigate through the icons. In the three option (Tuner), press " OK ". Choose the first option " AIR / CABLE " and press " OK ". If your TV is connected to the antenna. If your TV is connected to the cable television outlet, choose Cable STD, Cable HRC, Cable IRC. (For more information on the TUNER menu, refer to Page 32~33)

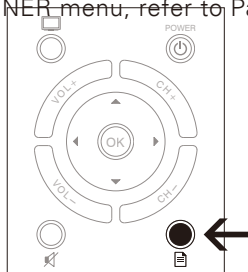

- 32" LCD: " " button on the TV controls (refer to Page14)
- 37" LCD: " " button on the TV controls (refer to Page14)
- 42" LCD: " " button on the TV controls (refer to Page14)

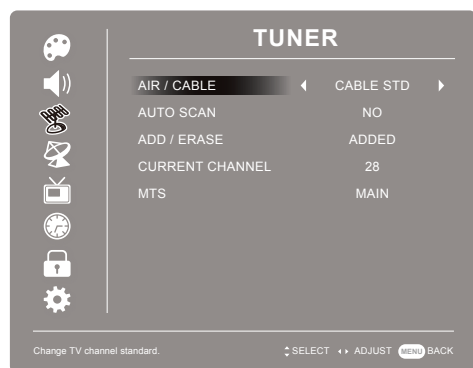

7. Then choose STD and press "OK".
- STD-Standard
 - HRC-Harmonic Related Carrier
 - IRC-Incremental Realted Carrier.

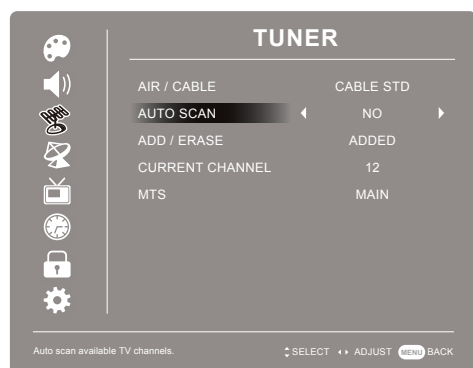

8. In order for the LCD TV to detect available channels, press " " and choose the first option "Tuner" and press "OK". Scroll down to "Auto Scan" and press "OK". The television will automatically scan the available channels for you. (For more information on the TUNER menu, refer to Page 32~33)


- To find out your local cable system, please contact your cable company.

Introducing The Television

Inputs and Outputs

Connecting the Digital Set-Top Box (Commonly Used For HDTVs, Satellite TVs, etc.)

1. Disconnect the TV and set-top box from all power sources before making any connections.
2. Use a HDMI cable, component video cable, or S-video cable to connect the HDMI, COMPONENT, or SVIDEO output jacks of your digital set-top box to the HDMI, COMPONENT, or SVIDEO input

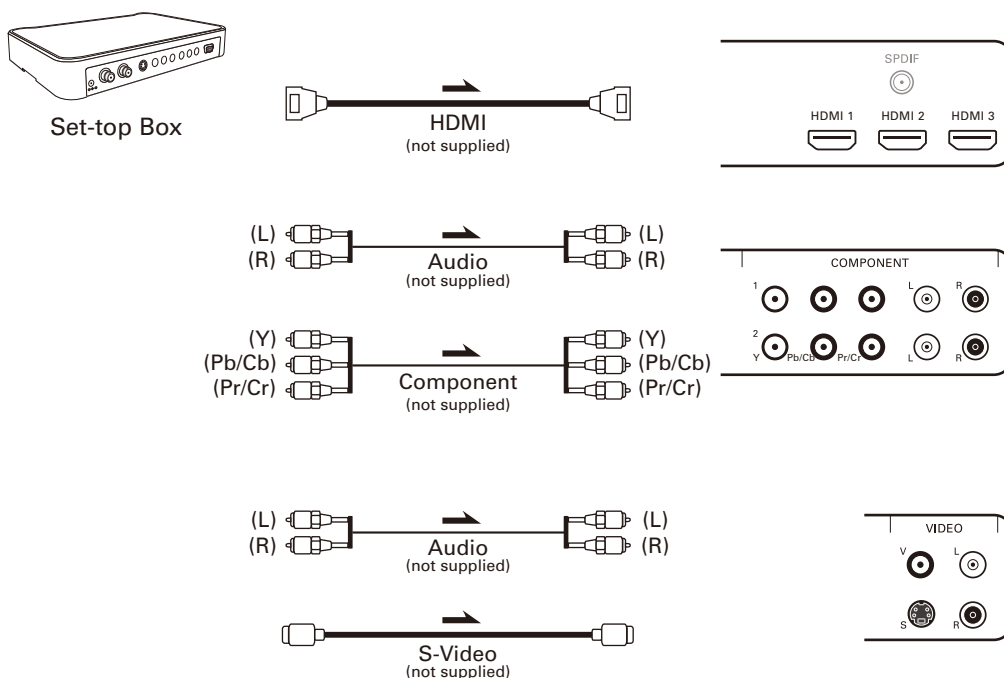


3. Use the AUDIO cables to connect the AUDIO (L/R) output jacks of your digital set-top box to the AUDIO (L/R) input jacks on the side of the LCD TV. If you use the HDMI cable, you don't need to connect the audio cable between the two equipments. The HDMI cable transmits both digital video and audio signals.
4. Connect the power cords of your digital set-top box and LCD TV to the power outlets.

Introducing The Television

Inputs and Outputs

Connecting the Digital Set-Top Box (Commonly Used For HDTVs, Satellite TVs, etc.)

5. Press the “” button on either the remote control or the TV controls. Select HDMI 1 / HDMI 2 / HDMI 3 / COMPONENT 1 / COMPONENT 2 / SVIDEO / VIDEO, depending on which input is the digital set-top box connected to. (Changing the source, refer to Page 25)

Note:


1. It is strongly recommended that the user connects Digital Set-Top Box via HDMI connection if provided. The HDMI signal is pure digital signal that gives the best performance for HD programs.
2. If your digital set-top box does not provide HDMI jacks, use the component cables for better picture quality or SVIDEO cable for standard picture quality.


Introducing The Television


Inputs and Outputs

Connecting the Component Video

To connect your progressive DVD player or HD DVD Player via component video:

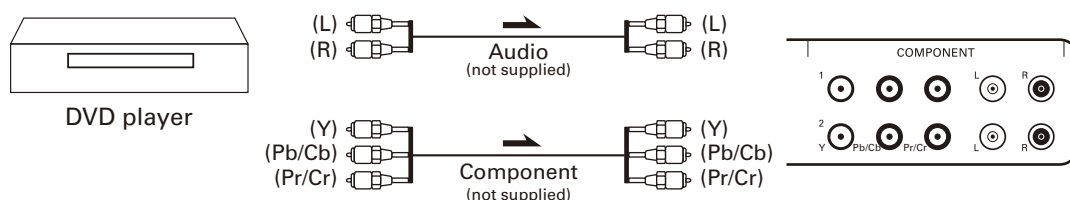



1. Connect the green Y jack on the back of your DVD player to the green component Y jack on the side of the LCD TV.
2. Connect the red Pr/Cr jack on the back of your DVD player to the red Pr/Cr jack on the side of the LCD TV.
3. Connect the blue Pb/Cb jack on the back of your DVD player to the blue Pb/Cb jack on the side of the LCD TV.
4. Use the AUDIO Cable to connect the AUDIO (L/R) output jacks of your DVD Player with the AUDIO (L/R) input jacks in the side of the LCD TV.
5. Press the “” button of the remote control to select “COMPONENT 1” or “COMPONENT 2”.

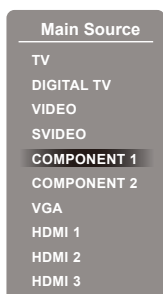

This section shows you how to connect devices to the S-video and composite video inputs of your LCD TV. Most devices like VCRs, camcorders, non-progressive scan DVD players, etc only provide composite video output or S-video output. The steps below are to show you how to connect two devices simultaneously.

Camcorder

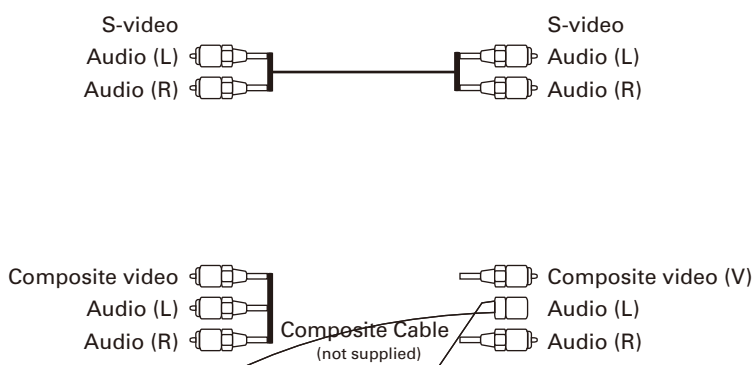



1. Connect the SVIDEO on the back of your camcorder to the SVIDEO under VIDEO Input jack.
2. Connect the audio red (R) and white (L) on the back of camcorder to the audio red (R) and white (L) jacks on the side of your LCD TV.
3. Connect the yellow video jack on the back of your VCR to the yellow composite video input jack on the side of your LCD TV under SVIDEO Input.
4. Connect the red (R) and white (L) audio jacks on the back of your VCR to the secondary audio red and white (L) jacks on the side of your LCD TV.
5. Press the “” button on the remote control to display the OSD setup menu and choose VIDEO to display video from the VCR or choose SVIDEO to display video from the camcorder.


Introducing The Television

Inputs and Outputs

Connecting the PC

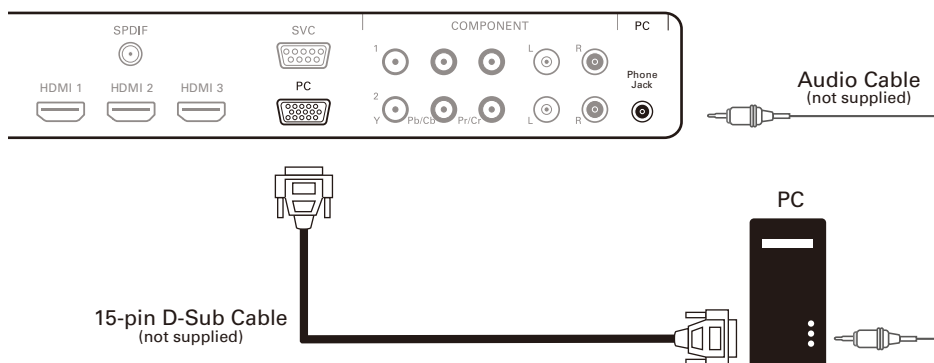

1. If you wish to connect a PC to the LCD TV, connect the 15-pin D sub RGB connector on your PC to the PC connector on the side of the LCD TV.
2. Connect the audio output on your PC to the PC audio input (L/R) on the side of the LCD TV.
3. Press the “” button on the remote control to select “VGA”.
4. You may configure your PC's VGA resolution to optimized resolution on the LCD TV. The recommended resolution of the LCD TV is 1024 x 768.

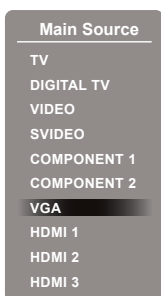

Introducing The Television


Inputs and Outputs

Connecting the HDMI

1. Use a HDMI cable to connect the HDMI output jack of your external device to the HDMI input jack on the side of the LCD TV.



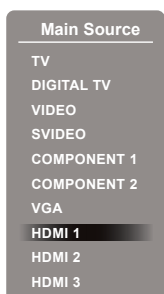

2. Press the "TV" button on either the remote control or the TV controls. Select HDMI.
(Changing the source, refer to Page 25)




Note: HDMI connection includes both digital audio and video signals.

Setting Up The Television

Changing the Source

1. Press the “” button on either the remote control or TV controls.
2. Press the “” button or scroll using ▲ or ▼ on the remote control or “-CH+” on TV control.
3. Select your choice by using “ok” on the remote control or “-VOL+” on TV control.

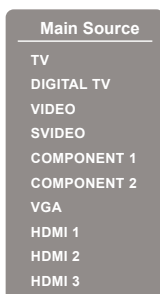


Note: When the source has no signal to input, TV will be “Auto Power off” after 5 minutes.


Setting Up The Television

Aspect


Display Modes

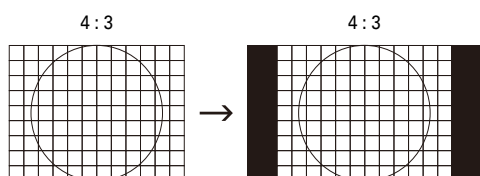


When the input is 4:3 (the image dimension usually used by cable television, television, and video cassettes), the user might want to eliminate the “black spots” on the left and the right of the screen.

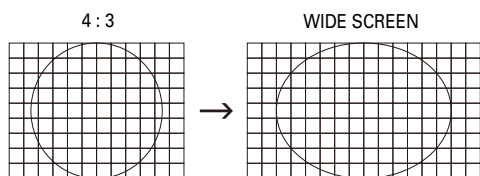

By doing this, the user might choose widescreen, which distorts image by stretching the whole image horizontally.

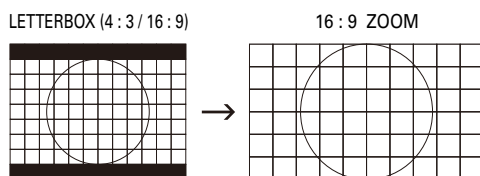


In most cases, widescreen videos (such as DVD movies’ widescreen modes) will have “black spots” on the top and the bottom of the screen (this is called letterbox). To eliminate this, the user may select 16:9 zoom.

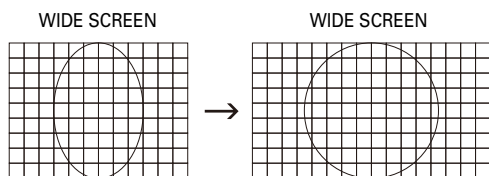


Sometimes the television might receive widescreen signals. If the user sets the mode on 4:3, the image might be distorted into a thin image. To fix this, the user may switch to widescreen mode.

Setting Up The Television

Accessing the OSD(On Screen Display)Menu

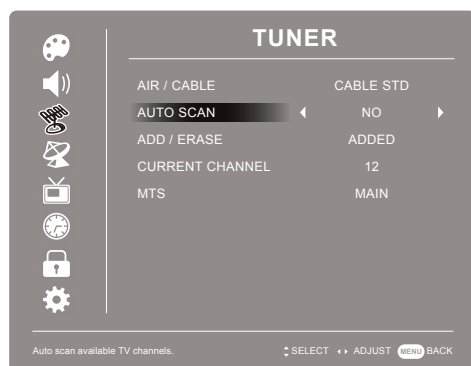



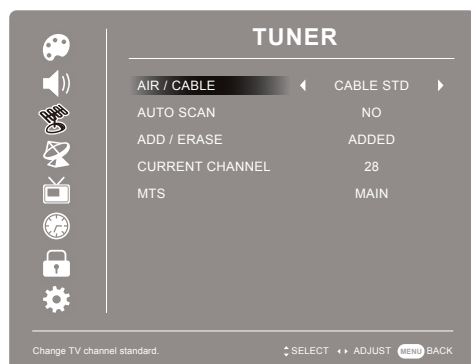





1. Press "⏏" on the remote control or TV controls to start the OSD menu.
2. Use ▲, ▼ to navigate through the main function.
3. Press "OK" to enter the high-light-ed category.
4. Press "OK" to change the select-ed settings.
5. Press "⏏" to exit the OSD menu.



Setting Up The Television

Icon Description

There are 7 main functions (VIDEO, AUDIO, TUNER, DISPLAY, TIMER, PARENTAL CONTROLS, SET-UP) in the OSD menu. Before you start using the OSD menu , it is recommended that you read through the following icon descriptions.

	VIDEO	<ul style="list-style-type: none">•MODE•CONTRAST•BRIGHTNESS•COLOR•TINT	<ul style="list-style-type: none">•SHARPNESS•BACKLIGHT•NOISE REDUCTION•ADVANCED•ALL RESET
	AUDIO	<ul style="list-style-type: none">•TREBLE•BASS•BALANCE•SUBWOOFER	<ul style="list-style-type: none">•MIDDLE•TONE CONTROL•SPEAKERS•ALL RESET
	TUNER	<ul style="list-style-type: none">•AIR / CABLE•AUTO SCAN•ADD / ERASE	<ul style="list-style-type: none">•CURRENT CHANNEL•MTS
	DIGITAL TUNER	<ul style="list-style-type: none">•AUTO SCAN•AUDIO LANGUAGE•DIGITAL C.C	<ul style="list-style-type: none">•C.C OPTIONS•TIME ZONE
	DISPLAY	<ul style="list-style-type: none">•ASPECT RATIO•PIP•PIP MODE	<ul style="list-style-type: none">•PIP POSITION•PIP SIZE
	TIMER	<ul style="list-style-type: none">•SLEEPTIMER•TIMER SETTING•POWER ON	<ul style="list-style-type: none">•POWER OFF•SET DATE/TIME
	PARENTAL CONTROLS	<ul style="list-style-type: none">•PLEASE ENTER PASSWORD•TV RATING•MOVIE RATING•BLOCK CHANNEL•BLOCK UNRATED	
	SETUP	<ul style="list-style-type: none">•CAPTIONS•LANGUAGE•BLUE SCREEN•OSD TIMEOUT	<ul style="list-style-type: none">•AUTO POWER OFF

Setting Up The Television


VIDEO

How to set the parameters in the VIDEO menu.





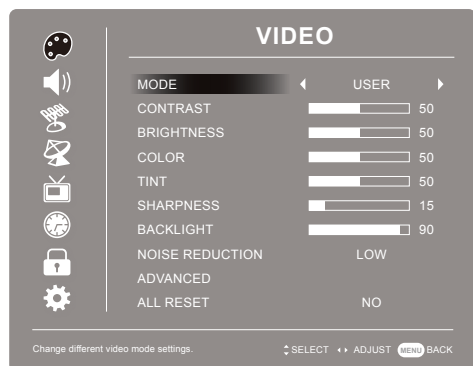


Function	Description	Options
MODE	Mode is the selection that allow the user to choose among default video setting and customizable video setting.	USER, BRIGHT, DIMMER, GAME
CONTRAST	Adjusts the contrast. (USER mode must be on)	0-100
BRIGHTNESS	Adjusts the brightness. (USER mode must be on)	0-100
COLOR	Adjusts the intensity of color. (USER mode must be on)	0-100
TINT	Tint adjusts the natural aspect of a color. (USER mode must be on)	(-50) - (50)
SHARPNESS	Sharpness adjusts increase or reduce the picture performance Sharpness.	0-12
BACKLIGHT	Adjusts the brightness of the backlights of the LCD screen.	0-100
NOISE REDUCTION	This is used to reduce image noise.	OFF, LOW, MEDIUM, HIGH
MPEG NR (ADVANCED mode)	Mpeg noise reduction.	0-63
COLORTEMP (ADVANCED mode)	This option allows the user choose among three styles of displaying colors.	USER, WARM, NATURE, COOL
ALL REST	This option will rest the contrast, brightness, color, tint, and Sharpness options to default.	NO, YES

Setting Up The Television

VIDEO









MODE

1. Press  button.
2. Use ,  button to highlight "VIDEO" icon, then press "OK".
3. Use ,  button to highlight "MODE" and use ,  button to select.




CONTRAST

1. Press  button.
2. Use ,  button to highlight "CONTRAST" and use ,  button to select.

- Press  to return to the previous menu screen.
- Press EXIT button to exit the menu screen.

Setting Up The Television

AUDIO

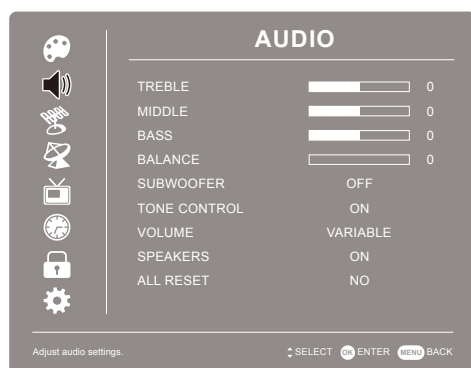

How to set the parameters in the AUDIO menu.

Function	Description	Options
TREBLE	Adjusts the higher pitched sounds .	(-12) - (+12)
MIDDLE	Adjusts the middle pitched sounds.	(-12) - (+12)
BASS	Adjusts the lower pitched sounds .	(-12) - (+12)
BALANCE	Adjusts the “position” of the sound. The negative end represents that the sound will lean towards the left and the positive end represents that the sound will lean towards the right.	(-12) - (+12)
SUBWOOFER	Adjusts Crossover point.	OFF/80HZ/120HZ/160HZ
TONE CONTROL	Set if the treble , middle and bass of audio output will be under control or by-pass.	ON/BYPASS
VOLUME	Fixed mode will fix the audio output level, so you can't adjust that level . And Variable mode will let you adjust that audio output level, so you can adjust your external audio device with TV remote control unit.	FIXED/VARIABLE
SPEAKERS	This option lets the user turn off or on our TV speaker.	OFF / ON
ALL RESET	All reset will revert the treble, middle, bass, balance, subwoofer, volume and speakers back of default.	NO / YES

- Warning : Before set to FIXED mode , make sure you turn off the TV speaker and turn down the volume of the external audio amplifier to avoid the damage to the speaker units.

Setting Up The Television


TUNER

How to set the parameters in the TUNER menu.






Function	Description	Options
AIR / CABLE	This allows the user to switch between analog antenna and Cable TV.	TV(Analog antenna/CABLE(cable tv)
AUTO SCAN	The auto scan helps the user to search for available channels on television.	NO/YES
ADD / ERASE	This option allows the user to add / erase recognized channels.	ADDED/ERASED
CURRENT CHANNEL	This option selects the channel you want to view.	
MTS	MTS is the option that allows the user to change the sound options between main TV audio and SAP. Many channels have this option to allow the viewer to switch between different languages.	MAIN/SAP

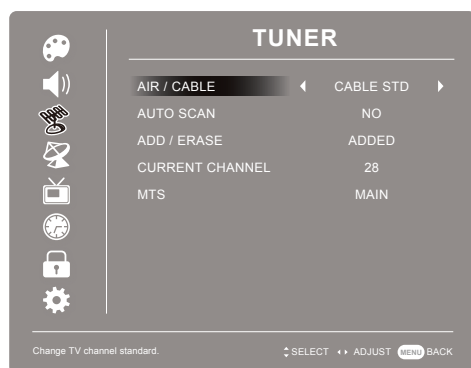
Setting Up The Television

TUNER





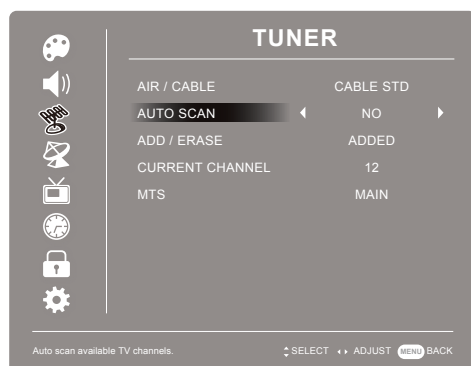


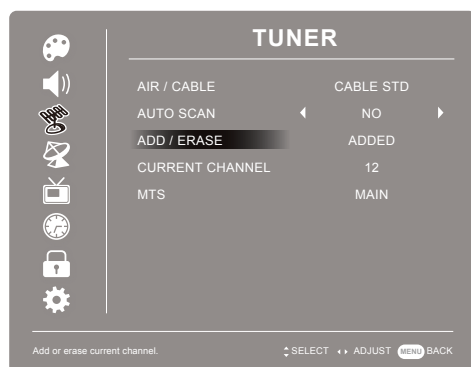
AIR / CABLE

1. Press  button.
2. Use ,  button to highlight "TUNER" icon, then press "OK".
3. Use ,  button to make a choice form AIR or cable in analog.
4. If choose cable, must choose STD, HRC or IRC again.











AUTO SCAN

1. Press  button.
2. Use ,  button to highlight "AUTO SCAN" and use ,  button to Select, then press "OK".



ADD / ERASE

1. Press  button.
2. Use ,  button to highlight "TUNER" icon, then press "OK".
3. Use ,  button to highlight "ADD / ERASE" and use ,  button to select.

- Press  to return to the previous menu screen.
- Press EXIT button to exit the menu screen.

Setting Up The Television


DIGITAL TUNER

How to set the parameters in the DIGITAL TUNER menu.

Function	Description	Options
AUTO SCAN	The auto scan helps the user to search for available channels on television.	NO / YES
AUDIO LANGUAGE	This is workable in only DTV broadcasting. If user select the specific language, detecting that language in DTV signal source at the real time.	English / Espanol / Francais
DIGITAL C.C.	Select digital TV C.C. service.	CC1~CC4 / SERVICE 1~SERVICE 6 / OFF
C.C. OPTIONS	Set DTV C.C. display options.	FONT SIZE / FONT STYLE / F.G.COLOR / B.G. COLOR / F.G.OPACITY / B.G. OPACITY
TIME ZONE	Select time zone for digital TV system.	ATLANTIC / EASTERN / CENTRAL / MOUNTAIN / PACIFIC / ALASKA / HAWAII


Setting Up The Television

DIGITAL TUNER

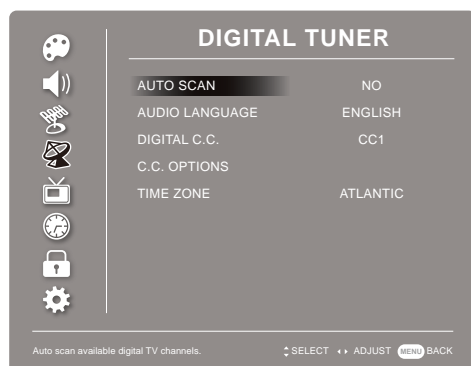

AUTO SCAN

1. Press button.
2. Use , button to highlight "Digital Tuner" icon, then press "OK".
3. Use , button to highlight "AUTO SCAN" and use , button to Select, then press "OK".

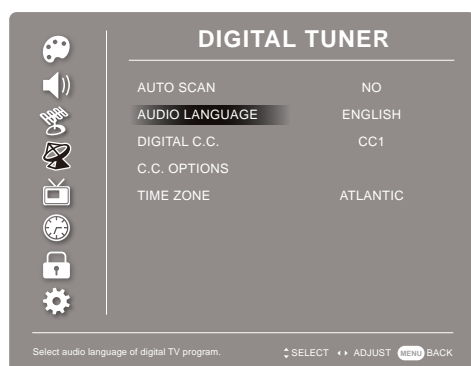


AUDIO LANGUAGE

1. Press button.
 2. Use , button to highlight "AUDIO LANGUAGE", and use , button to make a choice.
- ENGLISH / SPANISH / FRENCH





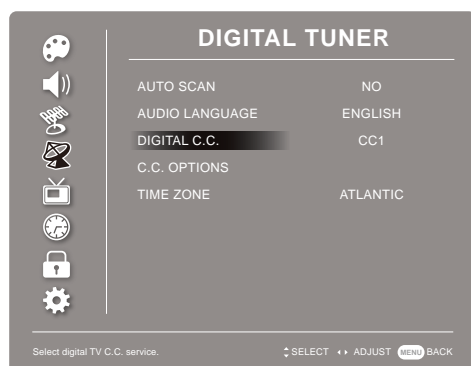


- Press to return to the previous menu screen.
- Press EXIT button to exit the menu screen.

Setting Up The Television




DIGITAL TUNER





DIGITAL C.C.


1. Press  button.
2. Use ,  button to highlight "DIGITAL TUNER" icon, then press "OK".
3. Use ,  button to highlight "DIGITAL C.C." and use ,  button to make a choice from CC1~CC4 / Service1~Service6

C.C. OPTIONS

1. Press  button.
2. Use ,  button to highlight "C.C. OPTIONS" then press "OK".

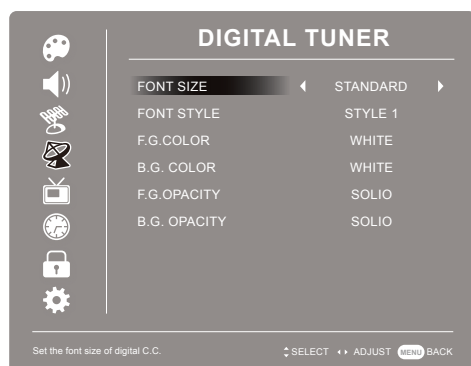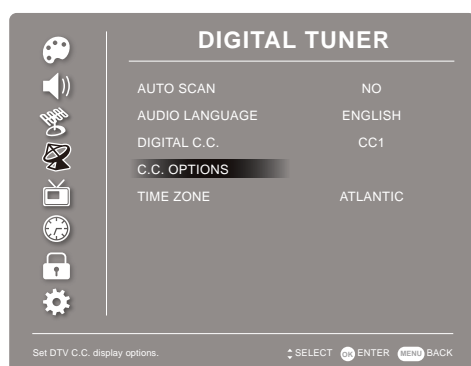


3. Use the , , ,  button to make a choice and setting.
 - FONT SIZE: STANDARD / LARGE / SMALL
 - FONT STYLE: STYLE1~STYLE7
 - F.G COLOR: WHITE / BLACK / RED / GREEN / BLUE / YELLOW / MAGENTA / CYAN
 - B.G COLOR: WHITE / BLACK / RED / GREEN / BLUE / YELLOW / MAGENTA / CYAN
 - F.G OPACITY: SOLID / TRANSPARENT / TRANSLUCENT
 - B.G OPACITY: SOLID / TRANSPARENT / TRANSLUCENT





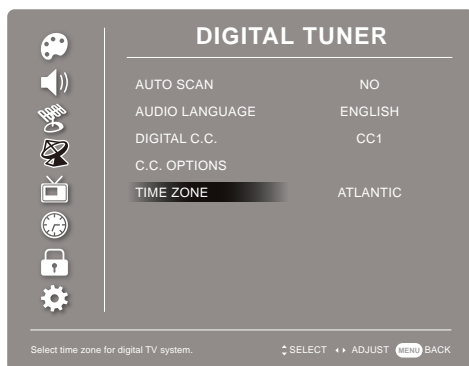


- Press  to return to the previous menu screen.
- Press EXIT button to exit the menu screen.


Setting Up The Television

DIGITAL TUNER



TIME ZONE

1. Press  button.
2. Use ,  button to highlight "DIGITAL TUNER" icon, then press "OK".
3. Use ,  button to highlight "TIME ZONE" and use ,  button to make a choice.
 - CENTRAL / MOUNTAIN / PACIFIC / ALASKA / HAWAII / ATLANTIC / EASTERN

- Press  to return to the previous menu screen.
- Press EXIT button to exit the menu screen.


Setting Up The Television

DISPLAY


Function	Description	Options
ASPECT RATIO	This mode lets the user to choose among 4 choices that will change the viewing area on the screen.	WIDE / 4:3 / 16:9 ZOOM / PANORAMIC
PIP	Turn on/ off pip.	ON / OFF
PIP MODE	Set the mode of pip.	PIP / PAP / POP
PIP POSITION	Adjusts the position of the pip screen.	BOTTOM-LEFT / BOTTOM-RIGHT / TOP-LEFT / TOP-RIGHT
PIP SIZE	Set the size of pip.	SMALL PIP / LARGE PIP
H CENTER	Adjusts the horizontal position (VGA source only).	(-50) - (+50)
V CENTER	Adjusts the vertical position (VGA source only).	(-50) - (+50)
H SIZE	Adjusts the horizontal size (VGA source only).	0-100
SYNC PHASE	Adjusts the quality of the image by eliminating distortion. (VGA source only)	0-63

Setting Up The Television


TIMER

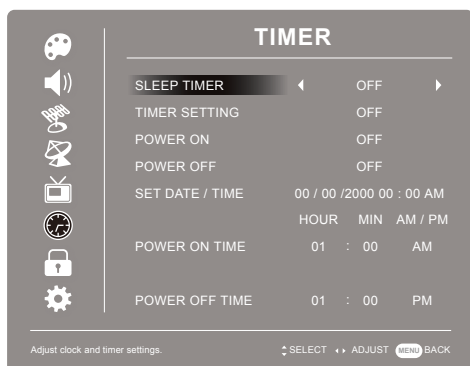


SLEEP TIMER


1. Press  button.
2. Use ▲, ▼ button to highlight "TIMER" icon, then press "OK"
3. Use ▲, ▼ button to highlight "SLEEP TIME" and use ◀, ▶ button to make a choice.
 - OFF/ 15min/ 30min/ 60min/ 90min/ 120min

TIMER SETTING

1. Press  button.
2. Use ▲, ▼ button to highlight "TIMER SETTING" and use ◀, ▶ button to make a choice.
 - The user can choose the follows: OFF / ONCE / DAILY

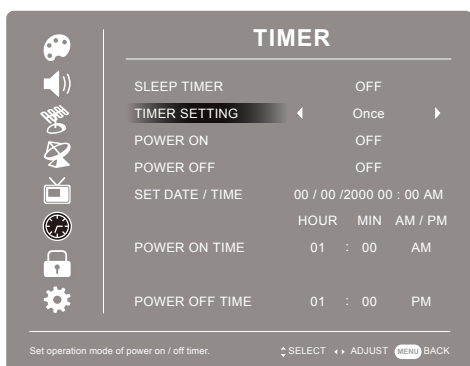


POWER ON

1. Press  button.
2. Use ▲, ▼ button to highlight "POWER ON" and use ◀, ▶ button to make a choice then press "OK" to setting "POWER ON TIME".
 - OFF/ON





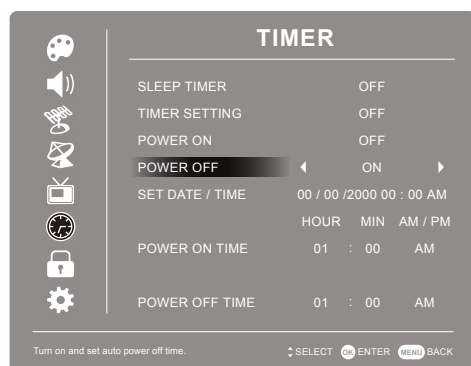

Setting Up The Television

TIMER




POWER OFF


1. Press  button.
2. Use ,  button to highlight "TIMER" icon, then press "OK".
3. Use ,  button to highlight "POWER OFF" and use ,  button to make a choice, then press "OK" to setting "POWER OFF TIME".

- OFF / ON

SET DATE/TIME


1. Press  button.
 2. Use ,  button to highlight "SET DATE/ TIME" and press "OK" to setting.
- The user can use , , ,  button to set for DATE/TIMER.

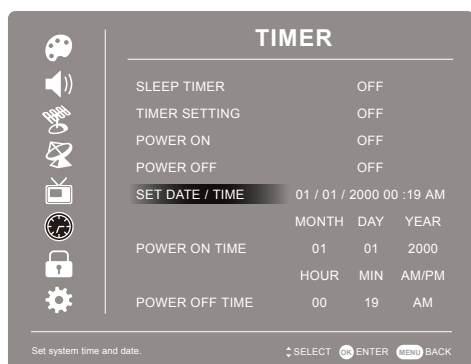




- Press  to return to the previous menu screen.
- Press EXIT button to exit the menu screen.


Setting Up The Television

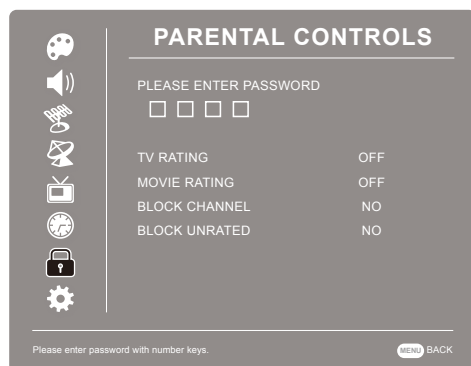

PARENTAL CONTROLS




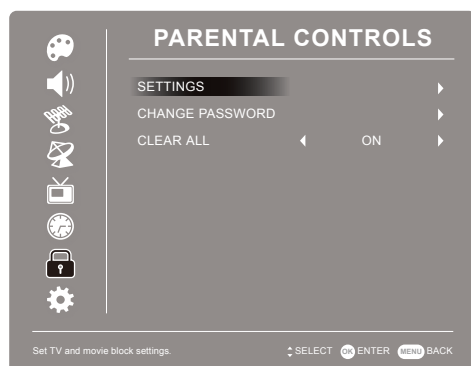

TV RATING


1. Press  button.
2. Use ,  button to highlight “PARENTAL CONTROLS” icon, then press “OK”
3. When the “PLEASE ENTER PASSWORD” , enter the 4 digit password.
 - The default password is 1111.

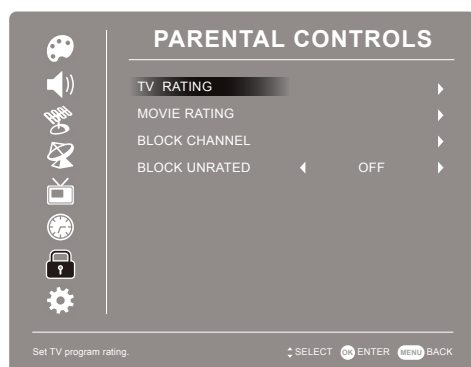

4. Use ,  button to highlight “SETTINGS”, then press “OK”.




5. Use ,  button to highlight “TV RATING”, then press “OK”.

- Press  to return to the previous menu screen.
- Press EXIT button to exit the menu screen.

Setting Up The Television

PARENTAL CONTROLS

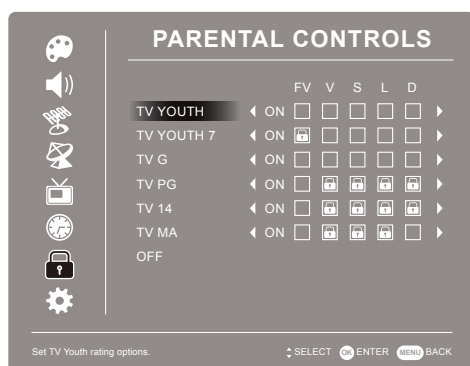


6. Press "OK" button and use ▲,▼button to select ON or OFF, then press "OK".

- TV-Y : For all children
- TV-Y7 : For children above 7
- TV-G : For anyone
- TV-PG : children can watch guardian
- TV-14 : need parental guide
- TV-MA : Only for adult
- FV : Fantasy Violence
- D : Dialog(sexual)
- L : Language(abusive , sexual)
- S : Sexual
- V : violence


MOVIE RATING

1. Press button.
2. Use ▲,▼button to highlight "MOVIE RATING", then press "OK".

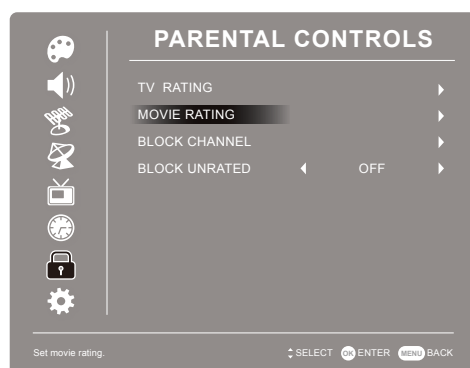

3. Press "OK" button and use ◀, ▶button to select ON or OFF , then press "OK".

- N/A ▪G
- PG ▪PG-13
- R ▪NC-17
- X

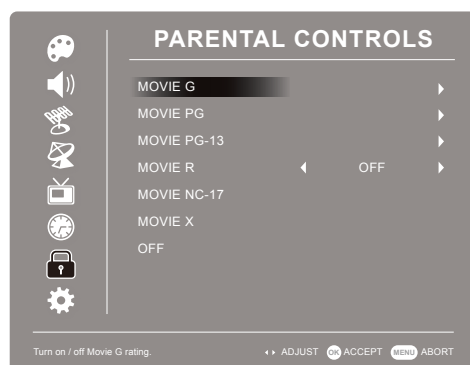


- Press to return to the previous menu screen.
- Press EXIT button to exit the menu screen.

Sp

CHANNEL

2586.5


Setting Up The Television

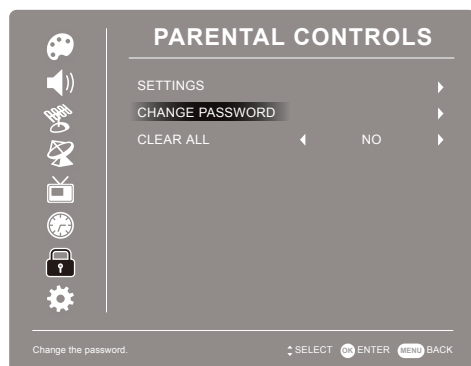


CHAN

1. Press

2. Use and to highlight 'CHANGE PASSWORD' and press 'ENTER'."/>

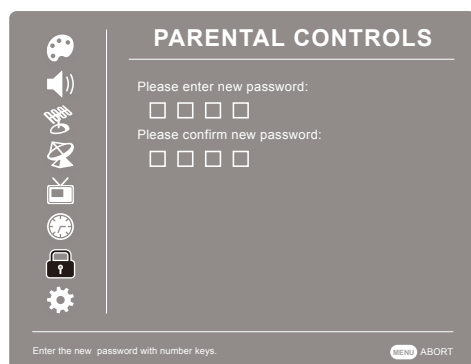

3. Enter the new password using the same keys as the old password.

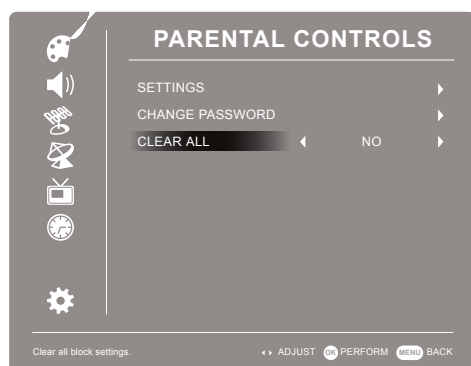

CLEAR


1. Press

2. Use and to highlight 'CLEAR ALL' and press 'ENTER'.


"",
OFF ,


Setting Up The Television

SETUP

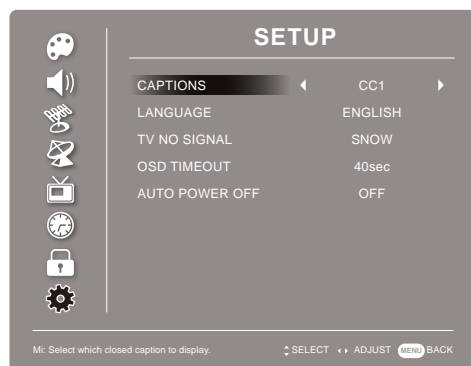



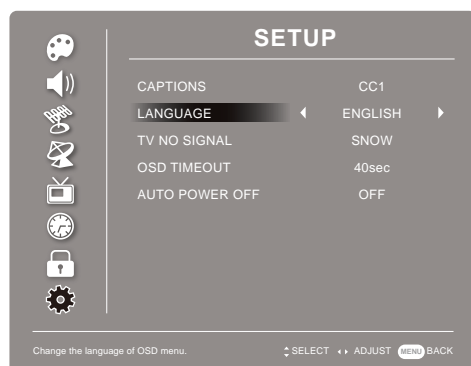


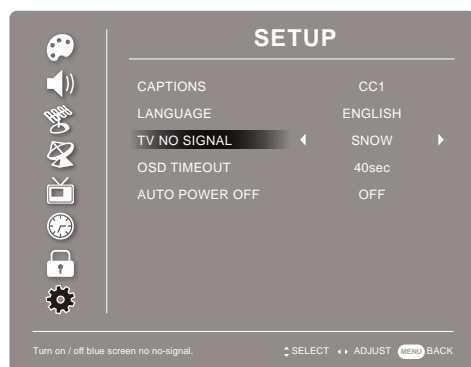
CAPTIONS

1. Press  button.
2. Use ,  button to highlight "SETUP" icon, then press "OK".
3. Use ,  button to highlight "CAPTIONS" and use ,  button to make a choice from "CC1~CC4" "Text1~Text4".









LANGUAGE

1. Press  button.
 2. Use ,  button to highlight "LANGUAGE" and use ,  button to make a choice.
- ENGLISH / ESPAÑOL




TV NO SIGNAL

1. Press  button.
2. Use ,  button to highlight "TV NO SIGNAL" and use ,  button to select SNOW or BLUE SCREEN.

- Press  to return to the previous menu screen.
- Press EXIT button to exit the menu screen.


Setting Up The Television

SETUP

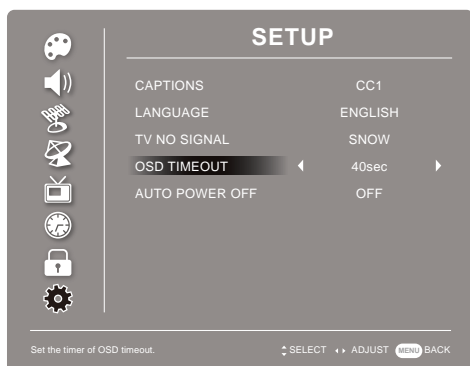





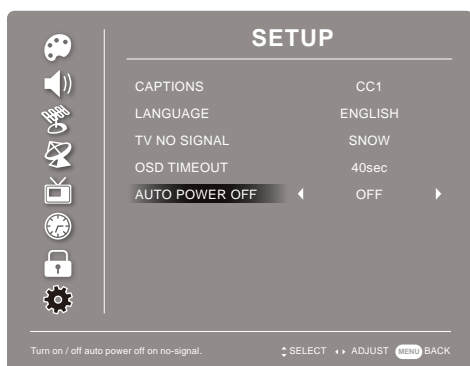

OSD TIMEOUT

1. Press  button.
2. Use ,  button to highlight "OSD TIME-OUT" and use ,  button to make a choice.
 - 10,15,20,25,30,35,40(seconds)








AUTO POWER OFF

1. Press  button.
2. Use ,  button to highlight "AUTO POWER OFF" and use ,  button to select ON or OFF.

- Press  to return to the previous menu screen.
- Press EXIT button to exit the menu screen.

Basic Troubleshooting

Read this section to learn how to maintain and troubleshoot your LCD TV.

Problem	Possible Solution
<p>There is no picture or sound.</p> 	<ol style="list-style-type: none">1. Make sure the power plug is properly connected to the power outlet.2. The channel may not have been scanned and can be re-scanned again from the setup OSD menu.3. Make sure you have selected the correct input mode.
<p>There is just noise.</p> 	<ol style="list-style-type: none">1. The antenna reception strength may be weak.2. Reposition the antenna's placement.3. Make sure the antenna cable is properly connected to the LCD TV set.
<p>Color abnormal or improper.</p> 	<ol style="list-style-type: none">1. Check the color adjustment in the OSD video menu.
<p>Picture is too bright.</p> 	<ol style="list-style-type: none">1. Check the brightness setting; it may be set too high.2. Check the "Backlight" setting in the OSD options menu. The Backlight setting is to adjust the screen's backlight with respect to the environment's lighting.
<p>Picture is too dark.</p> 	<ol style="list-style-type: none">1. Check the brightness and contrast level setting from the OSD video menu.2. Check the "Backlight" setting in the OSD options menu.

Basic Troubleshooting



General Specifications

LCD 32"

LCD Panel	Screen Size	32" diagonal
	Viewable Size	31.44" diagonal
	Resolution	WXGA (H) 1366 x (V) 768 pixels
	Display Color	16, 777, 216 Color
	Aspect Ratio	16 : 9 WIDE
Input/Output	Video in / out	1 Vp-p / 75 Ω
	S-VIDEO in	Y 1 Vp-p / 75 Ω , C 0.7 Vp-p / 75 Ω
	Y / Pb/Cb / Pr/Cr	Y 1 Vp-p / 75 Ω , Cb / Pb / Cr / Pr 0.7 Vp-p / 75 Ω
	Audio L/R in/out	Input: 400 mV / 47 K Ω , Output: 400 mV / 600 Ω
	Analog RGB	VGA x 1
	HDMI	HDMI x 3
	PC Audio in	Phone Jack x 1
	Antenna input	75 Ω
Audio Features	Built-in speaker	10W x 2
Video Features	Color Temperature	NATURE / COOL / WARM / USER
	Screen Size adjustment	WIDE / 4:3 / 16:9 ZOOM / PANORMIC
	Multi picture	Yes
	Progressive Scan	Yes
	3-2 pull down	Yes
Compatibility	Color system	NTSC / ATSC
	Video system	NTSC / ATSC
	SDTV/HDTV	480i, 480p, 1080i, 720p, 1080p
	PC	VGA / SVGA / XGA
Other	Power	AC 100-240V, 50 / 60Hz 150W
	Operative temperature	32° - 95°F
	Storage temperature	14° ~ 104°F
	Dimension	(W) 32 x (D) 4.5x (H) 24 inch (without stand) (W) 32 x (D) 8.7 x (H) 25 inch (with stand)
	Net Weight/ Gross Weight	46.29 Lbs / 52.91 Lbs

■Please refer to page 52 for stand removal for wall mounting.

General Specifications

LCD 37"

LCD Panel	Screen Size	37" diagonal
	Viewable Size	37" diagonal
	Resolution	WXGA (H) 1366 x (V) 768 pixels
	Display Color	16, 777, 216 Color
	Aspect Ratio	16 : 9 WIDE
Input/Output	Video in / out	1 Vp-p/75 Ω
	S-VIDEO in	Y 1 Vp-p/75 Ω , C 0.7 Vp-p/75 Ω
	Y / Pb/Cb / Pr/Cr	Y 1 Vp-p/75 Ω , Cb/Pb / Cr/Pr 0.7 Vp-p/75 Ω
	Audio L/R in/out	Input: 400 mV/47 K Ω , Output: 400 mV/600 Ω
	Analog RGB	VGA x 1
	HDMI	HDMI x 3
	PC Audio in	Phone Jack x 1
Audio Features	Antenna input	75 Ω
	Built-in speaker	10W x 2
Video Features	Color Temperature	NATURE / COOL / WARM / USER
	Screen Size adjustment	WIDE / 4:3 / 16:9 ZOOM / PANORMIC
	Multi picture	Yes
	Progressive Scan	Yes
	3-2 pull down	Yes
Compatibility	Color system	NTSC / ATSC
	Video system	NTSC / ATSC
	SDTV/HDTV	480i, 480p, 1080i, 720p, 1080p
	PC	VGA / SVGA / XGA
Other	Power	AC 100-240V, 50 / 60Hz, 190W
	Operative temperature	32° - 95°F
	Storage temperature	14° ~ 104°F
	Dimension	(W) 37 x (D) 4.5 x (H) 26 inch (without stand)
		(W) 37 x (D) 9.3 x (H) 28 inch (with stand)
	Net Weight/ Gross Weight	57.32 Lbs / 63.93 Lbs

■Please refer to page 52 for stand removal for wall mounting.

General Specifications

LCD 42"

LCD Panel	Screen Size	42" diagonal
	Viewable Size	42.11" diagonal
	Resolution	WXGA (H) 1920 x (V) 1080 pixels
	Display Color	16, 777, 216 Color
	Aspect Ratio	16 : 9 WIDE
Input/Output	Video in / out	1 Vp-p/75 Ω
	S-VIDEO in	Y 1 Vp-p/75 Ω , C 0.7 Vp-p/75 Ω
	Y / Pb/Cb / Pr/Cr	Y 1 Vp-p/75 Ω , Cb/Pb / Cr/Pr 0.7 Vp-p/75 Ω
	Audio L/R in/out	Input: 400 mV / 47 K Ω , Output: 400 mV / 600 Ω
	Analog RGB	VGA x 1
	HDMI	HDMI x 3
	PC Audio in	Phone Jack x 1
Audio Features	Antenna Input	75 Ω
	Built-in Speaker	10W x 2
Video Features	Color Temperature	NATURE / COOL / WARM / USER
	Screen Size Adjustment	WIDE / 4:3 / 16:9 ZOOM / PANORMIC
	Multi Picture	Yes
	Progressive Scan	Yes
	3-2 Pull Down	Yes
Compatibility	Color System	NTSC / ATSC
	Video System	NTSC / ATSC
	SDTV/HDTV	480i, 480p, 1080i, 720p, 1080p
	PC	VGA / SVGA / XGA
Other	Power	AC 100-240V, 50 / 60Hz, 250W
	Operative Temperature	32° - 95°F
	Storage Temperature	14° ~ 104°F
	Dimension	(W) 41 x (D) 4.5 x (H) 29 inch (without stand)
		(W) 41 x (D) 10.1 x (H) 30 inch (with stand)
	Net Weight/ Gross Weight	63.93 Lbs / 74.95 Lbs

■Please refer to page 52 for stand removal for wall mounting.

Preparing Your Proton LCD TV for Wall Mounting

All Proton CS Series LCD TV can be mounted on the wall for viewing. If you choose to mount your TV on the wall, please follow the instructions below for removing the stand.



1. Unplug all of the cables and cords from your TV.
2. Place the TV on a flat and soft surface (blanket, foam, cloth, etc) with the screen facing down.
3. Remove the four (4) screws indicated in figure A.
4. Loosen the two (2) screws in the back of the speaker indicated in figure B.
5. Pull out the stand indicated in figure C.
6. Tighten the two (2) screws in the back of the speaker indicated in figure D.

Caution:

1. It is best to use professional installers to wall mount your new TV.
2. The wall mount itself is not included. Please purchase from your local retailer. Make sure that the bracket will support the weight of the TV.
3. If you have difficulty, please contact Proton at info@protonav.com
4. Proton uses VESA (Video Electronics Standard Association) certified wall mounts.

RGB Frequency Table

The table below shows the frequency ranges supported by the LCD TV. It supports from VGA to XGA. If you are connecting your PC to the LCD TV via the RGB port, please use the following table in order to setup your PC's VGA output for maximum optimization.

Source	Resolution	Vertical Frequency (Hz)
HDMI input	480p	60
	576p	50
	1080i	50/60
	720p	50/60
	1080p	60
Component (Y/PbCb/PrCr)	480i	60
	480p	60
	1080i	60
	720p	60

● P: positive, N: negative

Source	Resolution	Refresh Rate (Hz)	Horizontal Frequency (Khz)	Vertical Frequency (Hz)	Horizontal Sync Polarity (TTL)	Vertical Sync Polarity (TTL)
PC input	640 x 480	60	31.469	59.940	N	N
		72	37.861	72.809	N	N
		75	37.500	75.000	N	N
		85	43.269	85.008	N	N
	800 x 600	60	37.879	60.317	P	P
		72	48.077	72.188	P	P
		75	46.875	75.000	P	P
		85	53.674	85.061	P	P
	1024 x 768	60	48.363	60.004	N	N
		70	56.476	70.069	N	N
		75	60.023	75.029	P	P
		85	68.67	84.997	P	P

Acronyms, Abbreviations, Functions, and Terms

- **1080i/ General:** High quality video processing; 540 lines 1/60 seconds and 540 lines 1/60 seconds; interlace scanning (two step image processing [odd and even lines of pixels alternate]); usually used in HDTV set-up boxes.
- **16:9 zoom/ Screen menu:** This option is generally used to eliminate letterbox “black spots” on the screen.
- **4:3/ Screen menu:** A popular resolution setting that is widely used in cable television, antenna television, video cassettes, and DVDs.
- **480p/ General:** Standardized video processing; 480 lines 1/60 seconds; progressive scanning (top to bottom image processing).
- **720p/ General:** High quality video processing; 720 lines 1/60 seconds; progressive scanning (top to bottom image processing); usually used in HDTV set-top boxes.
- **AC/ General:** Alternating current (The type of current used in a plug).
- **Act window/ Remote control:** The key to switch from controlling the main picture to picture in picture.
- **Auto Power Off/ Options menu:** When this option is on, the TV will automatically turn off after 5 idle minutes or longer on an unavailable channel.
- **Auto Program/ TV menu:** Known as APS (Auto Program Search); searches for channels that are available.
- **VIDEO/ Inputs and outputs:** Analog Video (Composite); used commonly with VCRs and cameras.
- **B- V/ Chip menu:** Block.
- **Backlight/ Options menu:** This adjusts the brightness of the LCD screen. Use this option to adjust the backlights without affecting the contrast, brightness, color, tint, and sharpness.
- **Bass/ Audio menu:** Involves with the lower pitched sounds.
- **Black Bar/ General:** This is a coined term used to describe areas without an image. This can be seen in 4:3 videos and letterbox videos.
- **Blue Screen/ Options menu:** This appears when the channel or source is unavailable.
- **Brightness/ Video menu:** This adjusts the color differences.
- **CATV/ General:** Community Access Television (Cable TV).
- **CC/ Video menu:** Closed captioning.
- **Ch/ Remote control:** Channel.
- **Closed Caption/ Video menu:** this option creates text that corresponds to the dialogue of the viewing program [CC1, CC2, CC3, CC4, Text 1, Text 2, Text 3, Text 4, XDS].

Acronyms, Abbreviations, Functions, and Terms

- **Cool/ Options menu:** Gives a blue tint to the screen (part of color temperature).
- **Color Temperature/ Options menu:** This allows the user to choose among the three styles of colors that are favorable to be projected: cool, nature and warm.
- **Composite/ Inputs and outputs:** This wiring consists of one wire that is responsible for both color and brightness. Used widely in cameras and VCRs.
- **Contrast/ Video menu:** Adjusts brightness differences.
- **DVD/ General:** Digital Versatile Disc (Digital Video Disc).
- **D-VHS/ General:** Digital Video Home System.
- **FCC/ General:** Federal Communications Commission.
- **H (H size, H position)/ Screen menu:** Horizontal.
- **HDMI/ Inputs and outputs:** High Definition Multimedia Interface; this is used widely with high definition Set-up boxes and newer DVD players.
- **HD PVR/ General:** High Definition Personal Video Recorder; this device is used widely in satellite TVs and personal video recorders.
- **LCD/ General:** Liquid Crystal Display.
- **LED/ General:** Light Emitting Diode; a form of a light bulb.
- **Letterbox/ Genera:** This is the video setting that is usually used by “widescreen” videos in DVDs. It includes “black bars” on the bottom and top parts of the screen.
- **Mild/ Video menu:** A video mode that centers all available options (contrast, brightness, saturation, tint, sharpness).
- **Mode/ Video menu:** A selection that allows the user to chose video characteristics: mild, vivid, and standard (user customized).
- **Mono/ Audio options:** A single directional sound.
- **MP/ General:** Main Picture.
- **MPAA/ General:** Motion Picture Association of America.
- **MTS/ TV menu:** Multichannel Television Sound; used on many channels to switch between main and SAP (Secondary Audio Program).
- **Multi Picture/ Remote control:** Switches among picture in picture modes and main picture mode.
- **Mute/ Remote contro:** No sound will be emitted.

Acronyms, Abbreviations, Functions, and Terms

- **Movie Rating Limit/ V-Chip menu:** Makes movie programs with selected ratings unavailable/ available.
- **NAB/ General:** National Association of Broadcasters.
- **Nature/ Options menu:** Natural color tint.
- **NR/ Video menu:** Noise Reduction; imaging noise and distortion will be reduced.
- **NTSC/ Television input:** National Transmission Standards Committee, an analog television input widely used by cable television and standard antennas.
- **Opaque/ Options menu:** Incapable of seeing through.
- **OSD/ General:** On Screen Display.
- **OSD Timeout/ Options menu:** Setup of how much idle time is allowed before the menu screen exits.
- **Panoramic/ Screen menu:** This is generally used to eliminate the “black bars” on the screen; does distort the entire image (which widescreen does with a 4:3 video). The center of the image will not be stretched horizontally.
- **PC- genera/ Inputs and outputs I:** Personal Computer; RGB input (for computers).
- **Pb/ Cb/ Inputs and outputs:** Part of the component input.
- **Position/ Options menu:** Adjusts the position of the picture in picture screen.
- **Pr/Cr/ Inputs and outputs:** Part of the component input.
- **Prog/ TV controls:** Program.
- **Recall/ Remote control:** Goes back to previous channel viewed.
- **RF/ General:** Radio frequency.
- **RGB (PC)/ Inputs and outputs/ General:** Socket used for connecting to a personal computer/ Red Green Blue.
- **R/ L/ Inputs and Outputs:** Right/ left.
- **Sharpness/ Video menu:** Adjusts the sharpness.
- **Skip/ Remote control:** The option allows the user to use the channel + and – buttons and not encounter unavailable channels.
- **Sleep- Remote control:** Gives a time limit for automatically turning off the TV.
- **Source- Remote control/ TV control:** This displays the source input menu.

Acronyms, Abbreviations, Functions, and Terms

- **SPDIF/ Inputs and Outputs:** Coaxial (RF) is a output socket that transmits to the cable connecting from an amplifier/additional speaker system; digital audio output. (for HDMI only)
- **Stereo/ Audio menu:** Multi directional sound (usually has higher quality than mono).
- **S-video/ Connections:** Used widely on DVD players and PCs.
- **Tint/ Video menu:** This is the nature aspect of a color.
- **Transparent/ Options menu:** Capable of seeing through.
- **Treble/ Audio menu:** This involves with the higher pitched sounds.
- **TV Rating Limit- V-Chip menu:** Makes TV programs with selected ratings unavailable/ available.
- **V or V (V Position)/ General/ Screen menu/ V-Chip menu:** Volts/ Vertical/ View.
- **V-Chip/ General:** A chip that allows the television to filter out user-selected ratings.
- **Vivid/ Video menu:** A video mode that gives higher contrast, lower brightness, higher color, and higher sharpness.
- **VCR/ General:** Videocassette Recorder.
- **VGA/ General:** Video Graphics Array.
- **VOL/ Remote control/ TV control:** Volume.
- **Warm/ Options menu:** Gives a red tint.
- **Widescreen/ Screen menu:** This is generally used to view widescreen signals from DVD videos and certain television channels.
- **XDS/ Video menu:** Extended Data Service; provides information of the program, network name, start time, length of the program elapsed time of the program, rating of the program, language of the program, program type, and audio settings of the program.
- **Y/ Luminance:** Part of video signal.

Channel Frequency Table

Channel Frequency Table

	TV CH	CH	Picture Carrier (MHz)		
			TV/STD	CATV HRC	CATV IRC
92		76	535.25	534.00	535.25
93	25		537.25		
94		77	541.25	540.00	541.25
95	26		543.25		
96		78	547.25	546.00	547.25
97	27		549.25		
98		79	553.25	552.00	553.25
99	28		555.25		
100		80	559.25	558.00	559.25
101	29		561.25		
102		81	565.25	564.00	565.25
103	30		567.25		
104		82	571.25	570.00	571.25
105	31		573.25		
106		83	577.25	576.00	577.25
107	32		579.25		
108		84	583.25	582.00	583.25
109	33		585.25		
110		85	589.25	588.00	589.25
111	34		591.25		
112		86	595.25	594.00	595.25
113	35		597.25		
114		87	601.25	600.00	601.25
115	36		603.25		
116		88	607.25	606.00	607.25
117	37		609.25		
118		89	613.25	612.00	613.25
119	38		615.25		
120		90	619.25	618.00	619.25
121	39		621.25		
122		91	625.25	624.00	625.25
123	40		627.25		
124		92	631.25	630.00	631.25
125	41		635.25		
126		93	637.25	636.00	637.25
127	42		639.25		
128		94	643.25	642.00	643.25
129	43		645.25		
130		100	649.25	648.00	649.25
131	44		651.25		
132		101	655.25	654.00	655.25
133	45		657.25		
134		102	661.25	660.00	661.25
135	46		663.25		
136		103	667.25	666.00	667.25

	TV CH	CH	Picture Carrier (MHz)		
			TV/STD	CATV HRC	CATV IRC
137	47		669.25		
138		104	673.25	672.00	673.25
139	48		675.25		
140		105	679.25	678.00	679.25
141	49		681.25		
142		106	685.25	684.00	685.25
143	50		687.25		
144		107	691.25	690.00	691.25
145	51		693.25		
146		108	697.25	696.00	697.25
147	52		699.25		
148		109	703.25	702.00	703.25
149	53		705.25		
150		110	709.25	708.00	709.25
151	54		711.25		
152		111	715.25	714.00	715.25
153	55		717.25		
154		112	721.25	720.00	721.25
155	56		723.25		
156		113	727.25	726.00	727.25
157	57		729.25		
158		114	733.25	732.00	733.25
159	58		735.25		
160		115	739.25	738.00	739.25
161	59		741.25		
162		116	745.25	744.00	745.25
163	60		747.25		
164		117	751.25	750.00	751.25
165	61		753.25		
166		118	757.25	756.00	757.25
167	62		759.25		
168		119	763.25	762.00	763.25
169	63		765.25		
170		120	769.25	768.00	769.25
171	64		771.25		
172		121	775.25	774.00	775.25
173	65		777.25		
174		122	781.25	780.00	781.25
175	66		783.25		
176		123	787.25	786.00	787.25
177	67		789.25		
178		124	793.25	792.00	793.25
179	68		795.25		
180		125	799.25	798.00	799.25
181	69		801.25		

Channel Frequency Table

TV CH	CH	Picture Carrier (MHz)		
		TV/STD	CATV HRC	CATV IRC
182	126	805.25	804.0402	805.2625
183	127	811.25	810.0405	811.2625
184	128	817.255	816.0408	817.2625
185	129	823.25	822.0411	823.2625
186	130	829.25	828.0414	829.2625
187	131	835.25	834.0417	835.2625
188	132	841.25	840.042	841.2625
189	133	847.25	846.0426	847.2625
190	134	853.25	852.0426	853.2625
191	135	859.25	858.0429	859.2625

Warranty Card Info

ONE YEAR LIMITED WARRANTY

This Proton device is guaranteed against manufacturing defects for one full year from the original date of purchase. This warranty is valid at the time of purchase and is non-transferable. Sales slip or other authentic evidence is required to validate warranty. Damage caused by accident, misuse, abuse, improper storage, and/or uncertified repairs is not covered by this warranty.

All mail or transportation costs including insurance are at the expense of the owner.

DO NOT send any product to Proton for warranty without an RMA (Return Merchandise Authorization) and proof of purchase. Ensure delivery method can be tracked (keep tracking number).

Before returning a product, obtain an RMA number by:

Proton International America, Inc.
2540 CORPORATE PLACE, SUITE B111
MONTEREY PARK, CA 91754

E-mail: info@protonav.com
Tel: 1-877-878-7484

The RMA number should be clearly displayed on the outside of the returned package and on the accompanying RMA form. Proton will refuse any package without an RMA number.

Warranty is valid only in the country of purchase.

Proton assumes no liability that may result directly or indirectly from the use or misuse of these products.

IMPORTANT

This warranty will be voided if the device is tampered with, improperly serviced, or the security seals are broken or removed.

Proton International America, Inc.
2540 CORPORATE PLACE, SUITE B111
MONTEREY PARK, CA 91754

E-mail: info@protonav.com
Tel: 1-877-878-7484



RETURN MERCHANDISE AUTHORIZATION (RMA) FORM

RMA Number: _____ Date: _____

Name: _____ E-mail: _____

Company: _____

Address: _____

City: _____ State: _____ Zip: _____

Phone Number: (____) _____

Product Name/Model: _____

Purchase Date: _____ Serial Number: _____

Problem(s) (please be specific): _____
