

Heated

Chip and Dip Tray

deni[®]

Model #15700

IMPORTANT!

Please keep these instructions and
your original box packaging.

www.deni.com



***INSTRUCTIONS
FOR PROPER USE AND CARE***

Chip and Dip Tray

IMPORTANT SAFEGUARDS

When using this electrical appliance, safety precautions should always be observed, including the following:

■ **READ ALL OF THE INSTRUCTIONS.**


- Do not use outdoors or on a wet surface.
- Close supervision is necessary when used near children.
- Place the Heated Chip and Dip Tray securely in the center of the counter or work space.
- Use only as described in this manual with provided attachments. The use of accessory attachments not recommended by manufacturer may cause injury.
- Do not use with damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to Keystone Manufacturing Company, Inc. for proper service and replacement or repair.
- Do not do the following: pull or carry by the cord, use cord as a handle, close a door on cord, pull cord around sharp edges or corners, let cord hang over edge of counter, operate appliance over cord. Keep cord away from heated surface.
- Do not place near hot gas, electric burner or in a heated oven.

- Do not touch hot surfaces. Use potholders when removing or handling hot containers.
- To protect against risk of electrical shock, do not place cord, plug or heating base in water or any other liquid.
- Always unplug when not in use and before cleaning. Allow to cool before cleaning.
- Turn the unit OFF before unplugging. Unit must be OFF before plugging into wall outlet.
- Do not use an extension cord with this unit.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- CAUTION: The warming surface will remain warm after the unit is turned off.
- Always unplug the unit before attempting to move it. Extreme caution must be used when moving appliances containing hot liquids.
- The Deni Chip and Dip Tray has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way, as a safety feature. Reverse the plug if the plug does not fully fit in the outlet. Contact a qualified electrician if it still does not fit. Do not attempt to defeat this safety feature.

- Containers are designed for use with this appliance only. They must never be used on a range top. Do not set a hot container on a wet or cold surface. Do not use a cracked container.
- This unit is recommended for household, indoor use only.

SAVE THESE INSTRUCTIONS

FEATURES

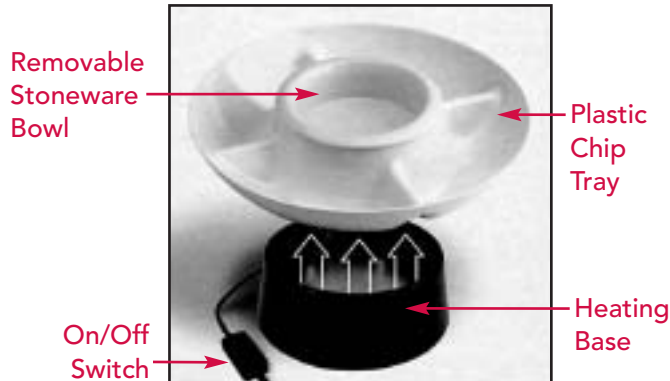

BEFORE FIRST USE

Important: During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after the appliance has been used a few more times.

1. Remove all packing materials and literature.
2. Wash the plastic chip tray and stoneware bowl in warm soapy water. Rinse well and dry thoroughly.
3. Wipe interior and exterior surfaces of the heating base with a soft, clean, damp cloth.

DO NOT IMMERSE THE BASE, CORD OR PLUG IN WATER OR ANY OTHER LIQUID.

HOW TO OPERATE

1. Preheat or cook the ingredients until they have reached the desired temperature. You may pre heat using the stoneware bowl (see safeguards on next page) or by heating in another dish and transferring to the stoneware bowl after preheated in another dish.
2. Place the plastic chip tray over the heating base.
3. Using a potholder or oven mitt, place the stoneware bowl with heated ingredients onto the heated base. **Use caution when handling hot stoneware.**

Chip and Dip Tray

4. Plug the heating base into the wall outlet.
5. Slide the ON/OFF switch to the ON position.
The heating base will keep your ingredients at a consistent temperature for serving.
6. To refill stoneware, slide the ON/OFF switch to the "OFF" position. Lift the stoneware bowl from the base using a potholder or oven mitt. USE CAUTION as the base is still hot.
7. Repeat steps 1-5.

Caution should be taken after stoneware is removed for refilling or cleaning. The metal heating surface will be HOT to the touch and could cause serious injury, including burns. Turn the switch to the OFF position to allow the unit to completely cool before handling after use.

CARE OF STONEWARE BOWL

Like any ceramic, the stoneware cooking pot may crack or break if not properly handled. Failure to follow these instructions can cause breakage resulting in injury or property damage.

To prevent damage:

- All stoneware is breakable. Handle with care.
- ALWAYS USE POTHOLDERS WHEN HANDLING HOT STONEWARE.
- DO NOT place hot stoneware on counter. Use protective trivet.
- DO NOT place stoneware cookware base on any range top burner, under a broiler, microwave browning element, or in a toaster oven.
- DO NOT strike utensils against rim to dislodge food.
- DO NOT use stoneware cookware to pop corn, caramelize sugar, or make candy.
- DO NOT use abrasive cleaners, scouring pads, or any object that will scratch the stoneware.
- DO NOT use or repair any item that is chipped, cracked, or broken.
- DO NOT use stoneware pot for reheating foods or for general food storage.
- Always place foods into the stoneware pot when it is at room temperature; then place pot into base before turning it on.

- NEVER heat the stoneware pot when it is empty.

USE: The stoneware insert can be used in conventional, convection and microwave ovens, in the refrigerator, freezer and in the dishwasher.

CARE: The stoneware insert may be washed by hand or in a dishwasher. Load carefully to avoid stoneware-to-stoneware contact and bumping against other items during cycle.

DO NOT allow stoneware cookware to soak/stand in water for an extended period of time. Applied heat after soaking may cause glaze crazing. If scouring is necessary, use only plastic or nylon cleaning pads with nonabrasive cleaners.

- Never subject the cooking pot to sudden changes in temperature. NEVER place it where it can come in contact with direct heat (e.g., on top of a range or under a broiler).
- When removing the stoneware pot from a microwave, be sure to use potholders or oven mitts.
- Always use potholders or oven mitts when removing stoneware pot from base. Do not set stoneware pot directly on counter top or table; use a trivet or hot pad.

- Unplug unit and allow to cool after use. Do not pour cold water into hot stoneware cooking pot.

CARE OF PLASTIC TRAY:

To prevent cracking or breaking, the plastic chip tray should be treated with special care.

CAUTIONS: Plastic chip tray may break if dropped. Chips, cracks or deep scratches may weaken the tray. The plastic chip tray is dishwasher safe, but it is recommended for the **TOP RACK ONLY**.

NEVER place the Plastic Tray in the microwave or conventional ovens, or on a range or burner.

PRECAUTIONS

- Always unplug unit and allow to cool before cleaning.
- Always handle stoneware carefully. Avoid hitting pot against faucet or other hard surfaces.
- Do not touch sides of the base while food is cooking. Always use care when handling the base. Use potholders or oven mitts to lift the stoneware.

Chip and Dip Tray

TO CLEAN:

This appliance should be cleaned after every use. After unit has been allowed to cool, wash the stoneware in warm, soapy water. Rinse well and dry. If food sticks to the surface of the stoneware, fill the pot with warm, soapy water and allow it to sit for a few hours before cleaning. Wipe interior and exterior surfaces of the base with a soft, slightly damp cloth or sponge.

The plastic chip tray is dishwasher safe (TOP RACK ONLY), however, we recommend washing with warm soapy water. Rinse well and dry.

NEVER IMMERSER THE BASE IN WATER.

NEVER USE ABRASIVE CLEANSERS OR SOURING PADS TO CLEAN THE TRAY, STONEWARE OR BASE AS THESE CAN DAMAGE THE SURFACES.

Dishwasher Cleaning

Stoneware and plastic chip tray may be cleaned in an automatic dishwasher. To prevent damage, position them on the TOP RACK and position them so they will not hit other items during cleaning.

Special Cleaning

If stoneware becomes stained, clean with a non-abrasive cleanser or apply a paste of baking soda with a soft cloth. To remove water spots or mineral deposits, wipe with distilled white vinegar, or pour a small amount into pot and let it soak. After cleaning, wash pot in warm, soapy water, rinse and dry.

TO STORE:

Be sure all parts are clean and dry before storing. Store the appliance in its box or in a clean, dry place. Never store it while it is hot or wet. To store, stoneware pot inside the heating base. Never wrap cord tightly around the appliance; keep it loosely coiled.

CUSTOMER SERVICE

If you have any questions or problems regarding the operation of your Deni Heated Chip and Dip Tray, call our customer service department toll free:

Monday through Friday
8:30 a.m. to 5:00 p.m.
(Eastern Standard Time)
1-800-DENI-822
or email us at
custserv@deni.com

Visit our website at
www.deni.com

Deni by Keystone Manufacturing Company, Inc.®

ONE-YEAR LIMITED WARRANTY

Your Deni Heated Chip and Dip Tray warranted for one year from date of purchase or receipt against all defects in material and workmanship. Should your appliance prove defective within one year from date of purchase or receipt, return the unit, freight prepaid, along with an explanation of the claim. If purchased in the U.S.A. or other country, please send to: Keystone Manufacturing Company, Inc., 33 Norris Street, Buffalo, NY 14207. If purchased in Canada, please send to: Keystone Manufacturing Company, Inc., 151 Cushman Road, St. Catharines, Ontario L2M 6T4. (Please package your appliance carefully in its original box and packing material to avoid damage in transit. Keystone is not responsible for any damage caused to the appliance in return shipment.) Under this warranty, Keystone Manufacturing Company, Inc. undertakes to repair or replace any parts found to be defective.

This warranty is only valid if the appliance is used solely for household purposes in accordance with the instructions. This warranty is invalid if the unit is connected to an unsuitable electrical supply, or dismantled or interfered with in any way or damaged through misuse.

We ask that you kindly fill in the details on your warranty card and return it within one week from date of purchase or receipt.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state or province to province.