



16" Stand Fan with Remote Control Model No: FS3-40R-30

FEATURES

- ▶ Remote Control
- ▶ 3 Speed Settings
- ▶ 4 Hour Auto-off Timer
- ▶ Oscillation
- ▶ LED Display Panel
- ▶ Adjustable Height
- ▶ Adjustable Tilt Head
- ▶ Whisper Quiet Operation
- ▶ Contemporary Design



FS3-40R-30

© 2006 Soleus Air International

Thank you for choosing a Soleus Air 16" Stand Fan.

WARNING: This fan is equipped with a polarized plug (one blade is wider than the other). The plug is intended to fit into a power outlet only one way, with the wide blade in the wide slot. This is a safety feature; if you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician.

DO NOT DEFEAT THE SAFETY PURPOSE OF THE POLARIZED PLUG.

TECHNICAL SPECIFICATIONS

Voltage Rating	120V, 60Hz
Power Consumption	50W
Unit Size	17.7 in. (W) x 15.7 in. (D) x 52 in. (H)
Unit Weight	13.5 lbs

ASSEMBLY

 
WARNING: DO NOT plug in fan before assembly.

Tools required: Phillips screwdriver (not included)


Base and Pole Assembly:

1. Unscrew the "L" screw from the bottom of the lower pole. Slide the bottom of the lower pole into the hole on the base. Use the "L" screw removed earlier to secure the pole to the base.
2. Now slide the top pole (the piece that contains the control panel and fan head) onto the chrome end of the lower pole that was just inserted into the base. Secure these pieces together using the fastener on the back of the top pole.

Fan Head Assembly:

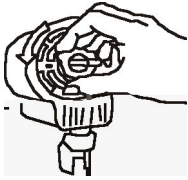

 
Unscrew the mounting nut counter clockwise from the motor shaft.

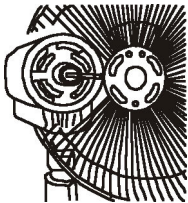


Position the back grill over the motor shaft, fitting the holes in the back grill over the knobs that protrude from the front of the motor. Make sure the rear grill fits securely against the motor housing.



 
Secure the back grill by screwing on the mounting nut. Turn clockwise and tighten firmly.

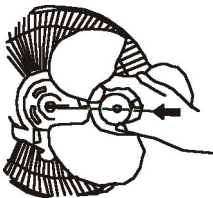

 Slide the fan blade onto the motor shaft with the fan blade's shaft sleeve facing the motor. Make sure the groove in the shaft sleeve fits over the spring bolt on the motor shaft.

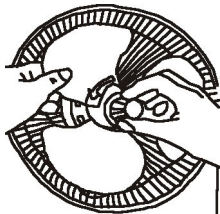

 Attach the fan blade by screwing the securing knob onto the motor shaft counter clockwise.

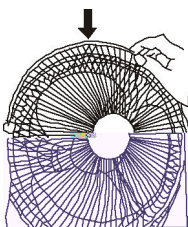

Position front grill so logo is horizontal. Attach the grills together by positioning the top tab of the front grill over the back grill. Firmly press the black ring of the front grill onto the back grill, snapping into place. This completes the assembly.

OPERATING INSTRUCTIONS

Using Fan Controls

1. Set the fan on a stable, level surface.
2. Turn the fan on by pressing the ON/SPEED button located on the control panel or the included Remote Control.
3. Adjust the speed setting by pressing the ON/SPEED on the control panel or the remote control. This fan has 3 speed settings. Each press of the ON/SPEED button will change the speed setting on the fan. The LED lights above the ON/SPEED button will light up when the corresponding speed is selected.
4. To oscillate the fan head, press the SWING button located on the fan control panel or the SWING button on the remote. Each press of the oscillation button will change the oscillation pattern.
5. This fan includes a 4 hour auto shut-off timer. To operate the timer, press the TIMER button located on the remote control. Each press of the TIMER button on the remote will change the time for the fan to automatically shut-off. Press the TIMER button once and the fan will be set turn off in one hour. Press the timer twice and the fan will shut off in two hours, press the timer 3 times and the fan will be set to turn off in 4 hours.
6. To turn the fan off, press the ON/SP/OFF button on the fan, or the POWER/SPEED button on the remote control until the unit turns off.

Adjusting Height and Fan Head Tilt

1. To adjust the height of the fan, turn the Adjustable Height Knob (L) counter-clockwise to loosen the stand. Adjust the fan to the desired height, then firmly tighten to secure into place.
2. To adjust the tilt on the Fan Head, loosen the knob below the Motor Housing and tilt the fan forward/back by pulling or pushing the top of the Fan Grill. The fan will make a clicking noise while being adjusted. Once the Fan Head is set to the desired tilt, tighten the knob to secure into place.

CLEANING & MAINTENANCE

1. Turn the fan off and unplug the unit.
2. Wipe the fan down with a damp cloth for most efficient operation.
3. Air dry the fan completely before use.
4. Never use abrasive cleaning agents or solvents. This may cause damage or deterioration to the surface of the unit.
5. Do not immerse the fan in any form of liquid. Do not allow water to drip on or into the fan motor housing.

Fan Blade Cleaning:

- Make certain the fan is unplugged. Unlock the metal clips on the front grill and remove the front grill. Use a Phillips screwdriver to loosen the securing screw and remove the fan blade.
- The fan blade and grill may be cleaned with a damp cloth and mild detergent.
- Reassemble the fan after the parts have dried completely. To do so, replace the fan blade, tighten the securing screw, and secure the front grill. Do not plug the fan into an electrical outlet until it is fully reassembled.

STORAGE

If the fan will not be used for a long period of time, store it in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

OVERHEAT PROTECTION

A thermostat is built-in to the motor to prevent overheating. If the fan temperature exceeds the limit on the thermostat, the fan will automatically shut-off to prevent overheating and protect the fan components from damage.

REMOTE CONTROL

The supplied remote uses 2 "AAA" batteries. The remote will work at a distance of roughly 25 feet, and an angle of 60°.

WARRANTY

O L

Soleus International Inc. warrants the accompanying Soleus Air FS3-40R-30 16" Stand Fan to be free of defects in material and workmanship for the applications specified in its operation instruction for a period of ONE (1) year from the date of original retail purchase in the United States.

If the unit exhibits a defect in normal use, Soleus International Inc. will, at its option, either repair or replace it, free of charge within a reasonable time after the unit is returned during the warranty period.

As a condition to any warranty service obligation, the consumer must present this Warranty Certificate along with a copy of the original purchase invoice.

THIS WARRANTY DOES NOT COVER:

- Damage, accidental or otherwise, to the unit while in the possession of a consumer not caused by a defect in material or workmanship.
- Damage caused by consumer misuse, tampering, or failure to follow the care and special handling provisions in the instructions. This includes dents, accidental or otherwise, to the base and head of the unit.
- Damage to the finish of the case, or other appearance parts caused by wear.
- Damage caused by repairs or alterations of the unit by anyone other than those authorized by Soleus International Inc.
- Freight and Insurance cost for the warranty service.

ALL WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY ARE LIMITED TO ONE-YEAR DURATION OF THIS EXPRESS LIMITED WARRANTY. SOLEUS INTERNATIONAL INC. DISCLAIMS ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES AND IN NO EVENT SHALL SOLEUS INTERNATIONAL INC'S LIABILITY EXCEED THE RETAIL VALUE OF THE UNIT FOR BREACH OF ANY WRITTEN OR IMPLIED WARRANTY WITH RESPECT TO THE UNIT.

This warranty covers only new products purchased from our authorized dealers or not cover used, salvaged, or refurbished products.

As some states do not allow the limitation or exclusion of incidental or consequential damages, or do not allow limitation on implied warranties, the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

F T S & S
Please Call (888) 876-5387

Or Write To:
Soleus International Inc.
9451 Telstar Ave.
El Monte, CA 91731 USA
www.soleusair.com