

WARNING:
To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

 
CAUTION:
Use of any controls, adjustments or procedures other than those specified within this manual, may result in hazardous radiation exposure.
Caution Marking and rating plate are located at bottom of product.




CAUTION - TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.

CAUTION - DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.


CAUTION - TO REDUCE THE RISK OF FIRE, DO NOT PLACE ANY HEATING OR COOKING APPARATUS BENEATH THIS UNIT.



 The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The house with an arrowhead symbol is intended to alert the user to use the transformer in normal indoor temperatures, not extreme temperatures.

Special Care & Handling

- Avoid rough handling such as bumping or dropping.
- Avoid extreme temperatures. For best results, use between 39° F and 120° F (4° C and 38° C).
- Clean using only a slightly damp cloth. Do not use cleaners with harsh chemical agents or detergents.
- To avoid damaging the unit, never place it near radiators, in front of heating vents, in direct sunlight, or near water.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable I interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Limited 90-Day Warranty

EXCALIBUR ELECTRONICS, INC., warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, EXCALIBUR ELECTRONICS, INC., will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to the factory address below. The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of the top panel voids all warranties. This warranty does not cover cost of repairs made or attempted outside of the factory. Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply. The only authorized service center in the United States is:

Excalibur Electronics, Inc.
13755 SW 119th Ave.
Miami, FL 33186 U.S.A.

Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter detailing the complaint, along with your daytime telephone number, inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to the above address, specifying the model and the problem.

PLEASE DO NOT SEND YOUR UNIT WITHOUT RECEIVING AN ESTIMATE FOR SERVICING.
WE CANNOT STORE YOUR UNIT!



Excalibur Electronics, Inc.
13755 SW 119th Avenue • Miami, FL 33186
Tel: 305.477.8080 • Fax: 305.477.9516 • www.ExcaliburElectronics.com

SOUNDMASTER is a trademark of Excalibur Electronics, Inc.
iPod is a trademark of Apple, Inc., registered in the U.S. and other countries.
Actual product may differ slightly from photograph.



Model 180



ORBIT
PORTABLE SPEAKERS FOR iPod®

SOUNDMASTER™ ORBIT OPERATION MANUAL

Introduction

Congratulations on your purchase of Excalibur Electronic's **SOUNDMASTER™ Orbit**. You and your friends will enjoy hours of great music with this innovative speaker set. It's compatible with most iPod models. Your SOUNDMASTER™ Orbit includes crystal-clear sound from four custom-designed neodymium micro drivers. It has a built-in docking station that provides synchronization, data transfer and recharging options. It even has a secondary input jack so you can connect your SOUNDMASTER™ Orbit to your computer. Your SOUNDMASTER™ Orbit is easy to use, but be sure to use it safely. Before starting, please read this manual thoroughly, especially noting safety and care. Keep this manual for reference. This package includes one SOUNDMASTER™ Orbit, seven dock adapters, one AC adapter, one mini-jack cable, and user's guide.



Package Includes one of the following models:
180-1 (White) 180BK-1 (Black) 180P-1 (Pink) 180R-1 (Red) 180B-1 (Blue) 180MP-1 (Metallic Pink)
180MB-1 (Metallic Blue) 180MG-1 (Metallic Green) 180MS-1 (Metallic Silver)
180MR-1 (Metallic Red)
iPod not included.

Specifications:

- Crystal-clear sound from 4 custom-designed neodymium Micro Drivers
- Built-in docking station. Provides synchronization, data transfer and power recharging. Dock adapters included.
- Secondary input jack connects to other audio products including laptop computers, older iPod devices and other MP3 players.
- Power output: 8W.

Modifications not approved by Excalibur Electronics voids warranty.

 
For Your Safety: When disconnecting the DC power cord, pull the power plug only, do not pull the cord itself. Never handle the power plug with wet hands, as this may cause fire or electric shock.

Warning

- To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.
- To prevent danger of electric shock do not open the product housing.
- To prevent electric shock, make sure to fully insert the plug into the wall socket.
- Do not attempt to repair the unit by yourself. Servicing should be done by qualified technicians only.

Using Your SOUNDMASTER™ Orbit

Carefully remove your SOUNDMASTER™ Orbit and its accessories from the packaging. Based on your iPod model, choose the correct dock adapter. Slip the dock adapter into the docking station. Your iPod will insert in the front of the dock adapter. Press it down until you hear a clicking sound. Then, connect the power adapter to the back of your SOUNDMASTER™ Orbit and to a wall socket. Press the POWER button on the back of the unit. A blue LED light will turn on when the unit system is on. If you are using iPod Classic, connect the auxiliary cable from the headphones into the AUDIO IN outlet on the back of your SOUNDMASTER™ Orbit. You can also connect your SOUNDMASTER™ Orbit to your computer or laptop. Connect your computer to your SOUNDMASTER™ Orbit by using the PC input port on the back of the unit (PC connector cable not included). Once you're finished setting up your Orbit Sound System, you're ready to play. Use the controls on your iPod to select a song or playlist. Press the VOLUME+ and VOLUME- buttons on the front of the unit to adjust the volume.

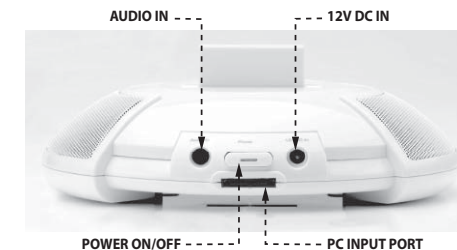

IMPORTANT SAFETY INSTRUCTIONS

1. Read and keep these instructions for reference.
2. Heed all warnings and follow all instructions.
3. Do not use this product near water.
4. Clean using only a slightly damp cloth. Do not use cleaners with harsh chemical agents or detergents.
5. Do not block any of the ventilation openings.
6. Install and use in accordance with the manufacturers instructions.
7. Do not place product near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
8. This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature; if you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
9. Protect the power cord from being damaged or pinched.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug product during lightning storms or when you are not going to use it for a long period of time.
12. Refer all servicing to qualified service personnel. Service is required when the product has been damaged in any way. This includes, but isn't limited to, a damaged power supply cord or plug, liquid spilt or an object dropped onto the product, exposure to rain or moisture, dropping the product or it not operating normally.