


Lamp Replacement for Sanyo PLC-XE50 & XE50A Projectors

When the projection lamp of the projector reaches its end of life, the Lamp replacement icon appears on the screen and LAMP REPLACE indicator lights yellow. Replace the lamp with a new one promptly. The timing when the LAMP REPLACE indicator should light is depending on the lamp mode.

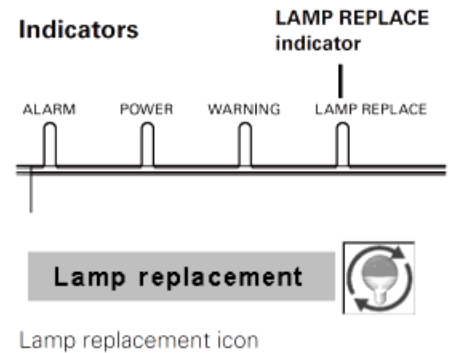

WARNING:
TURN OFF THE UV LAMP BEFORE
OPENING THE LAMP COVER

CAUTION

Allow a projector to cool for at least 45 minutes before you open the Lamp cover. The inside of the projector can become very hot.

CAUTION

For continued safety, replace with a lamp of the same type. Do not drop a lamp or touch a glass bulb! The glass can shatter and may cause injury.

When ordering a replacement lamp, first check which model projector you have.


PLC-XE50
Lamp No. 610 337 9937
or
PLC-XE50A
Lamp No. 610 347 8791

Follow these steps to replace the lamp.

1. Turn off the projector and unplug the AC power cord. Let the projector cool for at least 45 minutes.
2. Remove the screw from the lamp cover and open the Cover.
3. Loosen the two (2) screws that secure the lamp. Lift the lamp out of the projector by using the handle.
4. Replace the lamp with a new one and secure the two (2) screws. Make sure that the lamp is set properly. Close the lamp cover and secure the screw.
5. Connect the AC power cord to the projector and turn on the projector.

Follow these steps to reset the lamp counter.

1. Turn the projector on and press the MENU button to display the On-Screen Menu. Use the Point Δ / ∇ buttons to move the red frame pointer to the Setting Menu icon.
2. Use the Pointed buttons to move the red frame pointer to Lamp counter and then press the SELECT button. The first dialog box appears showing the total accumulated lamp time and reset option. If you select Reset, "Lamp replacement counter Reset?" appears. Select "Yes" to continue.
3. Another confirmation dialog box appears, and selects "Yes" to reset the Lamp replacement counter.

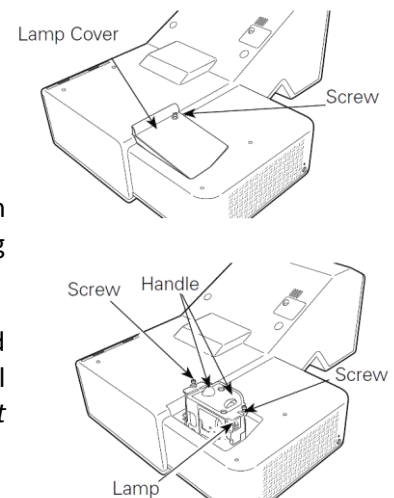

IF A LAMP EXPLODES, THE FOLLOWING SAFETY PRECAUTIONS SHOULD BE TAKEN.

If a lamp explodes, disconnect the projector's AC plug from the AC outlet immediately. Contact an authorized service station for a checkup of the unit and replacement of the lamp. Additionally, check carefully to ensure that there are no broken shards or pieces of glass around the projector or coming out from the cooling air circulation holes. Any broken shards found should be cleaned up carefully. No one should check the inside of the projector except those who are authorized trained technicians and who are familiar with projector service. Inappropriate attempts to service the unit by anyone, especially those who are not appropriately trained to do so, may result in an accident or injury caused by pieces of broken glass.