



# IC3 *ICR6307DT* INSTRUCTION MANUAL



# Warnings and Precautions

---

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Any use of the controls or an adjustment to the procedures other than those specified herein may result in hazardous radiation.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.



**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Features

---

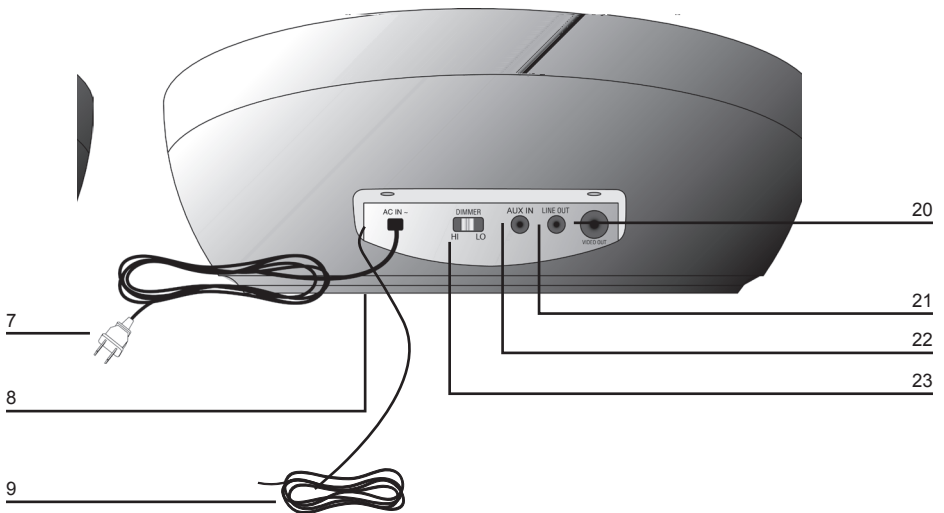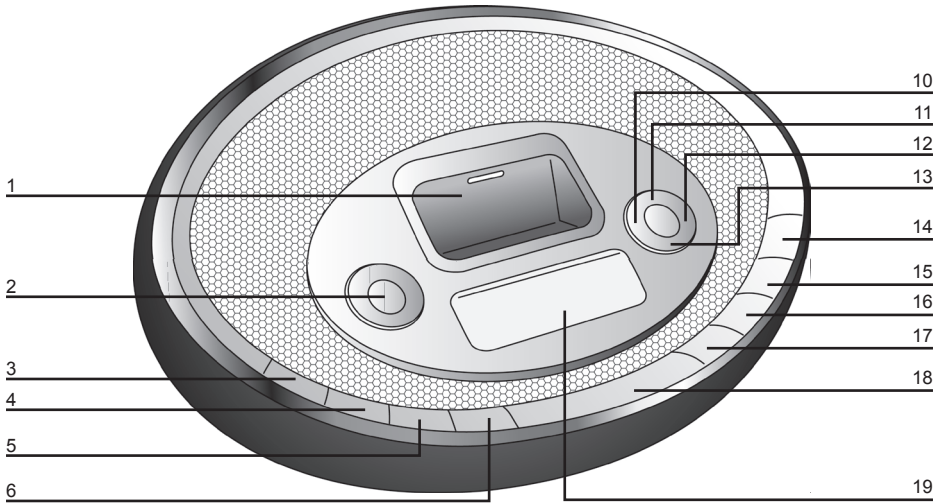

# Features Defined


---

- 1 **iPod Docking Station** Connect your iPod, iPod mini, or iPod nano.
  - 2 **VOLUME** Press the up arrow to increase the volume, and the down arrow to decrease volume.
  - 3 **POWER** Press the POWER button to turn the radio off or on.
  - 4 **BAND** Press the BAND button to switch between AM or FM radio stations.
  - 5 **FUNCTION** Press the FUNCTION button to switch between radio and line-in control.
  - 6 **EQ** Press the EQ button to switch equalizer modes between Classical, Jazz, Rock, and Pop.
  - 7 **AC Cord** (120V / 60 Hz) The attached AC (Alternating Current) Cord provides power to the player.
  - 8 **Battery Back-Up** (2 - AAA Batteries) The Battery Back-Up will save the clock and alarm settings in case of a power outage. The display will not be active without AC Power. (batteries not included)
  - 9 **FM Antenna** The FM Wire Antenna provides flexibility and range when adjusting the FM reception. An AM Antenna is built into the player.
  - 10 **Prev/Search** Press the Prev/Search button to decrease the radio frequency, or to decrease the clock time when adjusting the clock.
  - 11 **IPOD** Press the IPOD button to power on an iPod and enable control through the player.
  - 12 **Next/Search** Press the Next/Search button to increase the radio frequency, or to increase the clock time when adjusting the clock.
  - 13 **PLAY/PAUSE/M-UP** Press the PLAY/PAUSE/M-UP button to play or pause an iPod, or to cycle up through the preset radio stations.
  - 14 **DISPLAY** In radio mode press the display button to switch between viewing the time or the radio frequency.
  - 15 **ALM 2** Use the ALM 2 button to view and adjust the alarm 2 time, and to set alarm 2 to buzzer, radio, or iPod.
  - 16 **ALM 1** Use the ALM 1 button to view and adjust the alarm 1 time, and to set alarm 1 to buzzer, radio, or iPod.
  - 17 **MEM/CLK SET** Press the MEM/CLK SET button to program a radio station into the presets, or to adjust the clock.
  - 18 **SNOOZE / Sleep** Press the SNOOZE button to delay the alarm for five minutes after the alarm sounds. Press the Sleep button to set the player to turn off after 10 - 90 minutes.
  - 19 **LCD Display** View the Time, AM Indicator, iPod Indicator, and Radio Frequency through this Liquid Crystal Display.
  - 20 **Video Out** Plug the yellow connector of an AV Cord in the Video Output to send a video signal from a Video iPod to a source (TV) with a Video Input.
  - 21 **AUX-Out** Use the Line-Out jack to connect the player to external speakers.
  - 22 **Line-In** Use the line-in jack to connect an iPod shuffle or other audio device to the player.
  - 23 **DIMMER** Toggle the DIMMER switch between HI and LO to adjust the brightness of the LCD Display.
-

# Peripherals

WARNING: Danger of explosion if batteries are incorrectly installed. Replace only with the same or equivalent type.

The button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste

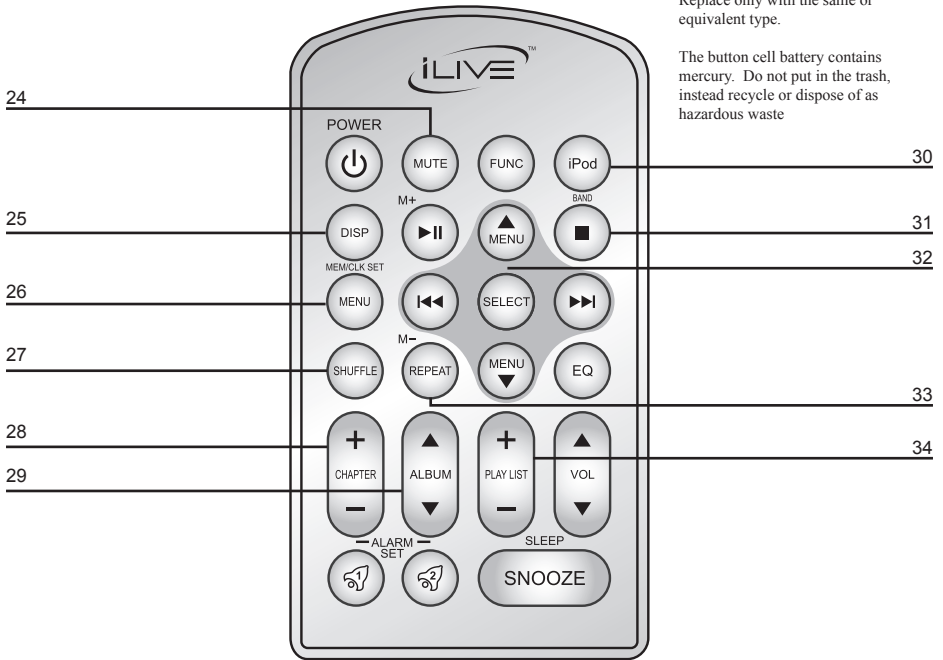

Buttons that are not defined in the Peripherals section, are defined in the Features section.

# iPod Inserts

Model	#	iPod Capacity
iPod (third generation)	1	10GB, 15GB, 20GB
	2	30GB and 40GB
iPod mini	3	4GB and 6GB
iPod	4	20GB and U2 Special Edition
	5	40GB
iPod with color display	6	20GB, 30GB, and U2 Special Edition
	7	40GB
iPod nano	8	1GB, 2GB, and 4GB
iPod with video	9	30GB
	10	60GB and 80GB
iPod nano (second generation)	11	2GB, 4GB, and 8GB

# Peripheral Defined

---

- 24 MUTE** Press the MUTE button to decrease the volume entirely.
- 
- 25 DISPLAY** In radio mode press the DISPLAY button to switch between viewing the time or the radio frequency.
- 
- 26 MEM/CLK SET, MENU** Press the MEM/CLK SET button to program a radio station into the presets, or to adjust the clock. Press the MENU button to enter the menu on an iPod.
- 
- 27 SHUFFLE** Press the SHUFFLE button to randomly play songs on an iPod.
- 
- 28 CHAPTER** Press up on the CHAPTER button to increase the chapter number, or press down on the CHAPTER button to decrease the chapter number.
- 
- 29 ALBUM** Press up on the ALBUM button to increase the album number, or press down on the ALBUM button to decrease the album number.
- 
- 30 IPOD/BAND** Press the IPOD/BAND button to power on an iPod and enable control through the player, or press the iPod/Band button, with the radio function on, to switch between AM and FM frequencies.
- 
- 31 STOP** Press the STOP button to stop a song on an iPod.
- 
- 32 Navigation Controls/SELECT** Use the Navigation Controls to move through an iPod menu system. Press the SELECT button to select a song, photo, or video on your iPod.
- 
- 33 REPEAT** Press the REPEAT button to switch between REPEAT 1, REPEAT ALL, or Off.
- 
- 34 PLAYLIST** Press up on the PLAYLIST button to cycle up through the playlists on an iPod, or press down on the PLAYLIST button to cycle down through the playlists on an iPod.
- 

## Operations

---

### Setting the Clock

- a. Press and hold the CLK SET button.
- b. Press the Next/Search and Prev/Search buttons to toggle between 12HR and 24HR time, and press the CLK SET button to select either option.
- c. Press the Next/Search button to cycle up through the hours, or press the Prev/Search button to cycle down through the hours. Press the CLK SET button to select the hour.
- d. Press the Next/Search button to cycle up through the minutes, or press the Prev/Search button to cycle down through the minutes. Press the CLK SET button to select the minute, and finish setting the time.

---

*continued*

# Operations

---

## Setting the Alarm

- a. Press the ALM 1 button.
- b. Press and hold the ALM 1 button.
- c. Press the Next/Search button to cycle up through the hours, or press the Prev/Search button to cycle down through the hours. Press the ALM 1 button to select the hour.
- d. Press the Next/Search button to cycle up through the minutes, or press the Prev/Search button to cycle down through the minutes. Press the ALM 1 button to select the minute.
- e. Press the Next/Search button to cycle up through the different alarm modes ( Radio, Buzzer, or iPod ). After a mode is selected press the ALM 1 button to finish setting the alarm.
  - *This operation also applies to setting alarm two.*

## Viewing Video or Photos from your iPod on an External Device

- a. Using a video cable, connect an external device such as a TV to the Video Out port on the player.
- b. Insert your iPod with video or photo capabilities into the iPod Docking Station with the appropriate insert.
- c. You will now be able to control your iPod from the player's control panel. Using the PLAY/PAUSE, NEXT/SEARCH, and PREV/SEARCH buttons you can move from one video or photograph to the next, play, and pause. Connecting Other

## Digital Audio Devices

- a. Use a line-in cord to connect an iPod shuffle or other audio device to the line-in port.
- b. Press the FUNCTION button to activate the line-in.
- c. The iPod shuffle or other audio device will now play through the speakers of the player.



## Service Information

**Address** 2116 Carr Street, St. Louis MO, 63106

**Phone** 1-314-621-2881

**Fax** 1-314-588-1805

**Email** [customerservice@ilive.net](mailto:customerservice@ilive.net)

**Website** [www.ilive.net](http://www.ilive.net)

---

To download this Instruction Manual in English, Spanish, or French visit the Support section at [www.ilive.net](http://www.ilive.net).

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en [www.ilive.net](http://www.ilive.net).

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à [www.ilive.net](http://www.ilive.net).