


COMPETENCE B3741-4

Built-In Electric Oven

Operating Instructions

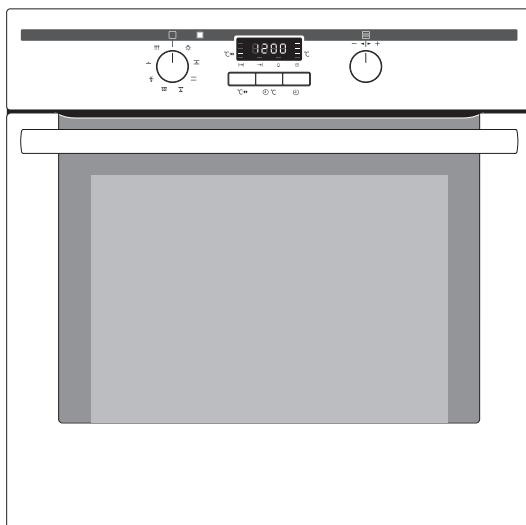

Dear Customer,

Please read these user instructions carefully and keep them to refer to later.

Please pass the user instructions on to any future owner of the appliance.

The following symbols are used in the text:



Safety instructions

Warning! Information that affects your personal safety.

Important! Information that prevents damage to the appliance.



Useful tips and hints



Environmental information

Contents

Operating Instructions	5
Safety instructions	5
Disposal	6
Description of the Appliance	7
General Overview.....	7
Control Panel	7
Oven Features.....	8
Oven accessories	8
Before Using for the first time	9
Setting and changing the time	9
Initial Cleaning.....	10
Using the Oven	11
Switching the Oven On and Off.....	11
Speedcook.....	14
Oven Functions.....	15
Inserting the Shelf and Tray.....	16
Clock Functions	17
Other Functions	23
Switching off the display	23
Oven's child safety device	23
Oven safety cut-out.....	24
Uses, Tables and Tips	25
Baking.....	25
Baking table	27
Table for Bakes and Gratins.....	30
Frozen Ready Meals Table	30
Roasting	31
Roasting table.....	32
Wide grilling.....	34
Grilling table.....	34
Defrosting.....	35
Defrosting table	35
Making Preserves.....	36

Cleaning and Care	38
Outside of the appliance	38
Oven interior	38
Accessories	38
Pyrolytic cleaning	39
Side rails	40
Oven Lighting	41
Oven Door	42
Oven door glass	43
What to do if	45
Service	47

Operating Instructions



Safety instructions



This appliance conforms with the following EU Directives:
– 73/23/EEC dated 19.02.1973 Low Voltage Directive
– 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
– 93/68/EEC dated 22.07.1993 CE Marking Directive

Electrical safety

- This appliance must be only connected by a **registered electrician**.
- In the event of a fault or damage to the appliance: Take the fuses out or switch off.
- **Repairs** to the appliance must only be carried out by **qualified service engineers**. Considerable danger may result from improper repairs. If repairs become necessary, please contact our Customer Services or your dealer.

Child Safety

- Never leave children unsupervised when the appliance is in use.

Safety whilst Using

- This appliance is intended to be used for cooking, frying and baking food in the home.
- Take care when connecting electric appliances to sockets nearby. Do **not** allow connecting leads to come into contact with hot rings or to catch beneath the hot oven door.
- **Warning: Risk of burns!** The interior of the oven becomes hot during use.
- Using ingredients containing alcohol in the oven may create an alcohol-air mixture that is easily ignited. In this case, open the door carefully. Do not have embers, sparks or naked flames in the vicinity when opening the door.



Information on acrylamides

According to the latest scientific knowledge, intensive browning of food, especially in products containing starch, can constitute a health risk due to acrylamides. Therefore we recommend cooking at the lowest possible temperatures and not browning foods too much.

How to avoid damage to the appliance

- Do not line the oven with aluminium foil and do not place baking trays, pots, etc. on the oven floor, as the heat that builds up will damage the oven enamel.
- Fruit juices dripping from the baking tray will leave stains, which you will not be able to remove. For very moist cakes, use a deep tray.
- Do not put any strain on the oven door when open.
- Never pour water directly into the oven when it is hot. This could cause damage to or discoloration of the enamel.
- Rough handling, especially around the edges of the front panel, can cause the glass to break.
- Do not store any flammable materials inside the oven. These could ignite when the oven is switched on.
- Do not store any moist foods inside the oven. This could damage the oven enamel.



Note on enamel coating

Changes in the colour of the oven's enamel coating as a result of use do not affect the appliance's suitability for normal and correct use. They therefore do not constitute a defect in the sense of the warranty law.

Disposal



Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.



Old appliance

Please dispose of your old appliance in line with the guidelines for disposal in your community.




Warning: So that the old appliance can no longer cause any danger, make it unusable before disposing of it.


To do this, disconnect the appliance from the mains supply and remove the mains cable from the appliance.

Description of the Appliance


General Overview

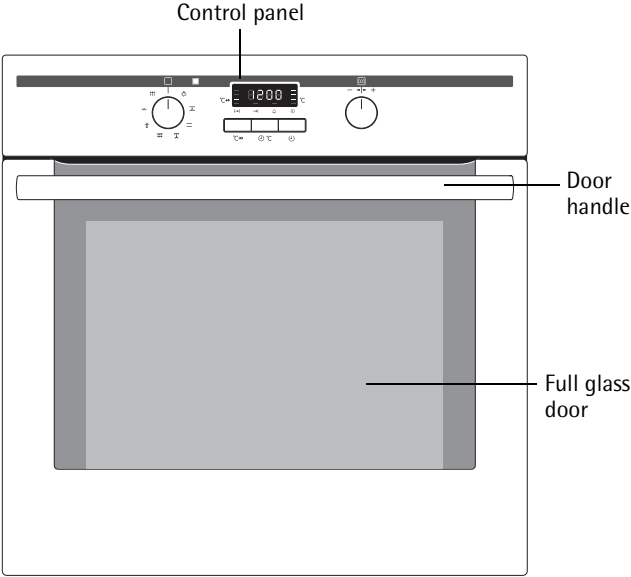

Control Panel

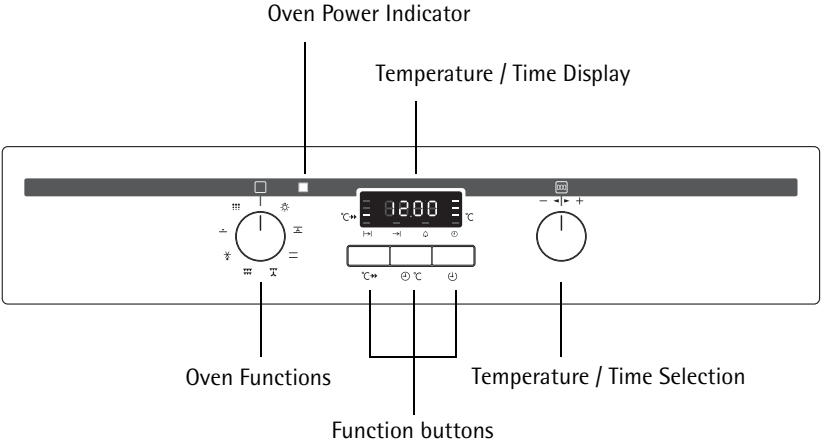


Oven Features

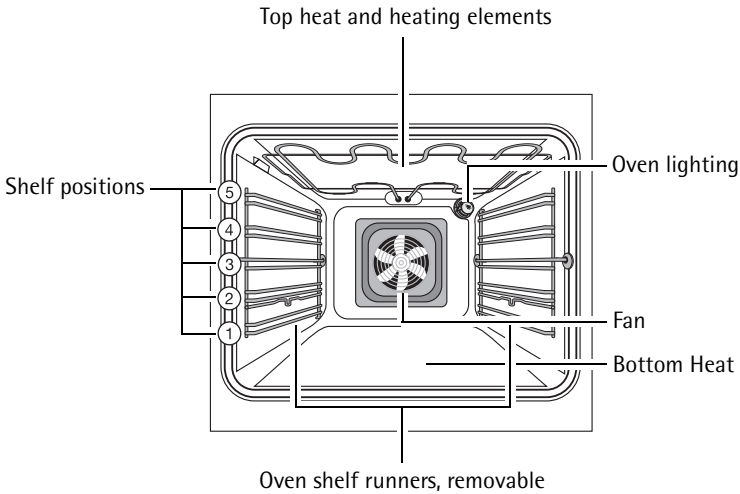

Oven accessories


Combination shelf

For dishes, cake tins, items for roasting and grilling.

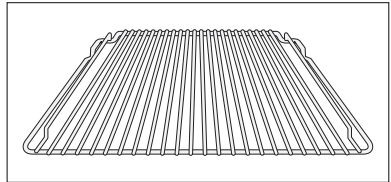

All-purpose tray


For moist cakes, roasts or for use as a baking tray or a pan to collect fat.


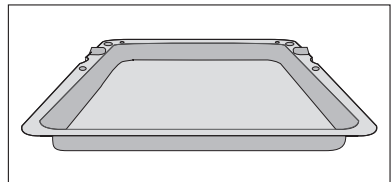



Before Using for the first time

Setting and changing the time

i The oven only operates when the time has been set.




When the appliance has been connected to the electrical supply or when there has been a power cut, the function indicator Time  flashes automatically.

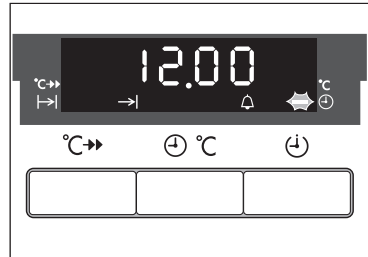
1. To change a time that has already been set, press the Select  button repeatedly until the function indicator Time  flashes.
2. Using the $+$ / $-$ control knob, set the current time.



After approx. 5 seconds, the flashing stops and the clock displays the time of day set.

The appliance is now ready to use.

i The time can only be modified, if the child safety device is deactivated, none of the Countdown , Cook time  or End time  clock functions and no oven function is set.

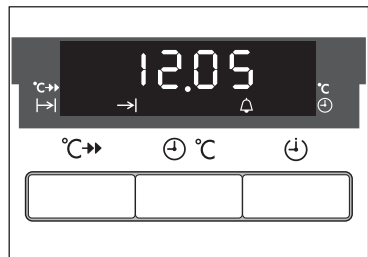

Initial Cleaning


Before using the oven for the first time you should clean it thoroughly.



Caution: Do not use any caustic, abrasive cleaners! The surface could be damaged.




To clean metal fronts use commercially available cleaning agents.

1. Turn the oven function switch to oven lighting .
2. Remove all accessories and the shelf support rails and wash them with warm water and washing up liquid.
3. Then wash out the oven with warm water and washing-up liquid, and dry.
4. Wipe the front of the appliance with a damp cloth.

Using the Oven

Switching the Oven On and Off

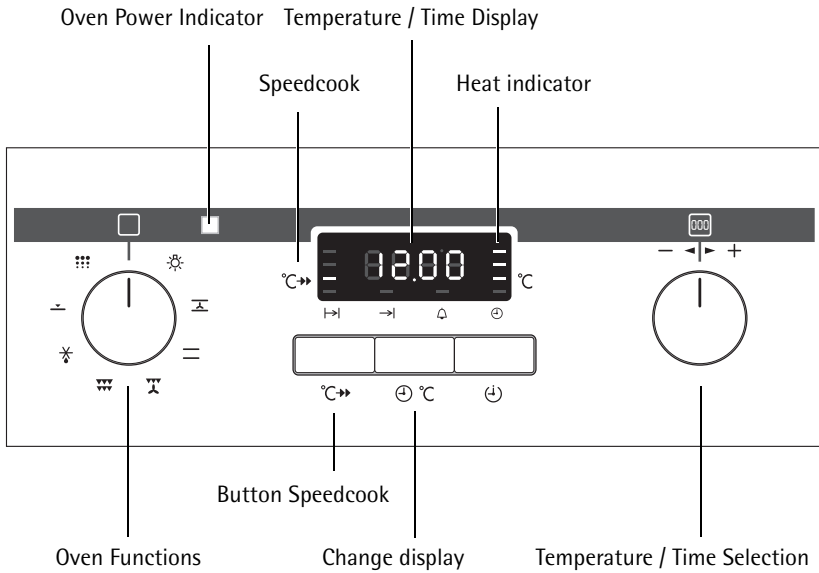


Switching the oven on

Turn the oven functions control knob to the desired function. The oven power indicator lights up. The temperature display shows the suggested temperature for the oven function selected.


The oven starts to heat up.

When the temperature set is reached, an audible signal sounds.

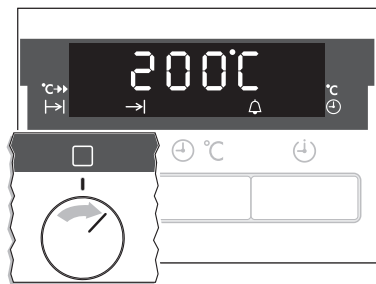


Changing the oven temperature

Use the + / - control knob to raise or lower the temperature.
The setting changes in steps of 5 °C.

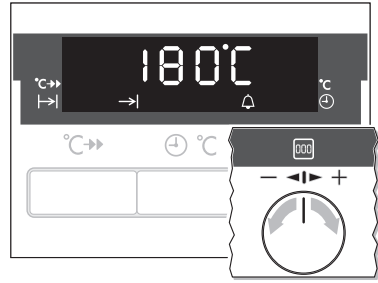

Switching the oven off

To turn the oven off, turn the oven functions control knob to the OFF position.

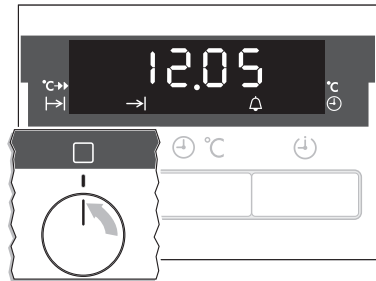

Cooling fan


When the oven is switched on, the fan comes on automatically to keep the surfaces the appliance cool. When the oven is switched off, the fan continues to operate to cool the appliance down, then switches itself off.



Heat indicator


Indicates warming up

When the oven function has been **switched on** the bars that slowly light up one after the other indicate how far the oven has heated up.

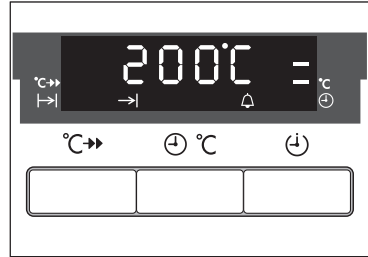


Fast heat indicator

When the fast heat function has been **switched on** °C→▶ the bars that flash one after the other indicate that fast heat is operating. In addition the bars next to the symbol °C→▶ light up.

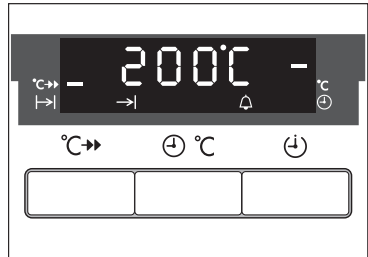

Residual heat indicator

When the oven has been **switched off**, the bars that are still lit indicate the remaining residual heat in the oven.

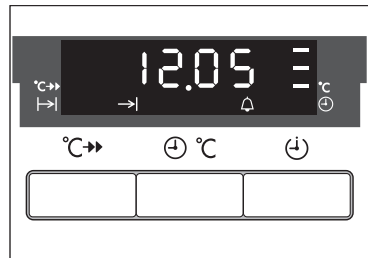



Speedcook

After an oven function is selected, using the additional function Speedcook °C→ the empty oven can be pre-heated in a relatively short time.



Important: Do not put the food to be cooked into the oven, **until Speedcook is completed** and the oven is operating using the desired function.




1. Set the desired oven function (e. g., Conventional ). If necessary, change the suggested temperature.
2. Press the Speedcook  button. The bars next to the symbol °C→ light up.

When the bars flash one after another it shows that Speedcook is operating.

When the temperature set is reached, the bars of the heat indicator light up and the bars next to the symbol °C→ go out. An audible signal sounds.









The oven now continues heating according to the pre-set oven function and temperature. You can now place the food in the oven.



The function Speedcook °C→ can be switched on together with the oven functions Fan-assisted circulation , Conventional  and Rothitherm .

Oven Functions

The oven has the following functions:

	Oven function	Application	Heating element/ fan
	Light	Using this function you can light up the oven interior, e.g. for cleaning.	---
	Fan-assisted circulation	For baking on up to two oven levels . Set the oven temperatures 20-40 °C lower than when using Conventional.	Top heat, bottomheat, fan
	Conventional	For baking and roasting on one oven level .	Top heat, bottomheat
	Rothitherm	For roasting larger joints of meat or poultry on one level. The function is also suitable for gratinating and browning .	Grill, top heat, fan
	Dual grill	For grilling flat foodstuffs in large quantities and for toasting .	Grill, top heat
	Defrost	For defrosting e. g. flans and gateaux, butter, bread, fruit or other frozen foods .	Fan
	Bottom heat	For baking cakes with crispy or crusty bases .	Bottom heat
	Pyroluxe	For automatic pyrolytic cleaning of the oven. It burns off residues in the oven, which can then be removed with a cloth when the oven has cooled down. The oven is heated to approximately 500 xC.	Top heat, bottomheat, grill, fan

Inserting the Shelf and Tray




Anti-tip device

All slide-in units have a small bulge on the left and right. This bulge is an anti-tip device and must always point to the rear of the oven.


Inserting tray:

The anti-tip device must point towards the rear of the oven.

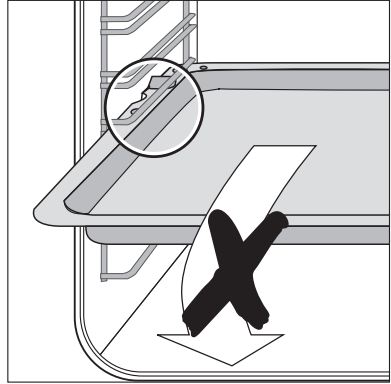


Inserting shelf:

Insert the shelf unit with both guide rails pointing upwards. The anti-tip device must point downwards and be positioned to the rear of the oven compartment.

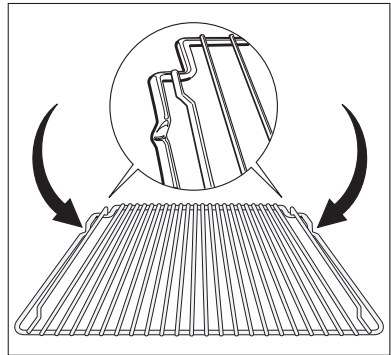


Inserting shelf and tray:

When using the shelf and the tray together, insert the shelf's anti-tip device exactly into the indentations in the tray.

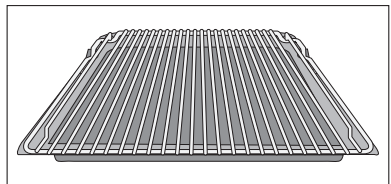

Clock Functions

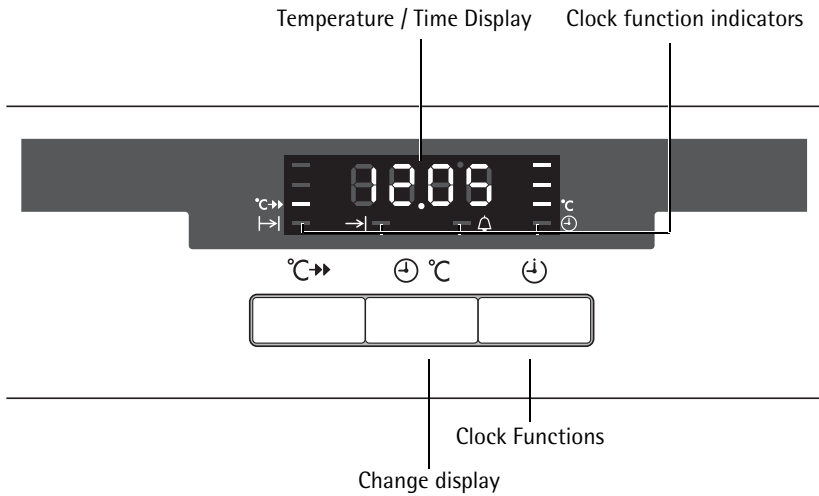

Cook time

To set how long the oven is to be in use.

End time

To set when the oven is to switch off again.

Countdown

To set a countdown. A signal sounds after the time has elapsed. This function does not affect the functioning of the oven.

Time

To set, change or check the time
(See also section "Before Using for the First Time").



How to use the clock functions



- After a clock function has been selected, the corresponding function indicator flashes for about 5 seconds. During this period, the desired times can be set or modified using the + / - dial.
- When the desired time has been set, the function indicator continues to flash for approx. 5 seconds. After that the function indicator is then lit. The set time begins to run in the background.
- When the clock functions Cook time (→) and End time (→) **have been completed, the oven functions dial must be turned back to "0"**.
- Using the Display (⊕ ⊖) button, you can switch between the oven temperature and the time.





Checking the time set or remaining.


Press the Select (⌵) button repeatedly, until the appropriate clock function flashes and the time set or remaining is displayed.

Countdown

1. Press the Select  button repeatedly until the function indicator Countdown  flashes.

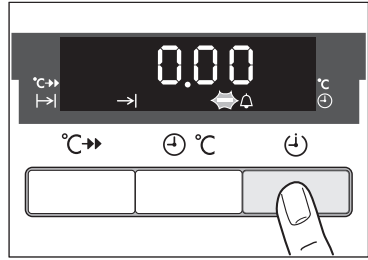


2. Using the + / - control knob set the desired countdown (max. 99.00 minutes).
The function indicator Countdown  lights up.

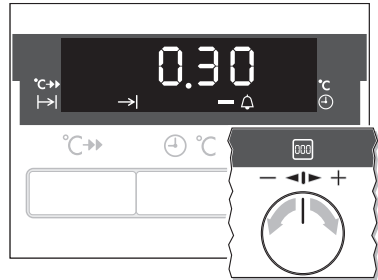




When 90% of the time set has elapsed, an audible signal sounds.

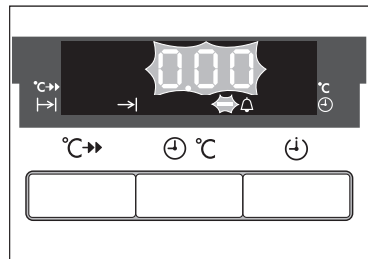When the time has elapsed, "0.00" and the function indicator flash.
An audible signal sounds.
To stop the flashing and the audible signal:
Press any button.





Cook time


1. Select the oven function and temperature.
2. Press the Select  button repeatedly until the function indicator Cook time  flashes.

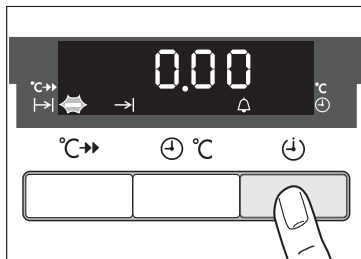


3. Using the + / - control knob set the desired cooking time (max. 09.59 hours).

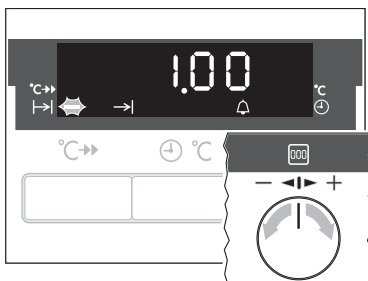

The function indicator Cook time  lights up and the oven comes on immediately.

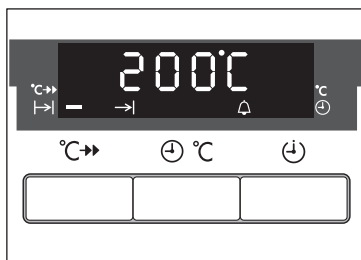




When the time has elapsed, "0.00" and the function indicator flash. An audible signal sounds for 2 minutes. The oven switches itself off.

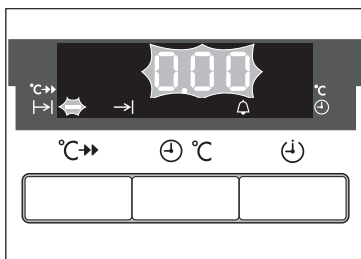


To stop the flashing and the audible signal:
Turn the oven functions dial to "0".


End time


1. Select the oven function and temperature.
2. Press the Select  button repeatedly until the End time  function indicator flashes.

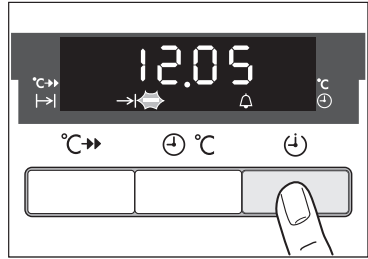


3. Using the + / - control knob set the desired switch-off time.

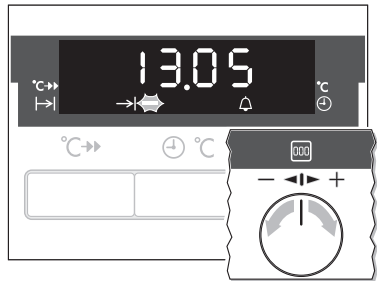

The function indicator End time  lights up and the oven comes on immediately.

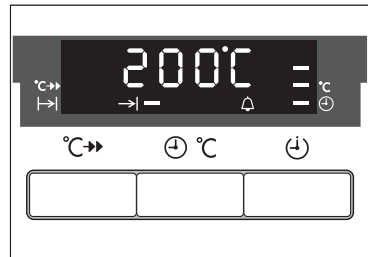

When the time has elapsed, "0.00" and the function indicator flash. An audible signal sounds for 2 minutes. The oven switches itself off.

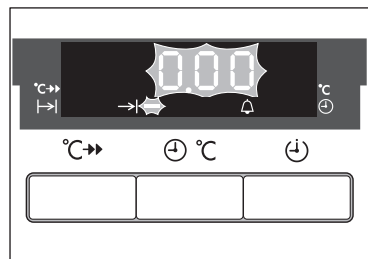




To stop the flashing and the audible signal:


Turn the oven functions dial to "0".


Cook time and End time combined






Cook time  and End time  can be used simultaneously, if the oven is to be switched on and off automatically **at a later time**.

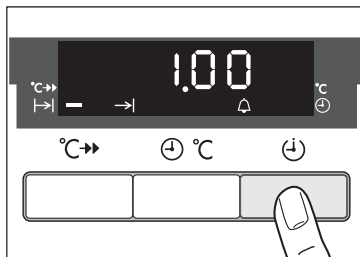
1. Select the oven function and temperature.
2. Using the Cook time  function, set the time that the dish needs to cook, In this example, 1 hour.

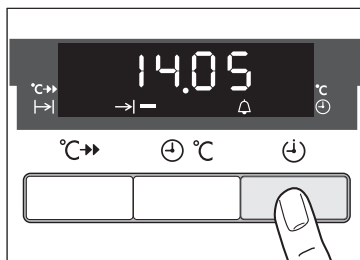

3. Using the End time  function, set the time at which the dish should be ready.
In this case, 14:05.



The Cook time  and End time  function indicators light up and the temperature is shown in the display. In this example, 200°C.

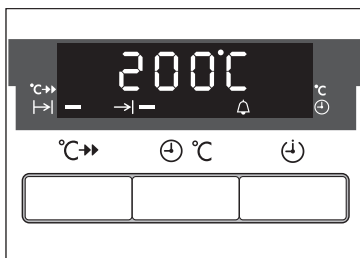

The oven switches on automatically at the time calculated. In this case, at 13:05.

And switches itself off again when the cook time entered has elapsed. In this case, at 14:05.

Other Functions

Switching off the display



You can save energy by switching off the clock display.

Switching off the clock display


1. Turn the \pm control knob to the right and hold it.
2. In addition press the Select (⏻) button until the display goes out.



As soon as the appliance is switched on again, the display comes on automatically.

When the appliance is next switched off, the clock display goes out again.

To have the clock display on permanently again, you must set the clock again.

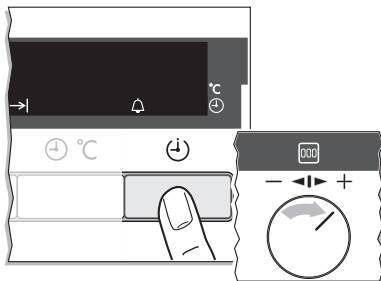

Switching on the clock display

1. Turn the \pm control knob to the right and hold it.
2. In addition press the Select (⏻) button, until the display appears again.

Oven's child safety device

The oven is fitted with a child safety device. As soon as the child safety device is activated, the oven cannot be switched on.




For the child safety device to be activated, none of the oven functions must be currently selected.


Activating the child safety device

1. Turn the \pm dial to the left and hold it.
2. In addition press the Select (⏻) button until "SAFE" appears "in the" display.

The child safety device is now activated.

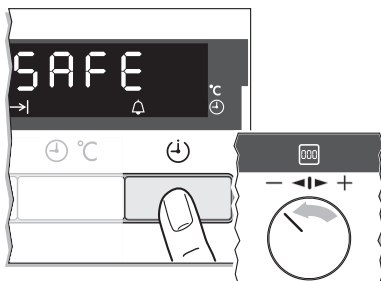

Deactivating the child safety device

1. Turn the \pm dial to the left and hold it.
2. In addition press the Select  button until "SAFE" disappears "from" the display.

The child safety device is now deactivated and the oven is again ready for use.

Oven safety cut-out



If not switched off after a certain time, or if the temperature is not modified, the oven switches off automatically.

The last temperature set flashes in the temperature display.

The oven switches off when the oven temperature is:*



30 - 120°C after	12.5 hours
120 - 200°C after	8.5 hours
200 - 250°C after	5.5 hours
250 - Max °C after	1.5 hours

Switching on after a safety cut-out

Switch the oven off completely.

It can then be switched on again.



The safety cut-out is cancelled if the clock function Cook time  or End time  is set.



*Not with the Rothitherm oven function.

Uses, Tables and Tips



Baking

Oven function: Fan-assisted circulation  or Conventional 


Baking tins

- For Conventional , dark metal and non-stick tins are suitable.
- For Fan-assisted circulation  bright metal tins are also suitable.


Oven levels

- Baking with Conventional  is only possible on one level.
- With Fan-assisted circulation  you can bake dry cakes and biscuits on 2 baking trays at the same time.


1 baking tray:
e.g. oven level 3

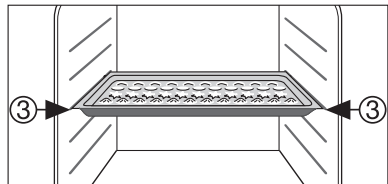

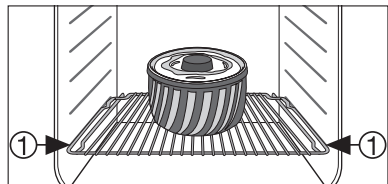

1 cake tin:
e.g. oven level 1

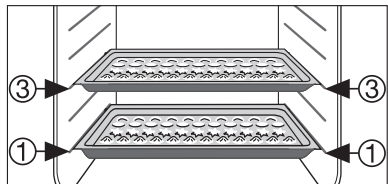

2 baking trays:
e.g. oven levels 1 and 3



General Instructions

- Insert the tray with the bevel at the front.
- With Conventional  or Fan-assisted circulation  you can also bake with two tins next to one another on the oven shelf at the same time. This does not significantly increase baking time.



When frozen foods are used the trays inserted may distort during cooking. This is due to the large difference in temperature between the freezing temperature and the temperature in the oven. Once the trays have cooled the distortion will disappear again.

How to use the Baking Tables

The tables give the required temperature settings, baking times and oven shelf levels for a selection of typical dishes.


















- Temperatures and baking times are for guidance only, as these will depend on the consistency of pastry or mixture, the number and the type of cake tin.
- We recommend using the lower temperature the first time and then if necessary, for example, if a deeper browning is required, or baking time is too long, selecting a higher temperature.
- If you cannot find the settings for a particular recipe, look for the one that is most similar.
- If baking cakes on baking trays or in tins on more than one level, baking time can be extended by 10-15 minutes.
- Moist recipes (for example, pizzas, fruit flans, etc.) are baked on one level.
- Cakes and pastries at different heights may brown at an uneven rate at first. If this occurs, **please do not change the temperature setting**. Different rates of browning even out as baking progresses.


















With longer baking times, you can switch the oven off about 10 minutes before the end of the baking time, in order to utilise the residual heat.

Unless otherwise stated, the values given in the tables assume that cooking is started with the oven cold.

Baking table

Type of baking	Ovenfunction	Shelf position	Temperature °C	Time Hours mins.	
Baking in tins					
Ring cake or brioche		Fan-assisted circulation	1	150-160	0:50-1:10
Madeira cake/Fruitcakes		Fan-assisted circulation	1	140-160	1:10-1:30
Sponge cake		Fan-assisted circulation	1	140-160	0:25-0:40
Flan base - short pastry		Conventional	3	180-200	0:10-0:25
Flan base - sponge mixture		Fan-assisted circulation	3	150-170	0:20-0:25
Apple pie		Conventional	1	170-190	0:50-1:00
Apple pie (2 tins Ø20cm, diagonally off set)		Conventional	1	180-200	0:20-0:30
Apple pie (2 tins Ø20cm, diagonally off set)		Fan-assisted circulation	1	170-190	1:05-1:20
Savoury flan (e. g. quiche lorraine)		Conventional	1	180-200	0:30-1:10
Cheesecake		Conventional	1	170-190	1:00-1:30
Cakes/pastries/breads on baking trays					
Plaited bread/bread crown		Conventional	3	170-190	0:30-0:40
Christmas stollen		Conventional	3	160-180 ¹⁾	0:40-1:00
Bread (rye bread) -first of all -then		Conventional	2	250 ¹⁾ 160-180	0:20 0:30-1:00
Cream puffs/Eclairs		Fan-assisted circulation	3	160-170 ¹⁾	0:15-0:30
Swiss roll		Conventional	3	180-200 ¹⁾	0:10-0:20
Cake with crumble topping(dry)		Fan-assisted circulation	3	150-160	0:20-0:40
Buttered almond cake/ sugar cakes		Conventional	3	190-210 ¹⁾	0:15-0:30
Fruit flans (made with yeast dough/ sponge mixture) ²⁾		Fan-assisted circulation	3	150-160	0:25-0:50

Type of baking	Ovenfunction	Shelf position	Temperature °C	Time Hours mins.
Fruit flans made with short pastry	 Conventional	3	170-190	0:40-1:20
Yeast cakes with delicate toppings (e. g. quark, cream, vanilla cream)	 Conventional	3	160-180	0:40-1:20
Pizza (with a lot of topping) ²	 Conventional	1	190-210 ¹⁾	0:30-1:00
Pizza (thin crust)	 Conventional	1	230-250 ¹⁾	0:10-0:25
Unleavened bread	 Conventional	1	250-270	0:08-0:15
Tarts (CH)	 Conventional	1	200-220	0:35-0:50
Biscuits				
Short pastry biscuits ³⁾	 Fan-assisted circulation	3	150-160	0:06-0:20
Viennese whirls ³⁾	 Fan-assisted circulation	3	140-150	0:10-0:40
Biscuits made with sponge mixture ³⁾	 Fan-assisted circulation	3	150-160	0:15-0:20
Pastries made with egg white, meringues	 Fan-assisted circulation	3	80-100	2:00-2:30
Macaroons	 Fan-assisted circulation	3	100-120	0:30-0:60
Biscuits made with yeast dough	 Fan-assisted circulation	3	150-160	0:20-0:40
Puff pastries	 Fan-assisted circulation	3	170-180 ¹⁾	0:20-0:30
Rolls	 Fan-assisted circulation	3	170-190 ¹⁾	0:20-0:35
Small cakes (20per tray)	 Conventional	3	170-190 ¹⁾	0:20-0:30

1) Pre-heat the oven








2) Use the all-purpose tray or roasting tray

3) Baking on 2 levels possible

Tips on baking





Baking results	Possible cause	Remedy
The cake is not browned enough at the bottom	Wrong oven level	Place cake lower in the oven
The cake sinks (becomes soggy, lumpy, streaky)	Oven temperature too high	Use a slightly lower setting
	Baking time too short	Set a longer baking time Baking times cannot be reduced by setting higher temperatures
	Too much liquid in the mixture	Use less liquid Pay attention to mixing times, especially if using mixing machines
Cake is too dry	Oven temperature too low	Set oven temperature higher
	Baking time too long	Set a shorter baking time
Cake browns unevenly	Oven temperature too high and baking time too short	Set a lower oven temperature and a longer baking time
	Mixture is unevenly distributed	Spread the mixture evenly on the baking tray
Cake is not done within the baking time given	Temperature too low	Use a slightly higher oven setting

Table for Bakes and Gratins

Dish	Oven function	Shelf position	Temperature °C	Time Hours mins.	
Pasta bake		Conventional	1	180-200	0:45-1:00
Lasagne		Conventional	1	180-200	0:25-0:40
Vegetables au gratin ¹⁾		Rothitherm	1	160-170	0:15-0:30
Baguettes topped with melted cheese ¹⁾		Rothitherm	1	160-170	0:15-0:30
Sweet bakes		Conventional	1	180-200	0:40-0:60
Fish bakes		Conventional	1	180-200	0:30-1:00
Stuffed vegetables		Rothitherm	1	160-170	0:30-1:00

1) Pre-heat the oven

Frozen Ready Meals Table

Food to be cooked	Oven function	Shelf position	Temperature °C	Time
Frozen pizza		Conventional	3	as per manufacturer's instructions
Chips ¹⁾ (300-600 g)		Rothitherm	3	200-220
Baguettes		Conventional	3	as per manufacturer's instructions
Fruit flans		Conventional	3	as per manufacturer's instructions

1) Comments: Turn chips 2 or 3 times during cooking

Roasting

Oven function: Conventional  or Rothitherm 

Roasting dishes

- Any heat-resistant ovenware is suitable to use for roasting (please read the manufacturer's instructions).
- Large roasting joints can be roasted **directly in the roasting tray or on the oven shelf with the roasting tray placed below it.**
- For all lean meats, we recommend **roasting these in a roasting tin with a lid.** This will keep the meat more succulent.
- All types of meat, that can be browned or have crackling, can be roasted in the **roasting tin without the lid.**


























Tips on using the roasting chart

The information given in the following table is for guidance only.

- We recommend cooking meat and fish **weighing 1 kg and above in the oven.**
- To prevent escaping meat juices or fat from burning on to the pan, we recommend placing some liquid in the roasting pan.
- If required, turn the roast (after 1/2 - 2/3 of the cooking time).
- Baste large roasts and poultry with their juices several times during roasting. This will give better roasting results.
- You can switch the oven off about 10 minutes before the end of the roasting time, in order to utilise the residual heat.

Roasting table

Type of meat	Quantity	Ovenfunction	Shelf position	Temperature °C	Time Hours mins.	
Beef						
Pot roast	1-1.5 kg		Conventional	1	200-250	2:00-2:30
Roast beef or fillet						per cm. of thickness
- rare	per cm. of thickness		Rothi-therm	1	190-200 ¹⁾	0:05-0:06
- medium	per cm. of thickness		Rothi-therm	1	180-190	0:06-0:08
- well done	per cm. of thickness		Rothi-therm	1	170-180	0:08-0:10
Pork						
Shoulder, neck, ham joint	1-1.5 kg		Rothi-therm	1	160-180	1:30-2:00
Chop, spare rib	1-1.5 kg		Rothi-therm	1	170-180	1:00-1:30
Meat loaf	750 g-1 kg		Rothi-therm	1	160-170	0:45-1:00
Porkknuckle (pre-cooked)	750 g-1 kg		Rothi-therm	1	150-170	1:30-2:00
Veal						
Roast veal	1 kg		Rothi-therm	1	160-180	1:30-2:00
Knuckle of veal	1.5-2 kg		Rothi-therm	1	160-180	2:00-2:30
Lamb						
Leg of lamb, roast lamb	1-1.5 kg		Rothi-therm	1	150-170	1:15-2:00
Saddle of lamb	1-1.5 kg		Rothi-therm	1	160-180	1:00-1:30

Type of meat	Quantity	Ovenfunction	Shelf position	Temperature °C	Time Hours mins.	
Game						
Saddle of hare, leg of hare	up to 1 kg		Conventional	3	220-250 ¹⁾	0:25-0:40
Saddle of venison	1.5-2 kg		Conventional	1	210-220	1:15-1:45
Haunch of venison	1.5-2 kg		Conventional	1	200-210	1:30-2:15
Poultry						
Poultry portions	200-250g each		Rothitherm	3	200-220	0:35-0:50
Half chicken	400-500g each		Rothitherm	3	190-210	0:35-0:50
Chicken, poulard	1-1.5 kg		Rothitherm	1	190-210	0:45-1:15
Duck	1.5-2 kg		Rothitherm	1	180-200	1:15-1:45
Goose	3.5-5 kg		Rothitherm	1	160-180	2:30-3:30
Turkey	2.5-3.5 kg		Rothitherm	1	160-180	1:45-2:30
	4-6 kg		Rothitherm	1	140-160	2:30-4:00
Fish (steamed)						
Whole fish	1-1.5 kg		Conventional	2 / 3	210-220	0:45-1:15

1) Pre-heat the oven

Wide grilling

Oven function: Dual grill  with maximum temperature setting



Important: Always grill with the oven door closed.



- The empty oven should **always be pre-heated with the grill functions for 5 minutes.**
- For grilling, use both the oven shelf and the roasting tray together.
- The grilling times are guidelines.
- Grilling is particularly suitable for flat pieces of meat or fish.

Grilling table

Food to be grilled	Oven level	Grilling time	
		1. Side	2. Side
Burgers	4	8-10 mins.	6-8 mins.
Pork fillet	4	10-12 mins.	6-10 mins.
Sausages	4	8-10 mins.	6-8 mins.
Filet steaks, veal steaks	4	6-7 mins.	5-6 mins.
Filet of beef, roast beef (approx. 1 kg)	3	10-12 mins.	10-12 mins.
Toast ¹⁾	3	2-3 mins.	2-3 mins.
Toast with topping	3	6-8 mins.	---

1) Use the grill without the roasting tray

Defrosting

Oven function: Defrost  (no temperature setting)

- Unwrap the food and place it on a plate on the oven shelf.
- Do not cover with a plate or bowl, as these can substantially lengthen the defrosting time.
- For defrosting, place the shelf in the **1st oven level from the bottom**.

Defrosting table

Dish	Defrosting time mins.	Further defrosting time (mins.)	Comments
Chicken, 1000 g	100-140	20-30	Place the chicken on an upturned saucer placed on a large plate Turn halfway through
Meat, 1000 g	100-140	20-30	Turn halfway through
Meat, 500 g	90-120	20-30	Turn halfway through
Trout, 150g	25-35	10-15	---
Strawberries, 300g	30-40	10-20	---
Butter, 250g	30-40	10-15	---
Cream, 2 x 200g	80-100	10-15	Cream can also be whipped when still slightly frozen in places
Gateau, 1400g	60	60	---

Making Preserves

Oven function: Bottom heat

- For preserving, use only commercially available preserve jars of the same size.
- **Jars with twist-off or bayonet type lids and metal tins are not suitable.**
- When making preserves, the **first shelf position from the bottom** is the one most used.
- Use the shelf for making preserves. There is enough room on this for up to six 1-litre preserving jars.
- The jars should all be filled to the same level and clamped shut.
- Place the jars on the baking tray in such a way that they are not touching each other.
- Pour approx. 1/2 litre of water into the baking tray so that sufficient moisture is produced in the oven.
- As soon as the liquid starts to pearl in the first jars (after about 35-60 minutes with 1 litre jars), switch the oven off or reduce the temperature to 100°C (see table).

Preserves table

The times and temperatures for making preserves are for guidance only.

Preserve	Temperature in °C	Cooking time until simmering in mins.	Continue to cook at 100°C in mins.
Soft fruit			
Strawberries, blueberries, raspberries, ripe gooseberries	160-170	35-45	---
Unripe gooseberries	160-170	35-45	10-15
Stone fruit			
Pears, quinces, plums	160-170	35-45	10-15
Vegetables			
Carrots ¹⁾	160-170	50-60	5-10
Mushrooms ¹⁾	160-170	40-60	10-15
Cucumbers	160-170	50-60	---
Mixed pickles	160-170	50-60	15
Kohlrabi, peas, asparagus	160-170	50-60	15-20
Beans	160-170	50-60	---

1) Leave standing in oven when switched off

Cleaning and Care



Warning: For cleaning, the appliance must be switched off and cooled down.

Warning: For safety reasons, **do not** clean the appliance with steam jet or high-pressure cleaning equipment.

Attention: Do not use any scouring agents, sharp cleaning tools or scourers.

Outside of the appliance

- Wipe the front of the appliance with a soft cloth and warm water and washing up liquid.
- For metal fronts, use normal commercially available cleaning agents.

Oven interior



Warning: For the purpose of cleaning the oven must be switched off and have cooled down.



Clean the appliance after each use. In this way, residue is easier to clean off and does not have the chance to burn on. Residue that is not removed may cause changes to the surface colour when Pyroluxe is used.

1. For cleaning, turn the oven light on.
2. After every use, wipe the oven with a solution of washing-up liquid and allow to dry.



In the event of stubborn dirt, clean using Pyroluxe.



Important: If you are using an oven spray, be sure to follow the manufacturer's instructions.

Accessories

Wash all slide-in units (shelf unit, baking tray, shelf support rails etc.) after each use and dry well. Soak briefly to make them easier to clean.

Pyrolytic cleaning



Warning: The oven gets very hot during this process. Keep small children away.



Important: Before carrying out the pyrolytic cleaning process all removable parts, with the exception of the side rails, must be removed from the oven.




If you use the **oven shelf runners** that are available as special accessories, these must be **removed before pyrolytic cleaning**.

If there are still oven shelf runners in the oven, 'C1' will appear in the time display.

The pyrolysis process then cannot be started due to a safety cut-out that protects the oven shelf runners.

Pyrolysis

1. First remove the worst of the residue manually.
2. Select oven function Pyroluxe 
 - "3:15" appears in the time display,
 - Continuously flashes for approximately 5 seconds.Pyrolytic cleaning then starts.





The Light does not work.



When the temperature set is reached, the door is locked.

The bars of the heat indicator are illuminated until the door is unlocked again.


Changing the length of the Pyroluxe

1. Proceed as described in the section Pyroluxe
2. While Cook time  is flashing select the desired length of the pyroluxe using $+$ or $-$:
"2:15" or "3:15".
Cook time  flashes for approximately 5 seconds.
Pyrolytic cleaning then starts.



If Cook time  is no longer flashing, press the Select  button again and then perform the setting procedure.

Changing the Pyroluxe switch-off time

The Pyroluxe switch off time can be changed using the End time  clock function (within 2 minutes of setting the Pyroluxe).

When are the different pyroluxes set:

P2 - 2:15 = Pyroluxe Quick: For a light degree of soiling,


P1 - 3:15 = Pyroluxe Intensive: For a heavy degree of soiling.

Side rails


To clean the sides of the oven, the left and right side rails can be removed from the oven.

Taking out the side rails

1. Loosen the screw.
2. Pull the rails away from the wall at the back of the oven and swing them forwards (1).

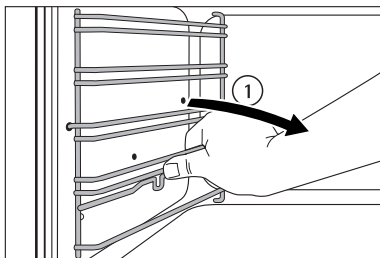


3. Unhook the rails (2).

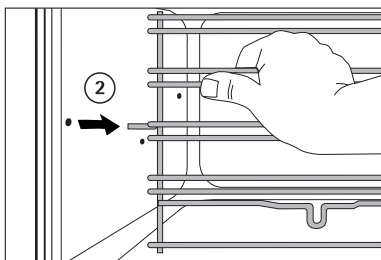


Replacing the side rails




When inserting the rails, make sure that the rounded ends of the guide bars are pointing to the front.

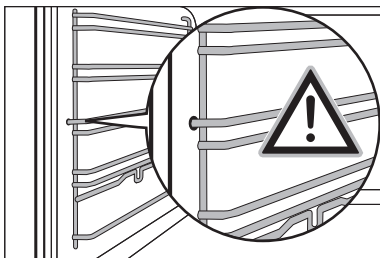

1. To install the rails, first insert the rails into the holes at the front (1).

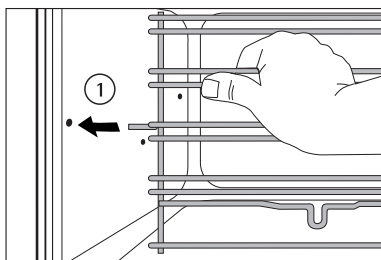

2. Swing the rails towards the back and insert into the holes (2).
3. Re-tighten the screw.

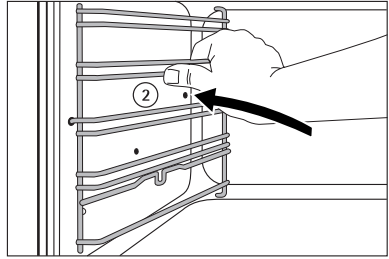

Oven Lighting



Warning: There is a danger of electric shock! Prior to changing the oven light bulb:


- Switch off the oven!
- Remove the fuses in the fuse box or switch off the circuit breaker.



Place a cloth on the oven floor to protect the oven light and glass cover.

Replacing the oven light bulb/ cleaning the glass cover

1. Remove the glass cover by turning it anti-clockwise and then clean it.
2. If necessary:
Replace bulb with a 40 watt, 230 V, 300 °C heat-resistant oven light bulb.
3. Refit the glass cover.

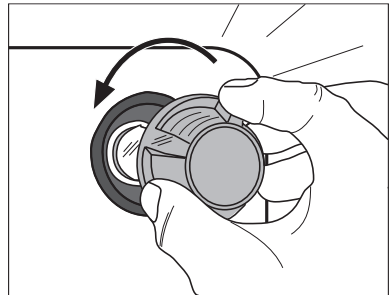


Oven Door

The oven door of your appliance may be removed for cleaning.


Removing the oven door

1. Open the oven door completely.
2. **Completely** fold back the **brass-coloured clamping lever** on **both** door hinges.
3. Grip the oven door with both hands on the sides and close it to about **3/4 going past the point of resistance**.
4. Pull the door away from the oven (**Caution: heavy!**).
5. Place the door, with the outer surface downwards, on a soft, flat surface, for example a blanket, to avoid scratches.

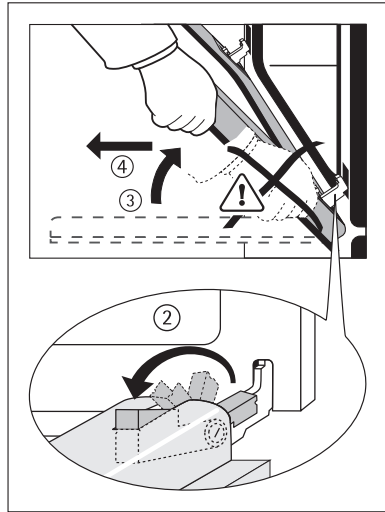

Hanging the oven door

1. With both hands take hold of the sides of the door from the side on which the handle is positioned.
2. Hold the door at an angle of approx. 60°.
3. Slide the door hinges **simultaneously** as far as possible into the two slots on the right and left at the bottom of the oven.
4. Lift the door up until resistance is met and then open fully.
5. Lift the brass-coloured clamping levers on both door hinges back to their original position.
6. Close the oven door.

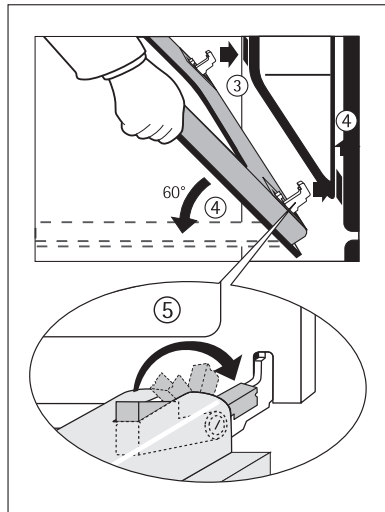

Oven door glass

The oven door is fitted with four sheets of glass set next to one another. The inner sheets can be removed for cleaning.




Caution: The following steps are to be performed only when the oven door has been removed. If the glass is removed while the door is attached, the lighter weight may cause it to spring up and cause injury.



Important! Rough handling of the glass, especially at the edges of the front plate, may cause it to break.


Removing the upper-most glass plate

1. Detach the door and, with the handle downwards, lower it onto a soft, even surface.
2. Grasp the upper plate of glass by its lower edge and push it against the pressure spring and towards the oven door handle until it comes free.
3. Hold the plate **gently** underneath and slide it out.

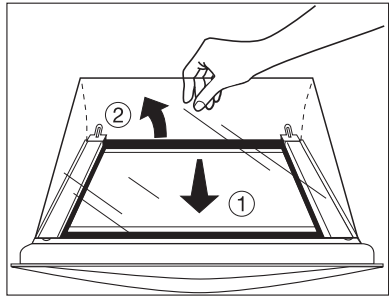

Removing the centre glass plates


1. Grasp the centre plates of glass by their lower edges one after another and push them towards the over door handle until they come free.
2. Hold the plates gently underneath and slide them out.

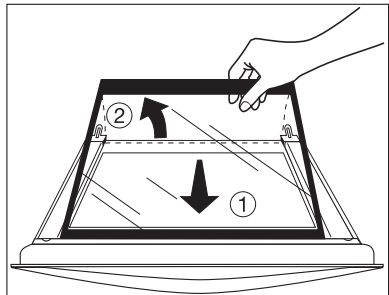

Clean the door glass


Replacing the centre glass plates

1. From above, insert the centre plates obliquely into the retaining frame at the handle, one after another.
2. Lower the centre plates down and push them towards the lower edge of the door as far under the retaining frame as they will go.

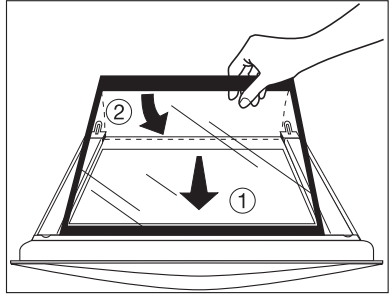

Replacing the upper glass plate

1. From above, insert the upper-most plate obliquely into the retaining frame at the handle.
2. Lower the plate. Place the glass against the pressure spring at the handle, and in front of the retaining frame at the lower edge of the door. Push it **into the frame**. The glass plates must be firmly attached.

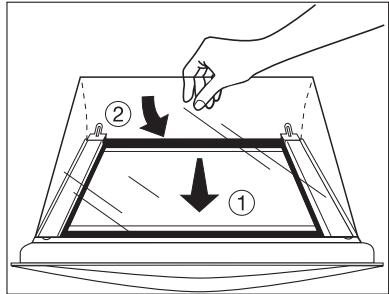

Re-attach the door to the oven

What to do if ...

Problem	Possible cause	Remedy
The oven does not heat up	The oven has not been switched on	Switch on the oven
	The clock has not been set to the current time	Set the clock to the current time
	The required settings have not been set	Check the settings
	The oven's safety cut-out has been triggered	See Oven Safety Cut-out
	The house wiring fuse (in the fuse box) has tripped	Check fuse. If the fuses trip several times, please call a qualified electrician
The oven lighting is not operating	The oven light bulb is faulty	Replace oven bulb
The pyrolysis function is not working ("C1" is shown in the time display)	The oven shelf runner has not been removed.	Remove oven shelf runner
The oven door is locked	Appliance is not connected to the electricity; door lock is activated	Connect the appliance to the electrical supply and wait at least 10 seconds until the red temperature pilot light goes out
The following appears in the time display: E001 E020 (for normal operation) E021	Temperature outside of the permissible range	Please contact customer service

Problem	Possible cause	Remedy
The following appears in the time display: E020 (for pyrolysis function)	Door is not closed properly	Close the door properly and start the pyrolysis function again If the display appears again, please contact customer service
An error code not listed above appears in the time display	Electronic error	Switch the appliance off and on again by way of the house wiring fuse or the circuit breaker in the fuse box. If the display appears again, please contact customer service

If you are unable to remedy the problem by following the above suggestions, please contact your dealer or the Customer Care Department.



Warning! Repairs to the appliance are only to be carried out by qualified service engineers. Considerable danger to the user may result from improper repairs.



If the appliance has been wrongly operated, the visit from the customer service technician or dealer may not take place free of charge, even during the warranty period.



Advice on cookers with metal fronts:

Because of the cold surface at the front of the cooker, opening the oven door during (or just after) baking or roasting may cause the glass to steam up.


Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section "What to do if...").

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.

In order to be able to assist you quickly, we require the following information:

- Model description
- Product number (PNC)
- Serial number (S No.)
(for numbers see rating plate)
- Type of fault
- Any error messages displayed by the appliance

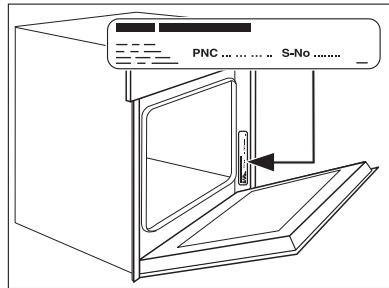

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description:

PNC:

S No:

 **From the Electrolux Group. The world's No. 1 choice.**

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

<http://www.aeg.hausgeraete.de>

© Copyright by AEG

822 923 889-A-250604-01

Subject to change without notice