

Honeywell



Honeywell/36

Programmable Thermostat

OWNER'S GUIDE

Seven Day
Programmable Heat and/or Cool
Low Voltage (20 to 30 Vac) Thermostat and Wallplate
Model CT3600

Para pedir estas instrucciones en español,
llame al 1-800-468-1502 por 69-0939S.

Pour obtenir ce mode d'emploi en français,
composer le 1-800-468-1502 pour 69-0939F.



69-0939-1

Total Comfort Temperature Management with Smart Response Control

Congratulations! You made a smart choice when you purchased your new Honeywell Thermostat. It's the smart thermostat that:

- *Keeps you comfortable* by automatically calculating exactly when the furnace or air conditioning should go on to have the house at the desired comfort temperature by the time you wake up or return home.
- *Saves the maximum amount of energy and money* by remembering to automatically adjust the temperature when you leave home or go to sleep.
- *Provides the ultimate in comfort and convenience.* It comes already programmed, so it's your choice—use the preprogrammed schedule or set your own.


We invite you to spend a few minutes reading this manual. You'll find it answers many of the questions that will arise as you become familiar and comfortable with your Honeywell thermostat, the state of the art in home comfort controls.



RECYCLING THERMOSTAT

If this thermostat is replacing a control that contains mercury in a sealed tube, do not place your old control in the trash. Contact your local waste management authority for instructions regarding recycling and the proper disposal of this control, or of an old control containing mercury in a sealed tube.

If you have questions, call Honeywell Inc. at 1-800-468-1502.

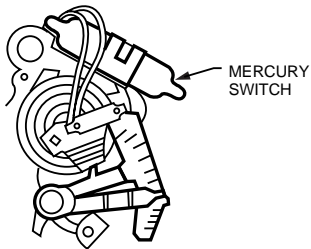

TYPICAL LOCATION OF A MERCURY SWITCH IN A THERMOSTAT

M10614



TABLE OF CONTENTS

Step 1. Prepare for Installation	5
Step 2. Remove Old Thermostat	6
Step 3. Mount Thermostat Wallplate	8
Step 4. Wire Wallplate Terminals	9
Step 5. Install the Batteries	13
Step 6. Set Fan Operation Switch	14
Step 7. Mount the Thermostat	15
Step 8. Customizing Thermostat	15
Step 9. Programming	20
Step 10. Operating Your Thermostat	24
Step 11. Setting the Fan and System Switches	27
Troubleshooting Guide	28
Limited One-Year Warranty	31

STEP 1. PREPARE FOR INSTALLATION


- ❑ Check the compatibility chart to make sure this thermostat is compatible with your system. If not, return to retailer. For specialty thermostat information, call Honeywell Customer Assistance, toll-free 1-800-468-1502.

Compatibility Chart.

System Type	Compatible with CT3600
Gas—Standing Pilot	Yes
Gas—Electronic Ignition	Yes
Gas-Fired Boilers	Yes 
Gas—Millivolt	No
Oil-Fired Boilers	Yes 
Oil-Fired Furnace	Yes
Electric Furnace	Yes

System Type	Compatible with CT3600
Electric Air Conditioning	Yes
Baseboard Electric (120/240 line volt)	No
Single Stage Heat Pump	Yes
Multistage Heat Pumps/Multistage Equipment	No

Not compatible with any 120/240 volt circuit.


-  Compatible with 2-wire Honeywell and Taco zone valves. Not compatible with 3-wire zone valves or 2-wire White Rodgers no. 1361 zone valves.

STEP 2. REMOVE OLD THERMOSTAT

- ❑ Test to make certain that your heating and cooling systems are working properly. If either does not work, contact your local heating/air conditioning dealer. To avoid compressor damage, do not operate the cooling system when outdoor temperature is below 50°F (10°C).
- ❑ Turn off power to system at the furnace, or at the fuse/circuit breaker panel.
- ❑ Carefully unpack your new thermostat and wallplate; save package of screws, instructions and receipt.
- ❑ Remove the cover from the old thermostat. If it does not snap off when pulled firmly from the bottom, check for a screw used to lock on the cover.

- ❑ Loosen screws holding thermostat to subbase, wallplate or wall, and lift away.

- ❑ Disconnect wires from old thermostat or subbase. As you disconnect each wire, attach the enclosed labels with the old terminal designation. If there are only two wires, they do not need to be labeled. Wrap wires around pencil to keep them from falling back into the wall, as shown.

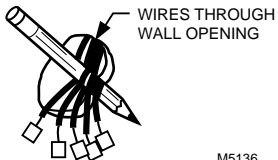

M5136

Replacing a clock thermostat that has C or C1 clock terminals?

If you are replacing a Honeywell Chronotherm® Clock Thermostat, you may find one or two wires that go to the C or C1 clock terminals on the Chronotherm® wiring wallplate. Do not allow them to touch, or you can damage your transformer. Disconnect the wires and wrap them separately using electrical tape; do not wrap them together. Place the wires where they will not interfere with the operation of the new thermostat. Record the colors and terminal designation labels of the remaining wires.

Six or more wires?

If there are six or more wires (excluding clock wires attached to terminals), you most likely have a variation of a multistage heat pump or other multistage system. The thermostat is


not compatible with such systems so return the product to the place of purchase. If you would like information about which programmable thermostats will work with your system, call Honeywell Customer Assistance Center at 1-800-468-1502.

Three thermostat wires?

If you have three wires for a heating only system and can operate the fan using the fan ON switch, this thermostat will work with your system. However, some hot water (zoned) heating systems have three thermostat wires. The thermostat will work only if you install an isolating relay on these systems. For details, call Honeywell Customer Assistance Center at 1-800-468-1502.

STEP 3. MOUNT THERMOSTAT WALLPLATE

- ❑ Position wallplate on wall. Level the wallplate for appearance if desired. Use a pencil to mark the two mounting holes that best fit the application.
- ❑ Remove wallplate from wall, and drill $3/16$ inch holes in wall (if drywall) as marked. For firmer material such as plaster or wood, drill $7/32$ inch holes. Gently tap anchors (provided) into drilled holes until flush with the wall.
- ❑ Reposition wallplate over holes, pulling wires through wiring opening. Loosely insert two mounting screws into holes.
- ❑ Level for appearance only; thermostat functions properly even when not level. Tighten mounting screws.

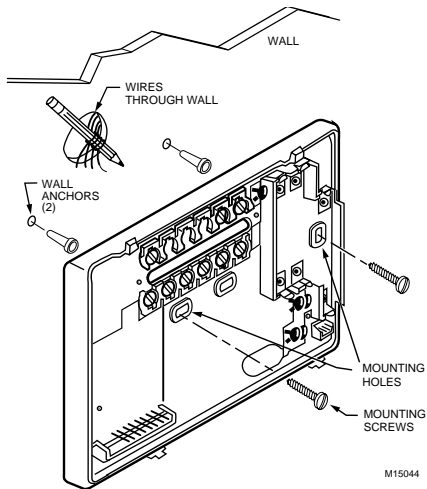

STEP 4. WIRE WALLPLATE TERMINALS


NOTE: All wiring must comply with local codes and ordinances. If unsure about household wiring procedures, call your local heating/air conditioning contractor.

Refer to the labels you placed on wires when you removed your old thermostat.


- ❑ Match the letter of your old thermostat wire with the terminal of the corresponding letter on your new thermostat. Refer to illustrations on pages 10, 11, and 12.

Be sure to remove the factory-installed jumper connecting terminals R and Rc when wires are connected to both the R and Rc terminals.

- ❑ Loosen the terminal screws and slip each wire beneath its matching terminal. Either straight or wraparound wiring connections are acceptable (see illustration). Tighten terminals.
- ❑ Plug the hole in the wall with insulation to help prevent drafts from adversely affecting thermostat operation.

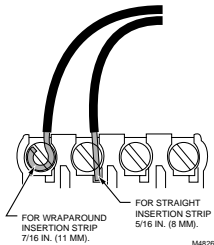


2-WIRE HEAT-ONLY (JUMPER INTACT)

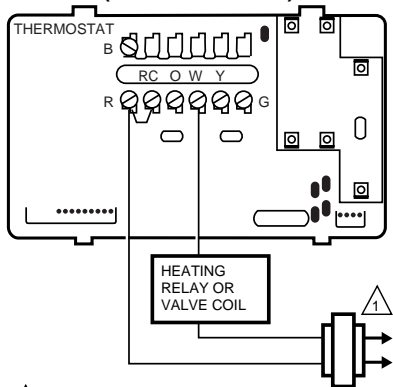

1 POWER SUPPLY. PROVIDE DISCONNECT MEANS AND OVERLOAD PROTECTION AS REQUIRED.

M10616


4-WIRE HEAT/COOL (JUMPER INTACT)

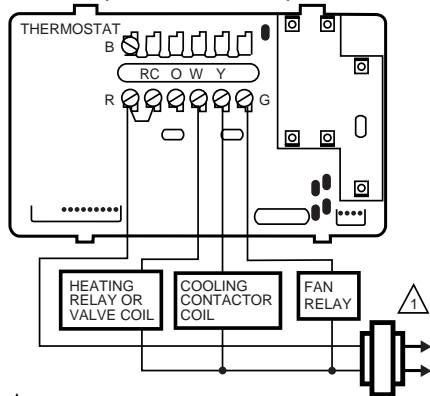


1 POWER SUPPLY. PROVIDE DISCONNECT MEANS AND OVERLOAD PROTECTION AS REQUIRED.

M10617


3-WIRE HEAT ONLY WITH FAN (JUMPER INTACT)

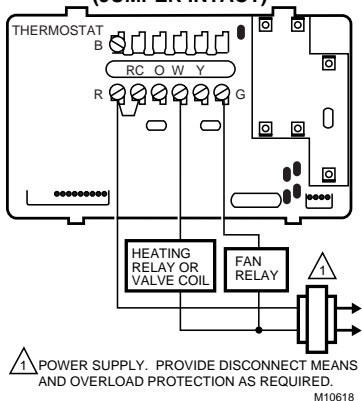


4-WIRE SINGLE-STAGE HEAT PUMP (JUMPER INTACT)

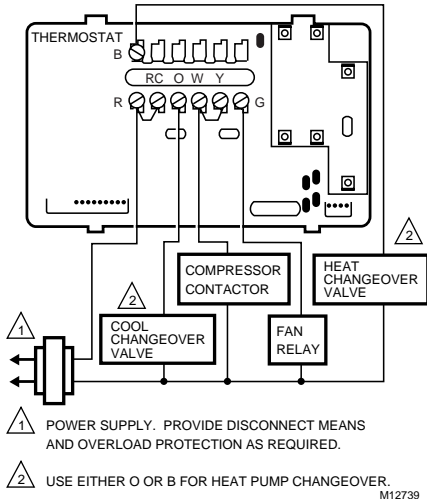

5-WIRE HEAT/COOL (JUMPER REMOVED)

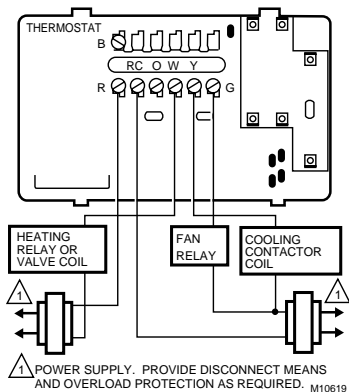

5-WIRE HEAT/COOL WITH DAMPER (JUMPER INTACT)

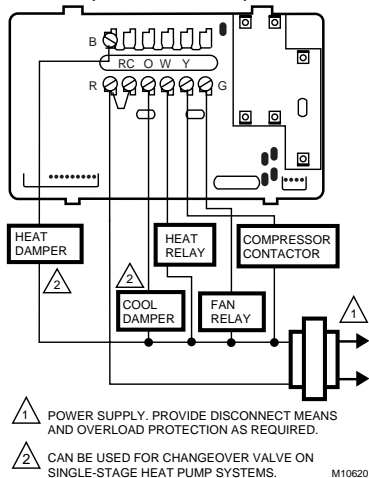

STEP 5. INSTALL THE BATTERIES


IMPORTANT

Three AA alkaline batteries are included with the thermostat. Batteries must be installed for programming and operation of the thermostat and heating/cooling system.

- ❑ Install the batteries on the wallplate as shown, making sure positive (+) terminals all face upward.

As the batteries are running low, a REPL BAT indicator will flash for 1 to 2 months before batteries run out completely. Replace the batteries as soon as possible after the indicator starts flashing.

If you insert new batteries within 20 to 30 seconds of removing the old ones, you will not have to reset the current time. However, if the display is blank, the batteries are dead or incorrectly installed. See page 22 to reset current time and day.

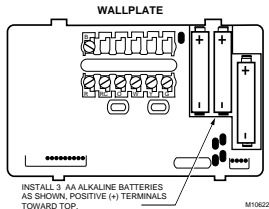

IMPORTANT


Although the thermostat has a low battery indicator, replace the batteries once a year to prevent leakage and to prevent the thermostat and heating/cooling system from shutting down due to lack of battery power.

As a precaution when leaving home for longer than a month, change batteries before you leave to prevent system from shutting down due to lack of battery power.

Use fresh alkaline batteries; nonalkaline batteries do not last as long, and may leak, causing damage to the thermostat or the wall surface. We recommend Energizer® batteries.


STEP 6. SET FAN OPERATION SWITCH

The thermostat fan operation switch, labeled FUEL SWITCH is factory set in the F position. This is the correct setting for most systems. If your system is an electric heat system, set the switch to E. The E setting allows the fan to turn on immediately with the heating or cooling in a system where the G terminal is connected.

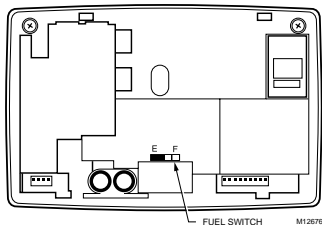


STEP 7. MOUNT THE THERMOSTAT

A. ENGAGE TABS AT TOP OF THERMOSTAT AND WALLPLATE.

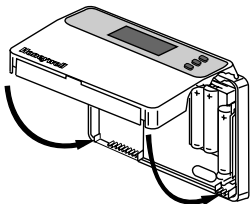

B. PRESS LOWER EDGE OF CASE TO LATCH.

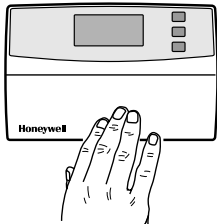


M12703

STEP 8. CUSTOMIZING YOUR THERMOSTAT

The thermostat can be customized to match your heating/cooling system and your display preferences. See pages 18 and 19 for available options. The thermostat comes factory set to the most common settings:

- °F temperature display,
- 12 hour clock format,
- Heating system on-time set for gas or oil forced air system,
- Smart Response.

You can change any of these settings by pressing and holding the Information **i** key and both **▲** and **▼** keys until the numbers 4 and 6 are displayed. All the display segments will appear for about 3 seconds before the numbers 4 and 6 appear.

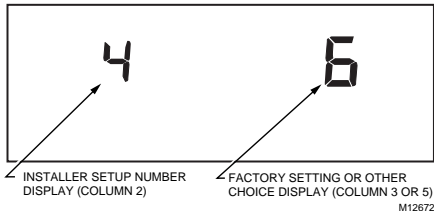

Smart Response

The CT3600 Thermostat is actually a small but powerful computer. The Smart Response feature calculates the time to turn on your heating or cooling system. It considers:


- air temperature
- wall temperature

- the time you want the comfort temperature established.



The thermostat displays **In Recovery**, changes the setpoint and turns on the system whenever the thermostat activates the Smart Response feature.

- This thermostat learns from experience. Each day it checks how closely it hit the recovery target and adjusts the next day recovery start time accordingly.
- It takes a few days after installation for the thermostat to adjust to the local weather, your lifestyle, the construction of your home and your heating/cooling system.
- You can turn off the Smart Response feature in the installer setup section by selecting Conventional Recovery.

Smart Response

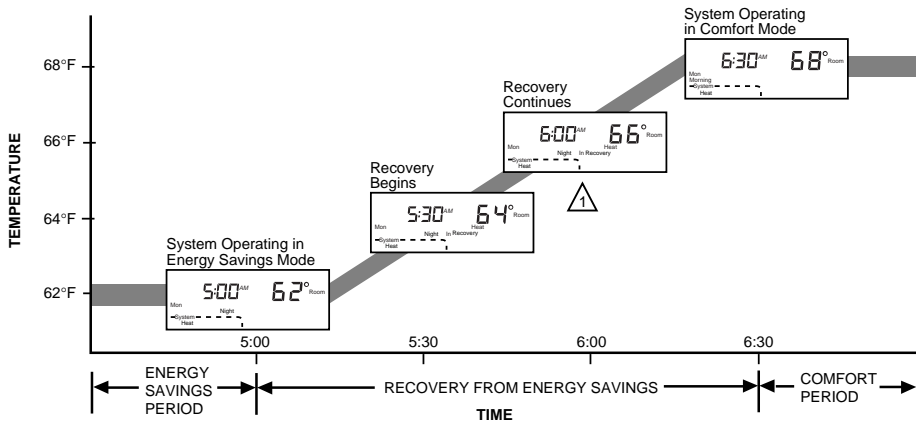

THERMOSTAT USES THE SAME SCHEME TO RETURN TO LOWER COMFORT TEMPERATURE DURING THE COOLING SEASON.

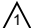 IF **In Recovery** IS DISPLAYED, PRESS  TO SEE THE COMFORT SETPOINT.

M12738

The following table shows the numbers that will be displayed and what your choices are.


Select	Number Displayed (Press Time Δ key to change)	Factory-Setting		Other Choices (Press \blacktriangle or \blacktriangledown key to change)		Actual Setting
		Display	Description	Display	Description	
Heating cycle rate ^a	4	6	Gas or oil forced air heating system	1, 3 or 9	1—radiant floor heat or gravity steam system 3—hot water system or high efficiency furnace 9—electric heat system	
Smart Response control ^b	13	0	Smart Response control is activated (system starts early so your house is at your programmed temperature at your programmed time)	1	Conventional recovery (system starts at your programmed time)	

Select	Number Displayed (Press Time Δ key to change)	Factory-Setting		Other Choices (Press \blacktriangle or \blacktriangledown key to change)		Actual Setting
		Display	Description	Display	Description	
Temperature format	14	0	Temperature is displayed in °F	1	Temperature is displayed in °C	
Clock format	16	0	Time is displayed in 12-hour format	1	Time is displayed in 24-hour (military time) format	
Factory set function	37	0	Do not change	—	—	—

^a Be sure to change the heating cycle rate to 3 when using a high efficiency furnace such as a 90% or greater AFUE (Average Fuel Utilization Efficiency) unit.

^b Refer to Smart Response control section for more information.

IMPORTANT

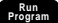Press  to exit the customizing feature. The thermostat has saved your changes, but you must set the current day and time for the thermostat to use the settings. Refer to the Setting Current Day and Time portion of the Programming section for instructions.

STEP 9. PROGRAMMING

The keyboard is located behind the thermostat cover with three frequently used keys by the display. Pressing the Information **i** key will display the present settings and pressing the **▲** and **▼** keys changes the temperature. The thermostat display shows day, time, program period, temperature and system operation selection.

There is an individual key for each of the four time periods—

Morning —the time period you want the house at a comfortable temperature when you get up and while you get ready for work or school. (This will be a higher temperature during the heating season and a lower temperature during the cooling season.)

Daytime —the time period you can set for an energy-saving temperature while you are away at work or school. (This will be a lower temperature in the heating season and a higher temperature during the cooling season.)

Evening —the time period you want the house at a comfortable temperature for activities before bedtime. (Again, higher heat and lower cool.)

Night —the time period you can set for an energy-saving temperature while you are sleeping. (Again, lower heat and higher cool. Some people choose not to raise the cooling temperature for more comfortable sleeping.)

The personal programming table on page 21 may be helpful when planning your schedule of time and temperature settings. The thermostat default settings are in the parenthesis ().



Personal Programming Table

Period	Default Setting	Sunday (Sun)	Monday (Mon)	Tuesday (Tue)	Wednesday (Wed)	Thursday (Thu)	Friday (Fri)	Saturday (Sat)
Morning	Time (6:00 AM)							
	Heat ^a (70°F/21°C)							
	Cool ^b (78°F/25.5°C)							
Daytime	Time (8:00 AM)							
	Heat ^a (62°F/16.5°C)							
	Cool ^b (85°F/29.5°C)							
Evening	Time (6:00 PM)							
	Heat ^a (70°F/21°C)							
	Cool ^b (78°F/25.5°C)							
Night	Time (10:00 PM)							
	Heat ^a (62°F/16.5°C)							
	Cool ^b (82°F/28°C)							



^a Your heating setpoints cannot be set higher than 90°F (32°C) or lower than 40°F (4.5°C).

^b Your cooling setpoints cannot be set higher than 99°F (35°C) or lower than 45°F (7°C).

Setting the Current Day and Time

Press and release  then  until the current day is displayed. (Sun = Sunday, Mon = Monday, Tue = Tuesday, Wed = Wednesday, Thu = Thursday, Fri = Friday, Sat = Saturday.)

NOTE: On initial power up, 1:00 pm flashes on the display until you press a key.

Press  until the current time is displayed. (Tapping the  will advance the time in one hour increments.)

NOTE: If the current time is Daylight Savings Time, press  until DST is displayed.






Press  .


IMPORTANT

Always press the keys with your fingertip or similar blunt tool. Sharp instruments like pens and pencil points can damage the touchpad.






Programming the First Day

Start by programming the Morning time and temperature for any one day:

Press and release  then  until the desired day is displayed. Press  keys until the desired Morning time is displayed. (The program times are in fifteen minute intervals. Example: 8:00, 8:15, 8:30.) Press  or  key until the desired Morning temperature is displayed.


(The setpoint temperature range is 40 to 90°F (7 to 31°C) for heating and 45 to 99°F (9 to 37°C) for cooling.) Press  to switch to your other system temperature setpoint.

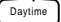NOTE: The program times are the same for both heating and cooling.

Press  or  until the other desired temperature setpoint is displayed. Press ,  or  and repeat the above steps for programming the rest of the day. The first day is now programmed.





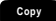
IMPORTANT

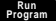Repeat all the above steps for each day of the week that has a different program than your first day. Refer to Copying a Day section to copy any program day to another.

Press  when all the days are programmed.

Copying a Day

NOTE: Your thermostat must be in the program mode to use the copy feature.


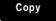



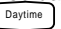


Press  then  to select the day to be copied if different from the day displayed. Press  then  until the day to be copied to is displayed. Press .

NOTE: "donE" will be displayed for two seconds and then the normal program display will be shown.

Repeat the above steps for all the desired days then press .

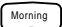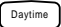Clearing Program Period

NOTE: Your thermostat must be in the program mode to use the clear feature.

Press , ,  or  .
Press  until the desired day is displayed. Press and hold ,  or  until the start time and temperature setting is cleared (approximately 3 seconds).



NOTE: Morning cannot be cleared.


Repeat the above steps for all the periods to be cleared then press  .

STEP 10. OPERATING YOUR THERMOSTAT

Setting Temporary Temperatures



Changing Temperature Setting Until The Next Program Period

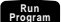Press  or  key until the desired temperature setpoint is displayed.

NOTE: Your temporary temperature setting is displayed for approximately 3 seconds. The setting is canceled when the next period starts or when  is pressed.


Changing Temperature Setting Indefinitely

Move the System switch to heat or cool.

Press **Hold Temp** then  or  key to change your setting, if desired. (The display changes from the setpoint to the room temperature after approximately 3 seconds.) Anytime you want to cancel the Hold, press **Run Program**.

Changing Temperature Setting Until A Designated Day And Period

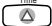

Move the System switch to heat or cool.

Press **Hold Temp** twice then  keys until the desired number of days is displayed

(1 to 255 days). (Example: 18 = Hold will override the daily programs for 18 days.)

Press , ,  or  to select the period your program will restart.

(Example: Evening = thermostat will stop the Hold at the Evening period start time.)

Press  or  key to adjust the temperature setting, if desired. (Example: Heat 54° = heating equipment will operate when the room temperature is below 54°F.)

NOTE: In this example, your thermostat uses the Hold setting for eighteen days and returns to the daily programs at the Evening period start time. Your heating temperature setting is 54°F. Only the heating temperature is used because the System is set for Heat.

IMPORTANT


If the Hold needs to be canceled before the designated time, press





to return to your program.




Using Daylight Savings Time Feature

This feature allows you to change in and out of Daylight Savings Time with a key press.

When  is pressed in the fall, the time will go back one hour. In the spring, the time will go ahead one hour and the display will show DST. See Setting the Current Day and Time section for initial setting instructions.

NOTE: Pressing  more than once within a five minute period will scroll you through various time options (Example: one hour earlier or later with or without DST). Pressing  six times in a five minute period will return you to your original settings.

Using Usage Feature

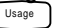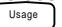
Press  once to display the minutes that the heating or cooling system has been operating for the current day. Press  a second time, within 10 seconds, to display the system operating time for the previous day (midnight to midnight). Press  a third time, within 10 seconds, to display the system operating time since the last time the usage function was cleared.

NOTE: Press  for 3 seconds to clear the usage function.


STEP 11. SETTING THE FAN AND SYSTEM SWITCHES

First set the fan switch.

Fan On: The fan runs continuously. Use for improved air circulation or for more efficient central air cleaning. (In a heat-only system, fan runs continuously only if fan relay is connected to the G thermostat terminal.)



Fan Auto: Normal setting for most homes. A single-speed fan turns on automatically with the air conditioner or furnace. A two-speed fan usually runs on high with the air conditioner and on low with the furnace.






Then set the system switch. The display will show which system is on: flame = heat and snowflake = cool.

Heat: The thermostat controls your heating system.

Off: Both the heating and air conditioning systems are off.

Cool: The thermostat controls your air conditioning system.



TROUBLESHOOTING GUIDE

IF ...	THEN...
Display will not come on.	<ul style="list-style-type: none">• Check that the batteries are installed correctly and fresh.• Check if the thermostat is mounted and latched on the wallplate—mount and latch the thermostat on the wallplate.
Temperature settings will not change (Example: cannot set the heating higher or the cooling lower).	<ul style="list-style-type: none">• Check that the temperature setpoints are:<ul style="list-style-type: none">— heating: 40 to 90°F (4.5 to 32°C)— cooling: 45 to 99°F (7 to 35°C).
Heating will not come on.	<ul style="list-style-type: none">• Check that heat setpoint is above room temperature.• Check if the circuit breaker is tripped—reset the circuit breaker.• Check if the system switch at the equipment is in the Off position—set to On position.• Wait five minutes for the system to respond.• Set system switch to Heat.

IF ...	THEN...
Cooling will not come on.	<ul style="list-style-type: none"> • Check that cool setpoint is below room temperature. • Check if the circuit breaker is tripped—reset the circuit breaker. • Check if the system switch at the equipment is in the Off position—set to On position. • Wait five minutes for the system to respond. • Set system switch to Cool.
System on indicator (flame=heat, snowflake=cool) is lit, but no warm or cool air is coming from the registers.	Wait five minutes after seeing the flame or snowflake and then check the registers. If no heat or cool air is present, see "Heating will not come on" or "Cooling will not come on" steps.

IF ...	THEN...
Display flashes during programming.	<ul style="list-style-type: none"> You have reached the temperature setting limit. The heating setting range is 40°F to 90°F (4.5°C to 32°C). The cooling setting range is 45°F to 99°F (7°C to 35°C).
Temperature change occurs at the wrong times.	<ul style="list-style-type: none"> Check the program times for the period in question. Be sure that AM and PM indications are correct. Make sure the current day and time are correct. Reprogram if necessary. If the thermostat is set for Smart Response control, the start times will occur before your programmed comfort periods.

Toll-free Customer Assistance

For all questions concerning this thermostat, please read and follow the instructions.

If additional assistance is needed, call Honeywell Customer Assistance toll-free at 1-800-468-1502, Monday-Friday, 7:00 a.m. - 5:30 p.m., Central time.

Before you call, please have the following information available—thermostat model number and date code, type of heating/cooling

system (e.g., hot water, warm air, oil, gas, etc.), and number of wires connected to the thermostat.

NOTICE: This equipment is a Class B digital apparatus, which complies with Canadian Radio Interference Regulations, CRC c.1374.

LIMITED ONE-YEAR WARRANTY

Honeywell warrants this product, excluding battery, to be free from defects in the workmanship or materials, under normal use and service, for a period of one (1) year from the date of purchase by the consumer. If, at any time during the warranty period, the product is defective or malfunctions, Honeywell shall repair or replace it (at Honeywell's option) within a reasonable period of time.

If the product is defective,

- (i) return it, with a bill of sale or other dated proof of purchase, to the retailer from which you purchased it, or
- (ii) package it carefully, along with proof of purchase (including date of purchase) and a short description of the malfunction, and mail it, postage prepaid, to the following address:

Honeywell Inc.
Return Goods Department
1050 Berkshire Lane
Plymouth, MN 55441-4437

in Canada: Honeywell Limited/Honeywell Limitee
Product Services ON30
155 Gordon Baker Road
North York, Ontario M2H 3N7

This warranty does not cover removal or reinstallation costs. This warranty shall not apply if it is shown by Honeywell that the defect or malfunction was caused by damage which occurred while the product was in the possession of a consumer.

Honeywell's sole responsibility shall be to repair or replace the product within the terms stated above. HONEYWELL SHALL NOT BE LIABLE FOR ANY LOSS OR DAMAGE OF ANY KIND, INCLUDING ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING, DIRECTLY OR INDIRECTLY FROM ANY BREACH OF ANY WARRANTY, EXPRESS OR IMPLIED, OR ANY OTHER FAILURE OF THIS PRODUCT. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you.

THIS WARRANTY IS THE ONLY EXPRESS WARRANTY HONEYWELL MAKES ON THIS PRODUCT. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED TO THE ONE YEAR DURATION OF THIS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

If you have any questions concerning this warranty, please write our Customer Assistance Department, Honeywell Inc., 1885 Douglas Dr. N., Golden Valley, MN 55422-3992, or call 1-800-468-1502, Monday-Friday, 7:00 a.m. to 5:30 p.m., Central time. In Canada, write Retail Products ON30 Honeywell Limited/Honeywell Limitee, 155 Gordon Baker Road, North York, Ontario M2H 3N7.

Home and Building Control

Honeywell Inc.
Honeywell Plaza
P.O. Box 524
Minneapolis, MN 55408-0524

Home and Building Control

Honeywell Limited-Honeywell Limitée
155 Gordon Baker Road
North York, Ontario
M2H 3N7

Honeywell

